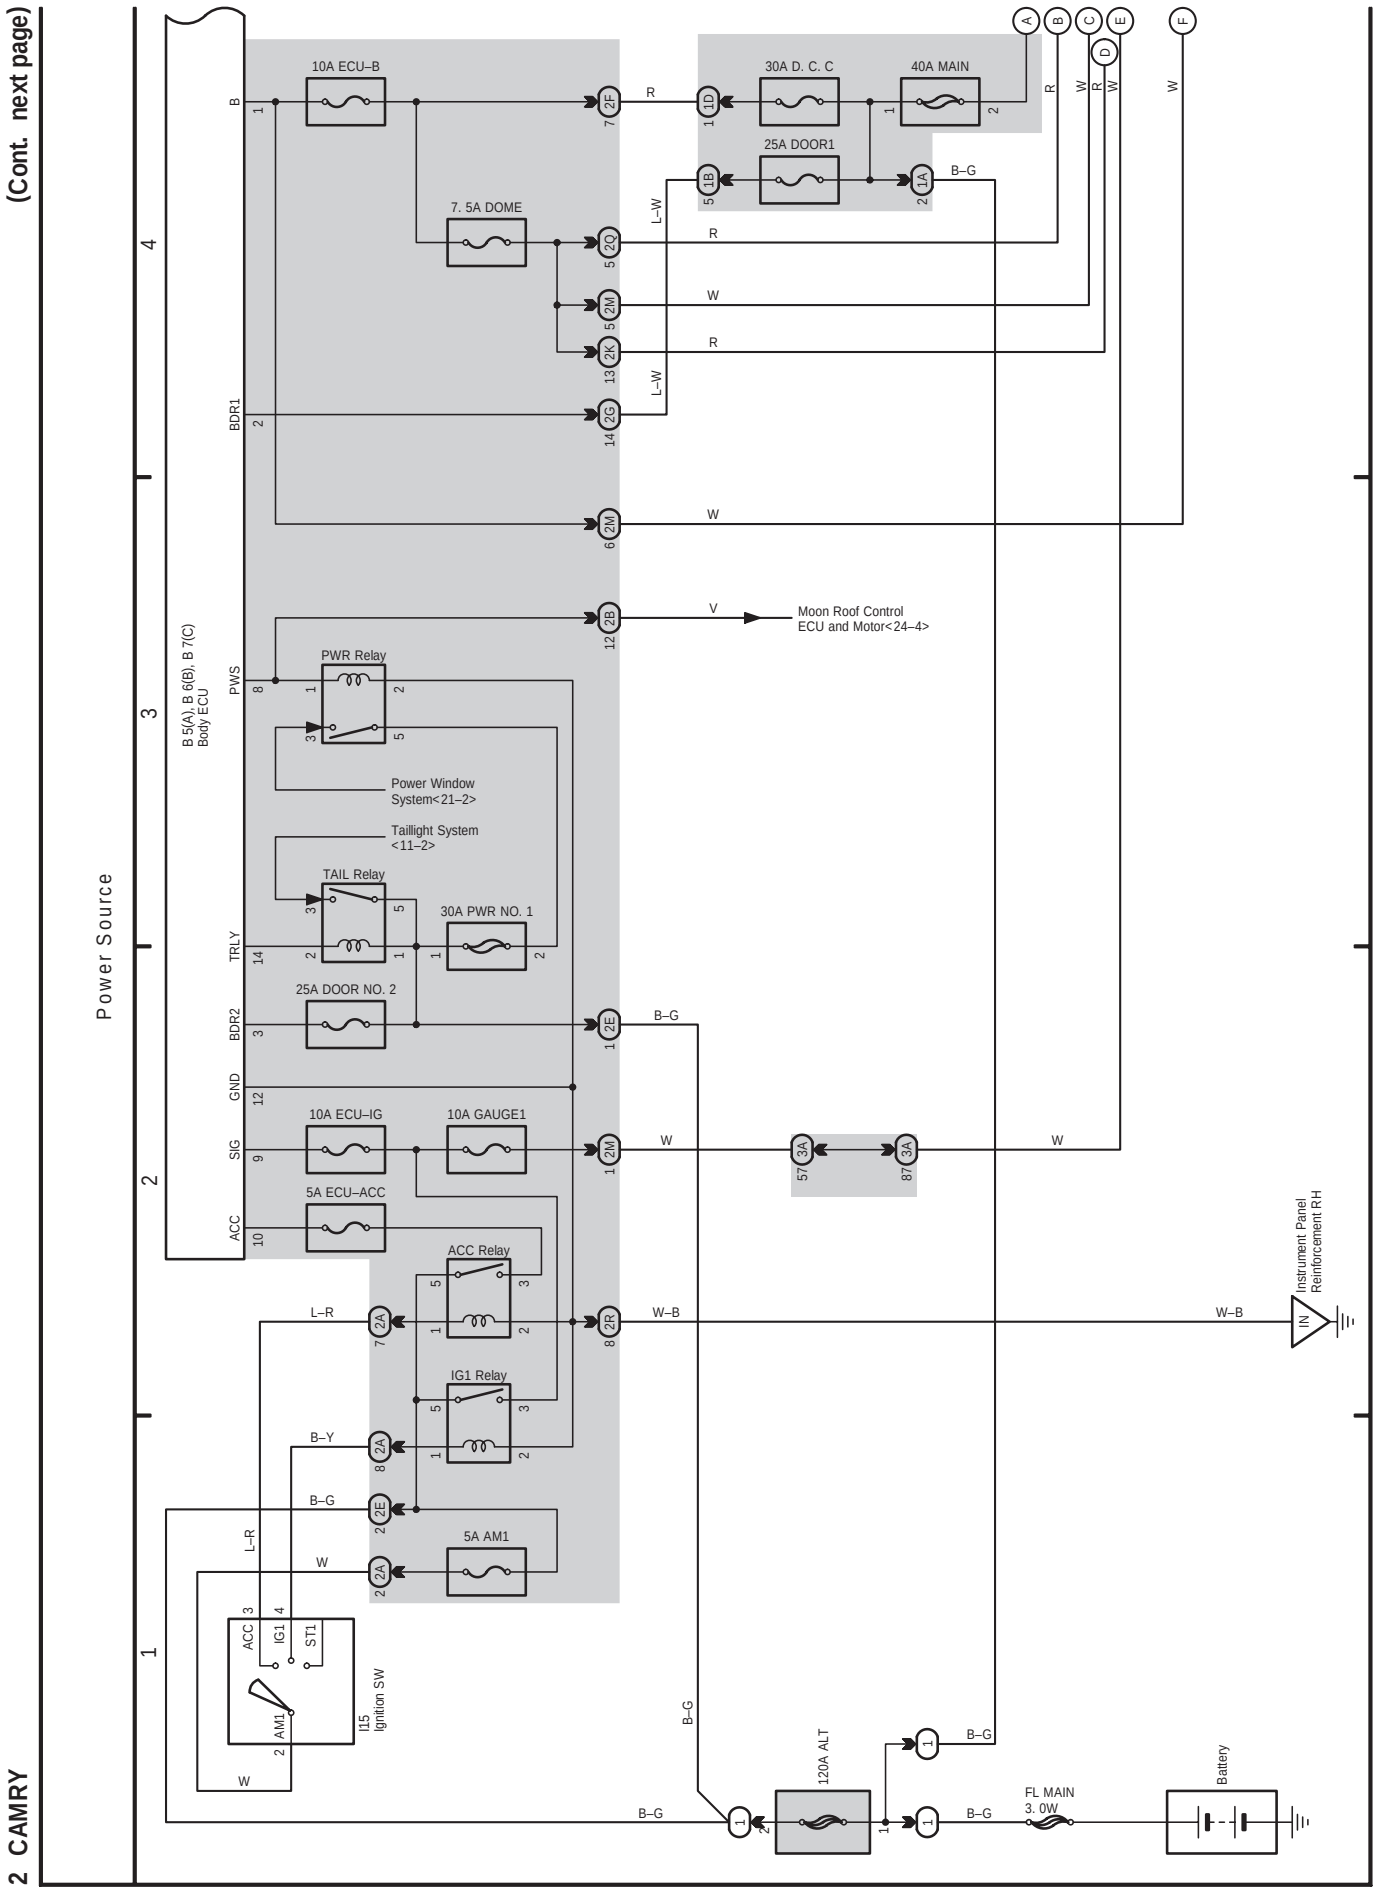
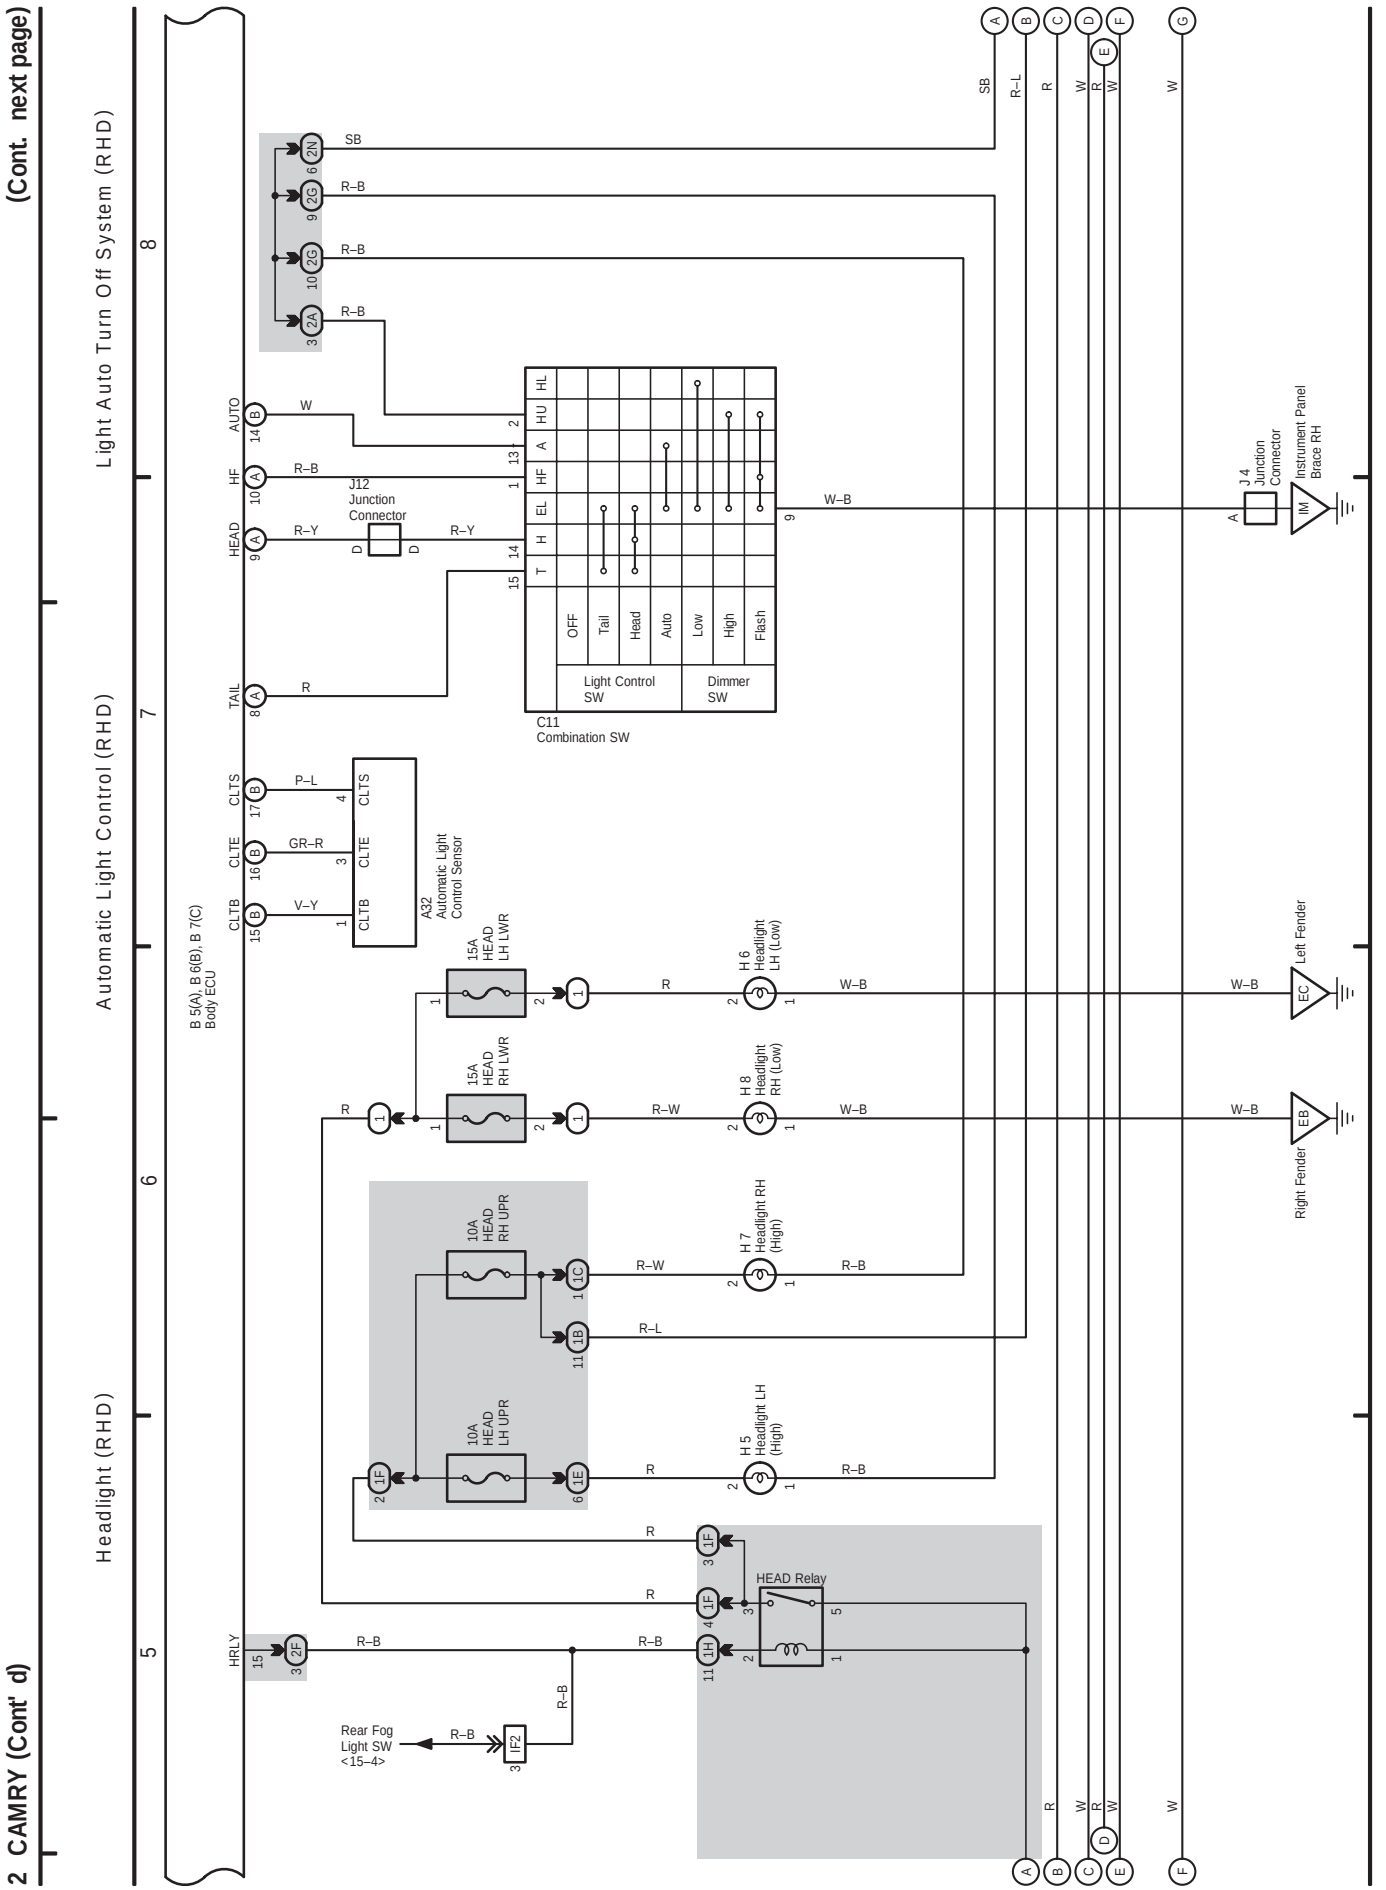
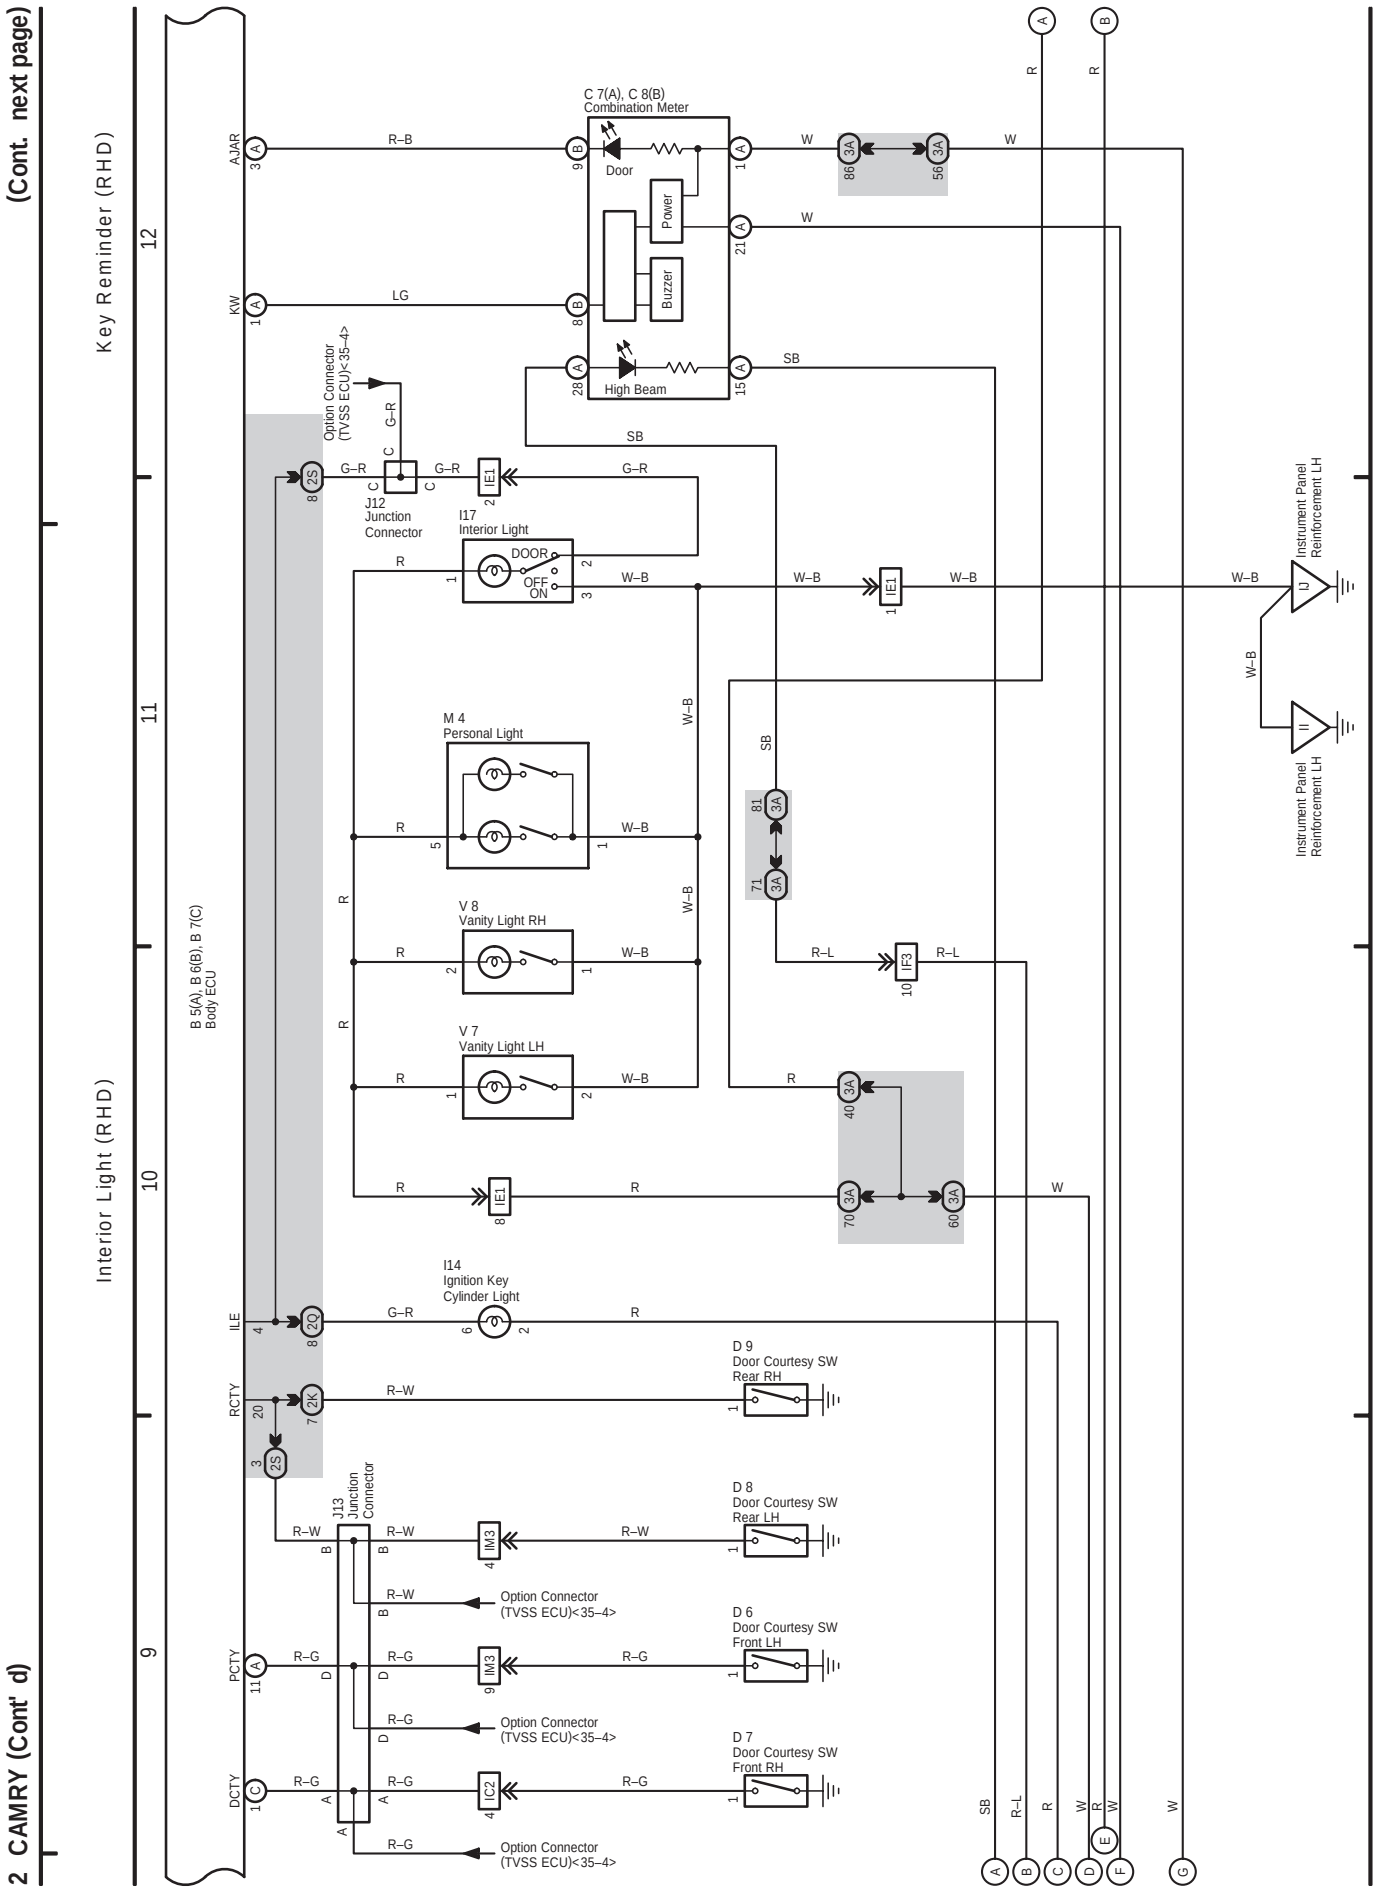
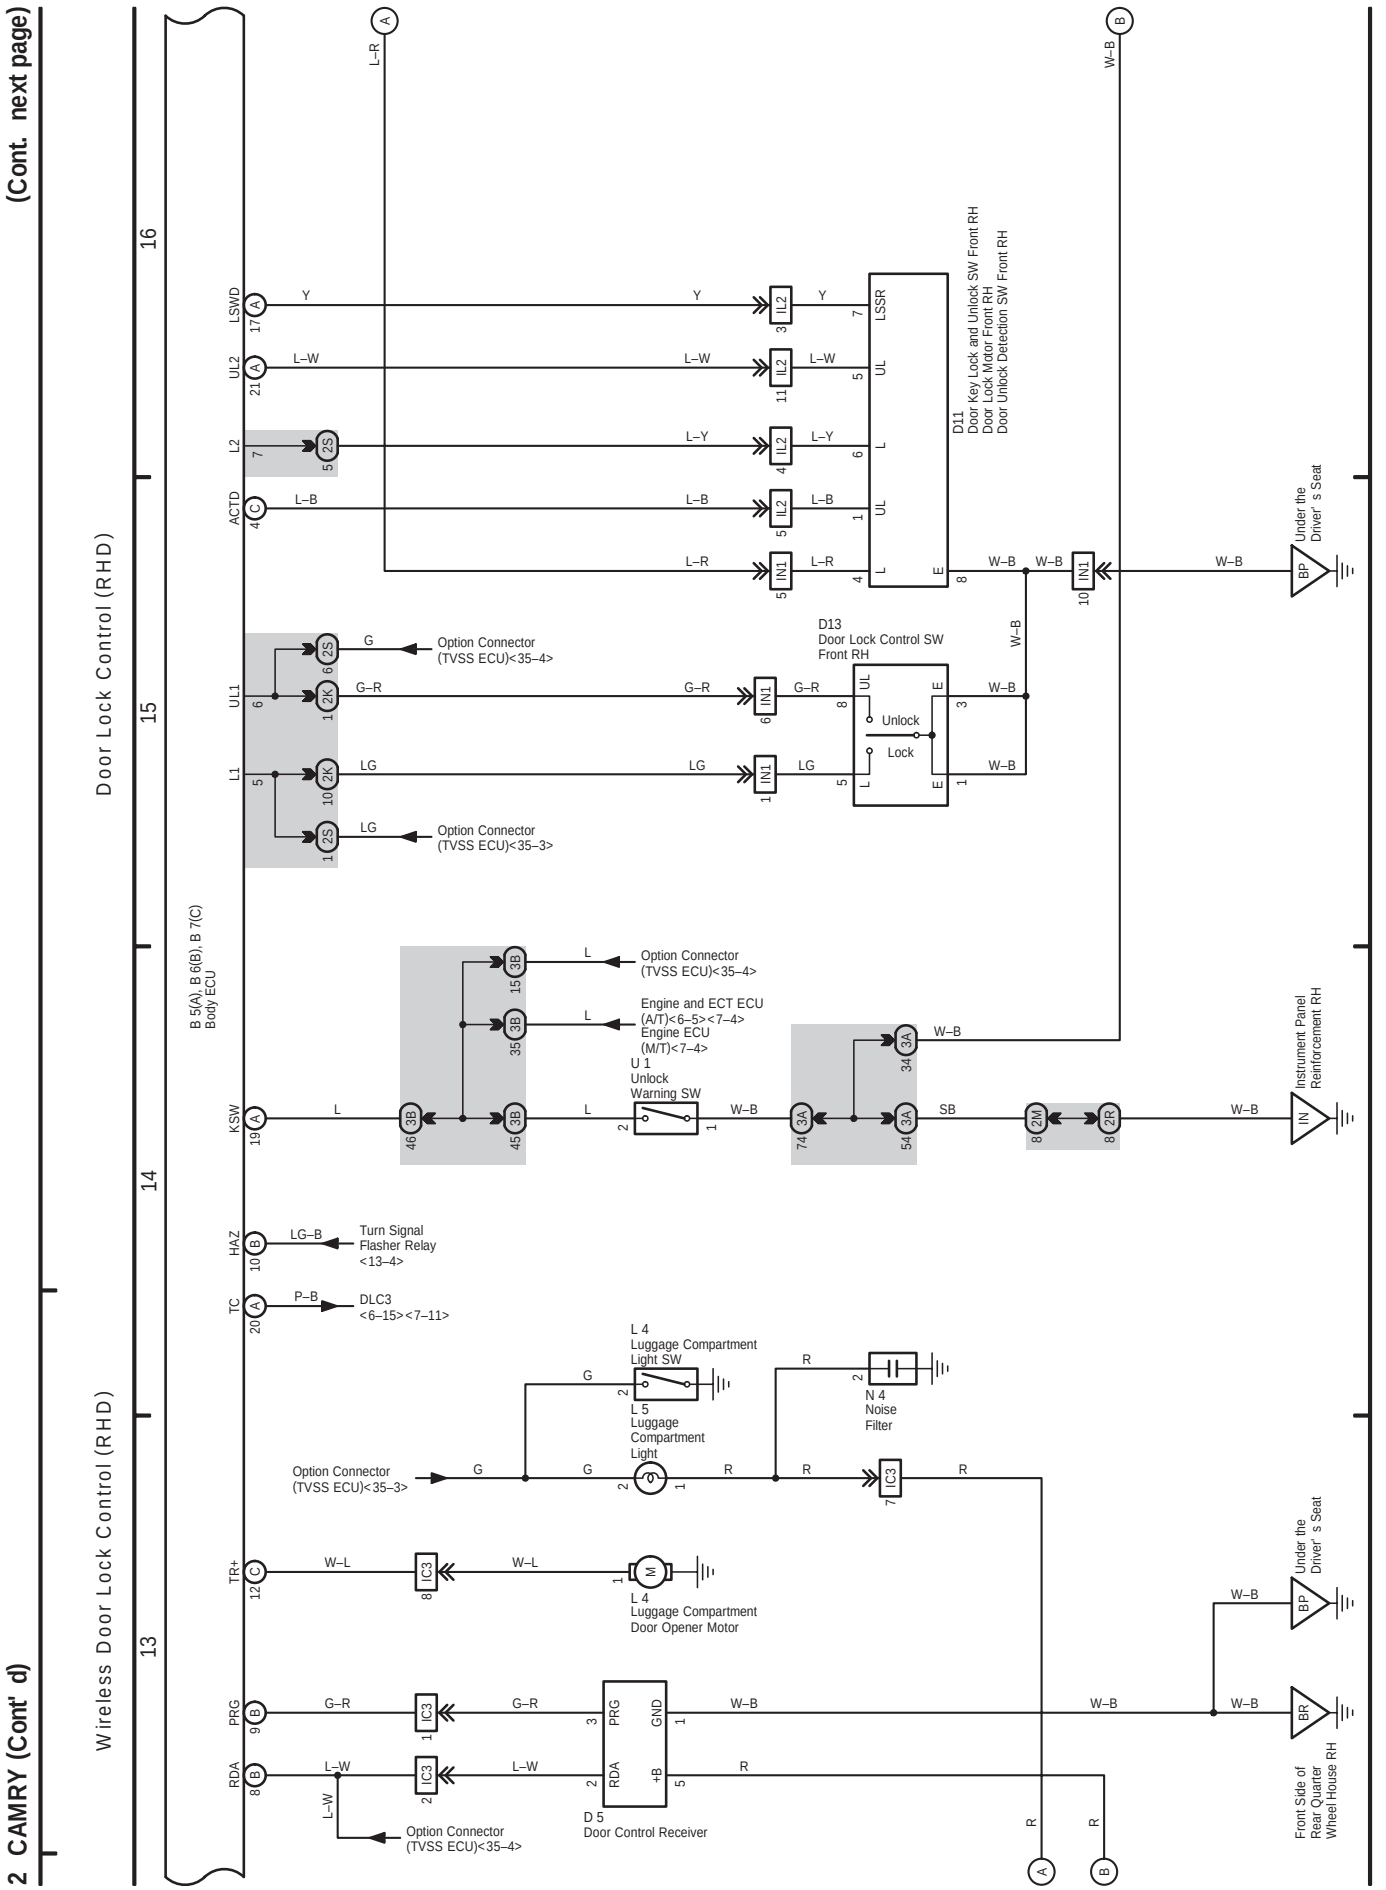
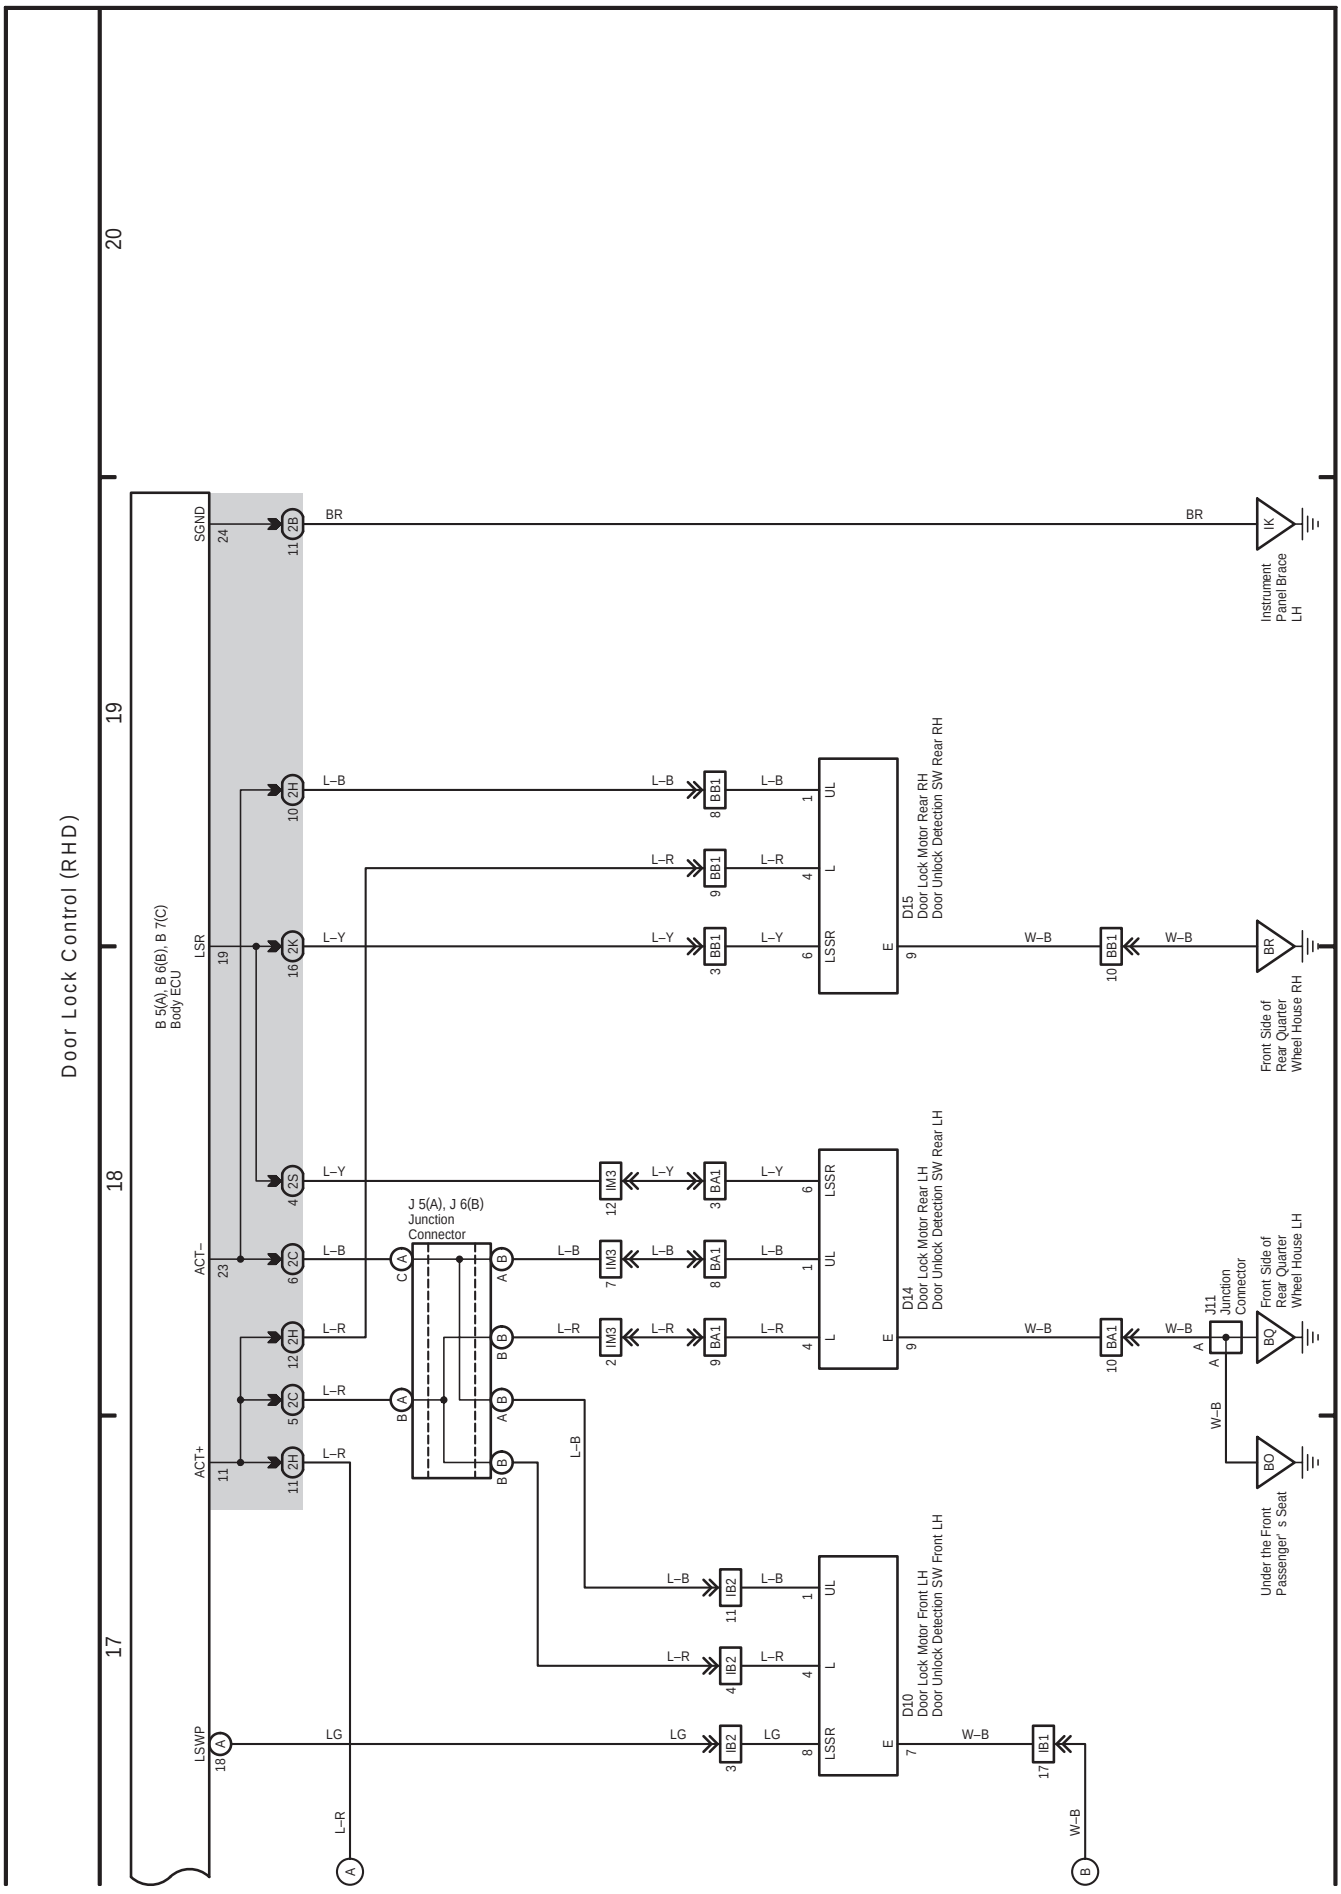

(Cont. next page)
Power Source
2 CAMRY
10A ECU–B
30A D. C. C
40A MAIN
25A DOOR1
7. 5A DOME
PWR Relay
Power Window System<21–2>
Taillight System <11–2>
TAIL Relay
30A PWR NO. 1
25A DOOR NO. 2
10A ECU–IG
10A GAUGE1
5A ECU–ACC
ACC Relay
IG1 Relay
5A AM1
I15 Ignition SW
120A ALT
FL MAIN 3. 0W
Battery
Moon Roof Control ECU and Motor<24–4>
Instrument Panel Reinforcement RH
B 5(A), B 6(B), B 7(C) Body ECU


(Cont. next page)
2 CAMRY (Cont' d)
Headlight (RHD)
Automatic Light Control (RHD)
Light Auto Turn Off System (RHD)
5
6
7
8
B 5(A), B 6(B), B 7(C)
Body ECU
HRLY
AUTO
HF
HEAD
TAIL
CLTS
CLTE
CLTB
J12
Junction
Connector
C11
Combination SW
Light Control
SW
Dimmer
SW
OFF
Tail
Head
Auto
Low
High
Flash
A32
Automatic Light
Control Sensor
15A
HEAD
LH LWR
15A
HEAD
RH LWR
10A
HEAD
RH UPR
10A
HEAD
LH UPR
H 6
Headlight
LH (Low)
H 8
Headlight
RH (Low)
H 7
Headlight RH
(High)
H 5
Headlight LH
(High)
HEAD Relay
Rear Fog
Light SW
<15–4>
J 4
Junction
Connector
Instrument Panel
Brace RH
Left Fender
Right Fender


(Cont. next page)
2 CAMRY (Cont' d)
Key Reminder (RHD)
Interior Light (RHD)
12
11
10
9
C 7(A), C 8(B)
Combination Meter
Door
Power
Buzzer
High Beam
AJAR
KW
Option Connector
(TVSS ECU)<35–4>
J12
Junction
Connector
I17
Interior Light
DOOR
OFF
ON
M 4
Personal Light
V 8
Vanity Light RH
V 7
Vanity Light LH
B 5(A), B 6(B), B 7(C)
Body ECU
I14
Ignition Key
Cylinder Light
ILE
RCTY
PCTY
DCTY
J13
Junction
Connector
D 9
Door Courtesy SW
Rear RH
D 8
Door Courtesy SW
Rear LH
D 6
Door Courtesy SW
Front LH
D 7
Door Courtesy SW
Front RH
Instrument Panel
Reinforcement LH
Instrument Panel
Reinforcement LH
R–B
LG
G–R
W–B
R–W
R–G
R–L
SB
W
R


2 CAMRY (Cont' d)
(Cont. next page)
Wireless Door Lock Control (RHD)
Door Lock Control (RHD)
13
14
15
16
B 5(A), B 6(B), B 7(C)
Body ECU
LSWD
UL2
L2
ACTD
UL1
L1
KSW
HAZ
TC
TR+
PRG
RDA
D11
Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
D13
Door Lock Control SW
Front RH
Unlock
Lock
Option Connector
(TVSS ECU)<35–4>
Option Connector
(TVSS ECU)<35–3>
Engine and ECT ECU
(A/T)<6–5><7–4>
Engine ECU
(M/T)<7–4>
U 1
Unlock
Warning SW
Turn Signal
Flasher Relay
<13–4>
DLC3
<6–15><7–11>
L 4
Luggage Compartment
Light SW
L 5
Luggage
Compartment
Light
N 4
Noise
Filter
L 4
Luggage Compartment
Door Opener Motor
D 5
Door Control Receiver
Under the
Driver' s Seat
Instrument Panel
Reinforcement RH
Front Side of
Rear Quarter
Wheel House RH


2 CAMRY (Cont' d)
Door Lock Control (RHD)
20
19
18
17
B 5(A), B 6(B), B 7(C)
Body ECU
SGND
LSR
ACT–
ACT+
LSWP
J 5(A), J 6(B)
Junction
Connector
D15
Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
D14
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
D10
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
J11
Junction
Connector
Instrument
Panel Brace
LH
Front Side of
Rear Quarter
Wheel House RH
Front Side of
Rear Quarter
Wheel House LH
Under the Front
Passenger' s Seat
BR
L–B
L–R
L–Y
W–B
LG