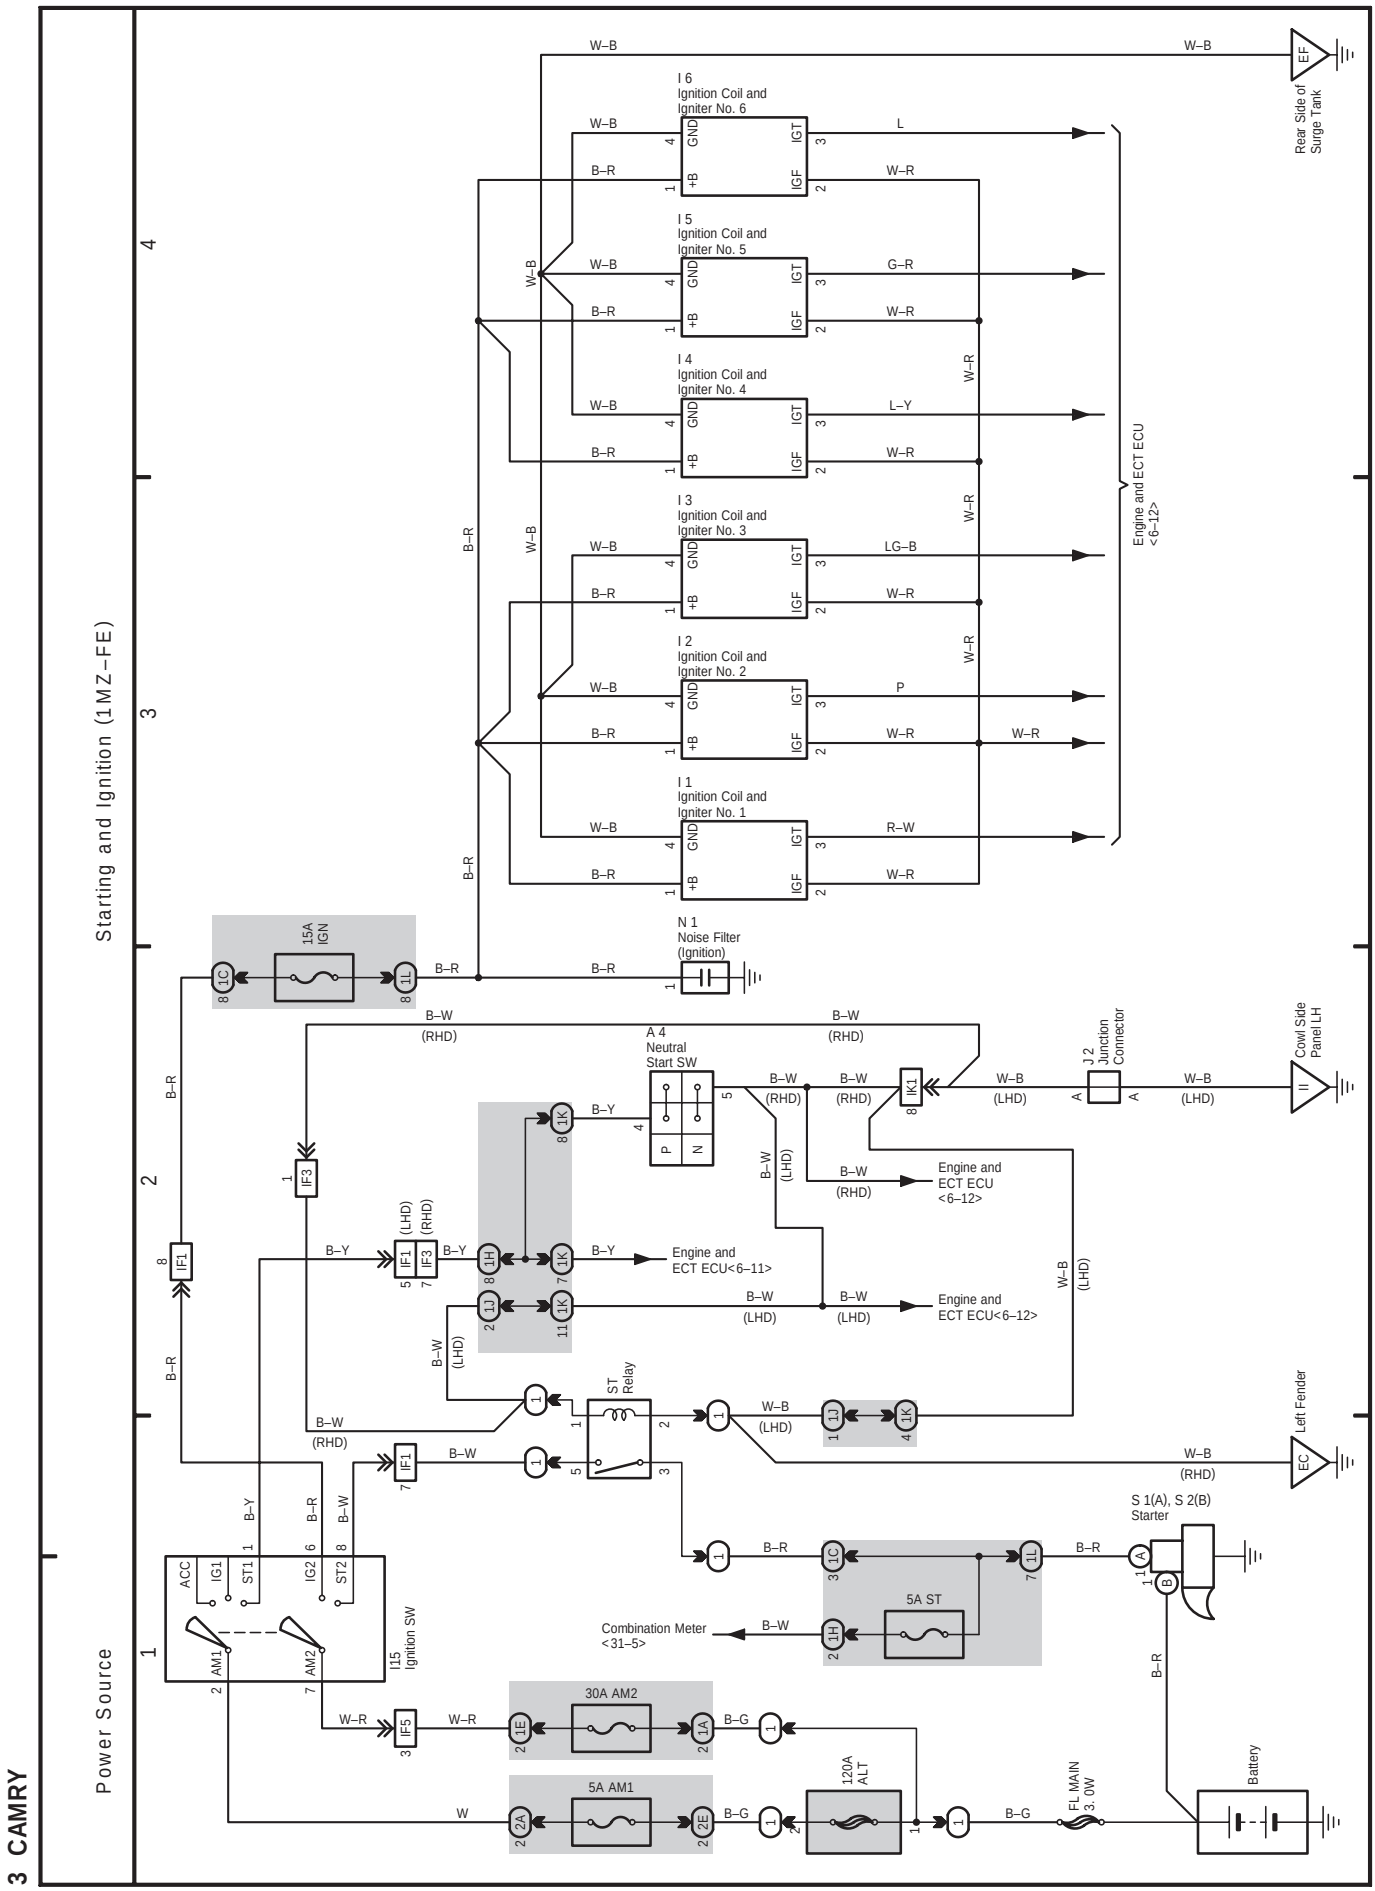

3 CAMRY
Power Source
Starting and Ignition (1MZ–FE)
I 6 Ignition Coil and Igniter No. 6
I 5 Ignition Coil and Igniter No. 5
I 4 Ignition Coil and Igniter No. 4
I 3 Ignition Coil and Igniter No. 3
I 2 Ignition Coil and Igniter No. 2
I 1 Ignition Coil and Igniter No. 1
Engine and ECT ECU <6–12>
N 1 Noise Filter (Ignition)
15A IGN
A 4 Neutral Start SW
J 2 Junction Connector
Cowl Side Panel LH
Rear Side of Surge Tank
Engine and ECT ECU <6–12>
Engine and ECT ECU<6–11>
Engine and ECT ECU<6–12>
ST Relay
Left Fender
S 1(A), S 2(B) Starter
I15 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
5A ST
Combination Meter <31–5>
30A AM2
5A AM1
120A ALT
FL MAIN 3. 0W
Battery