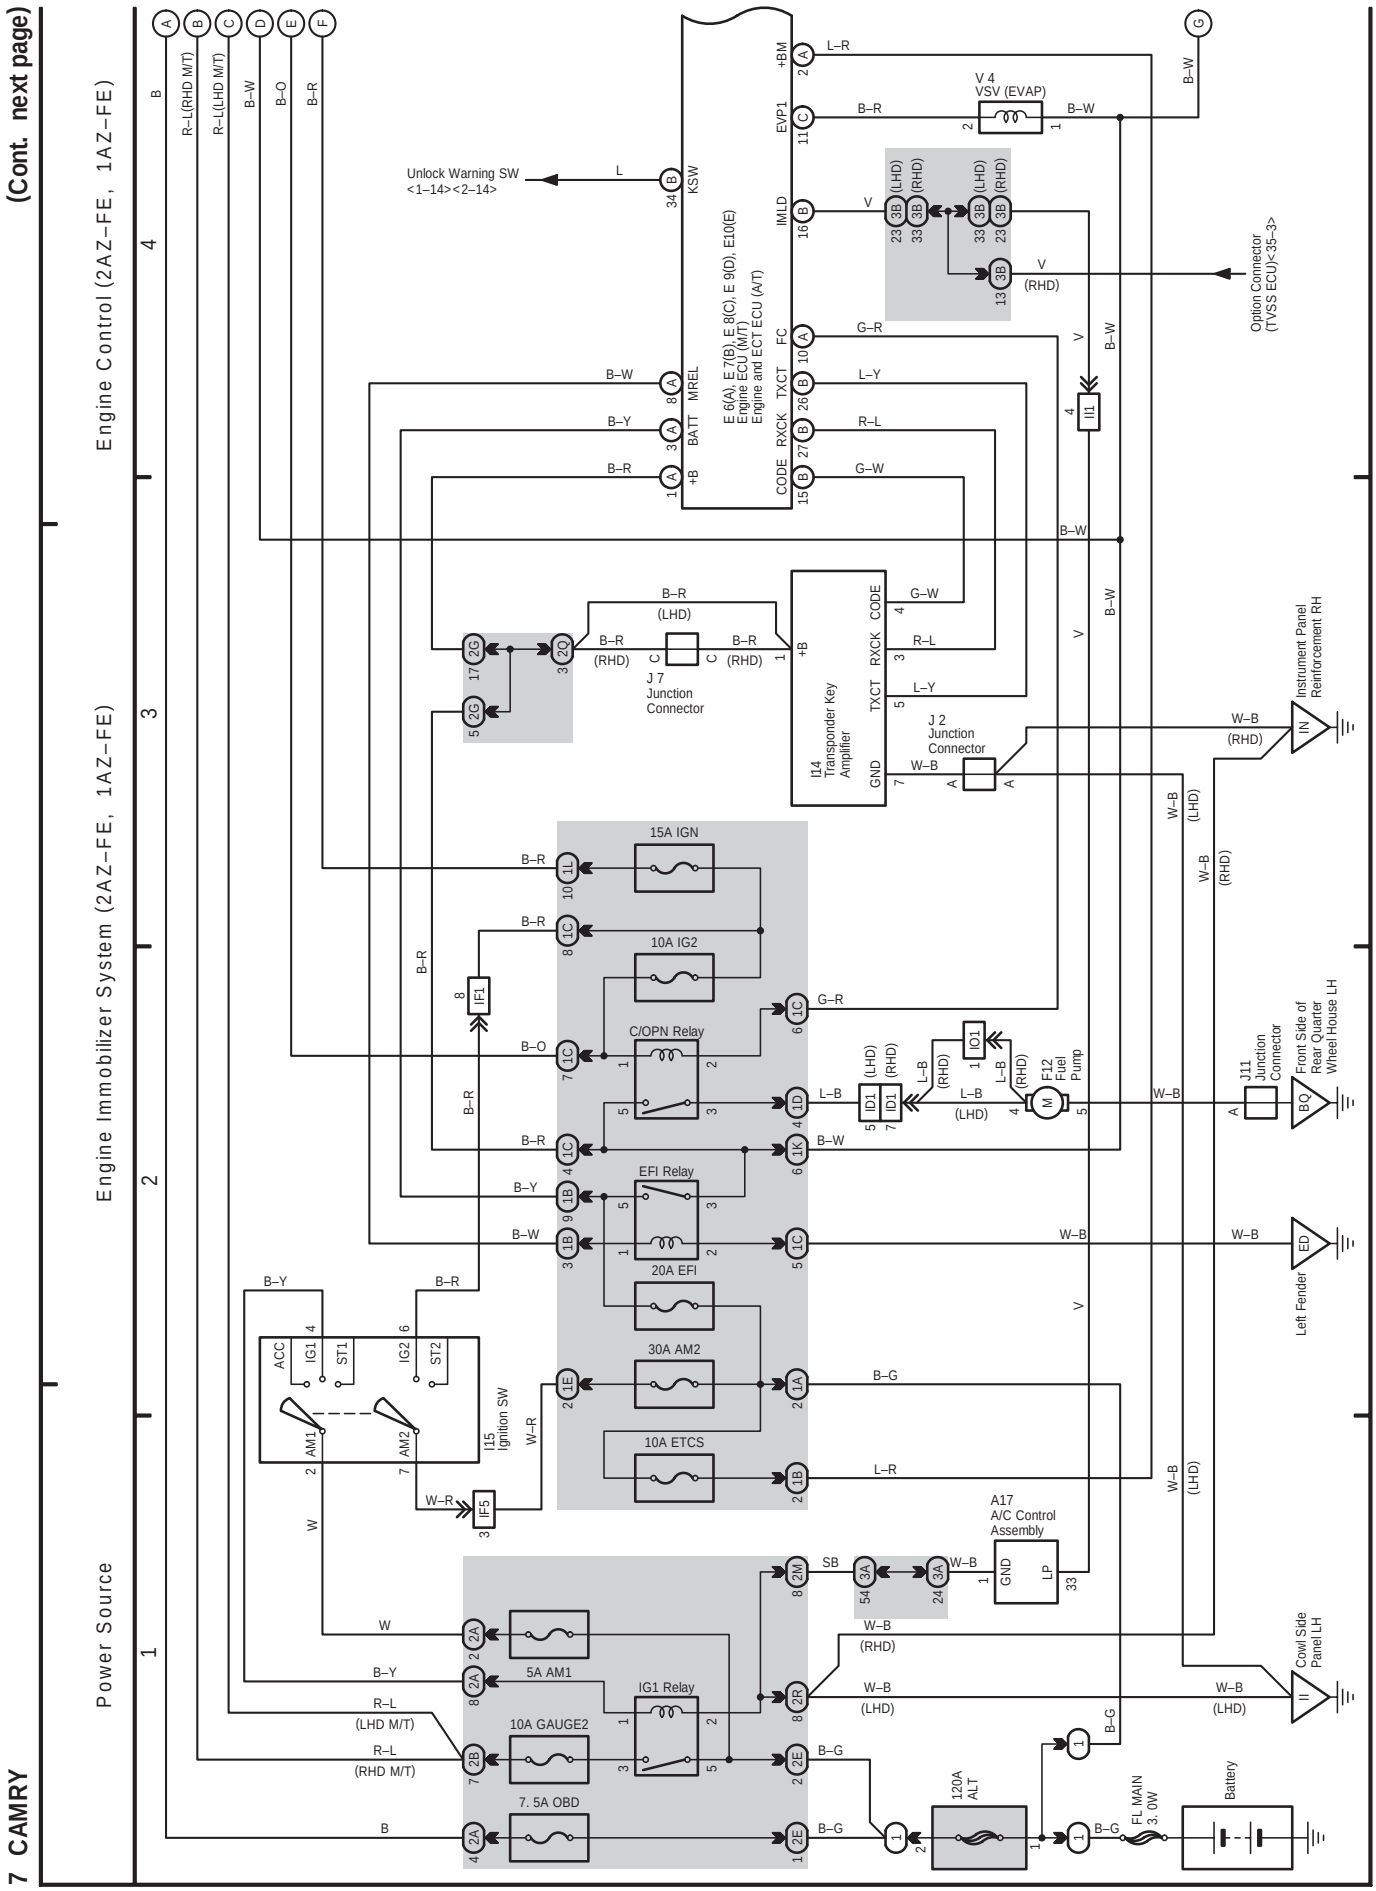
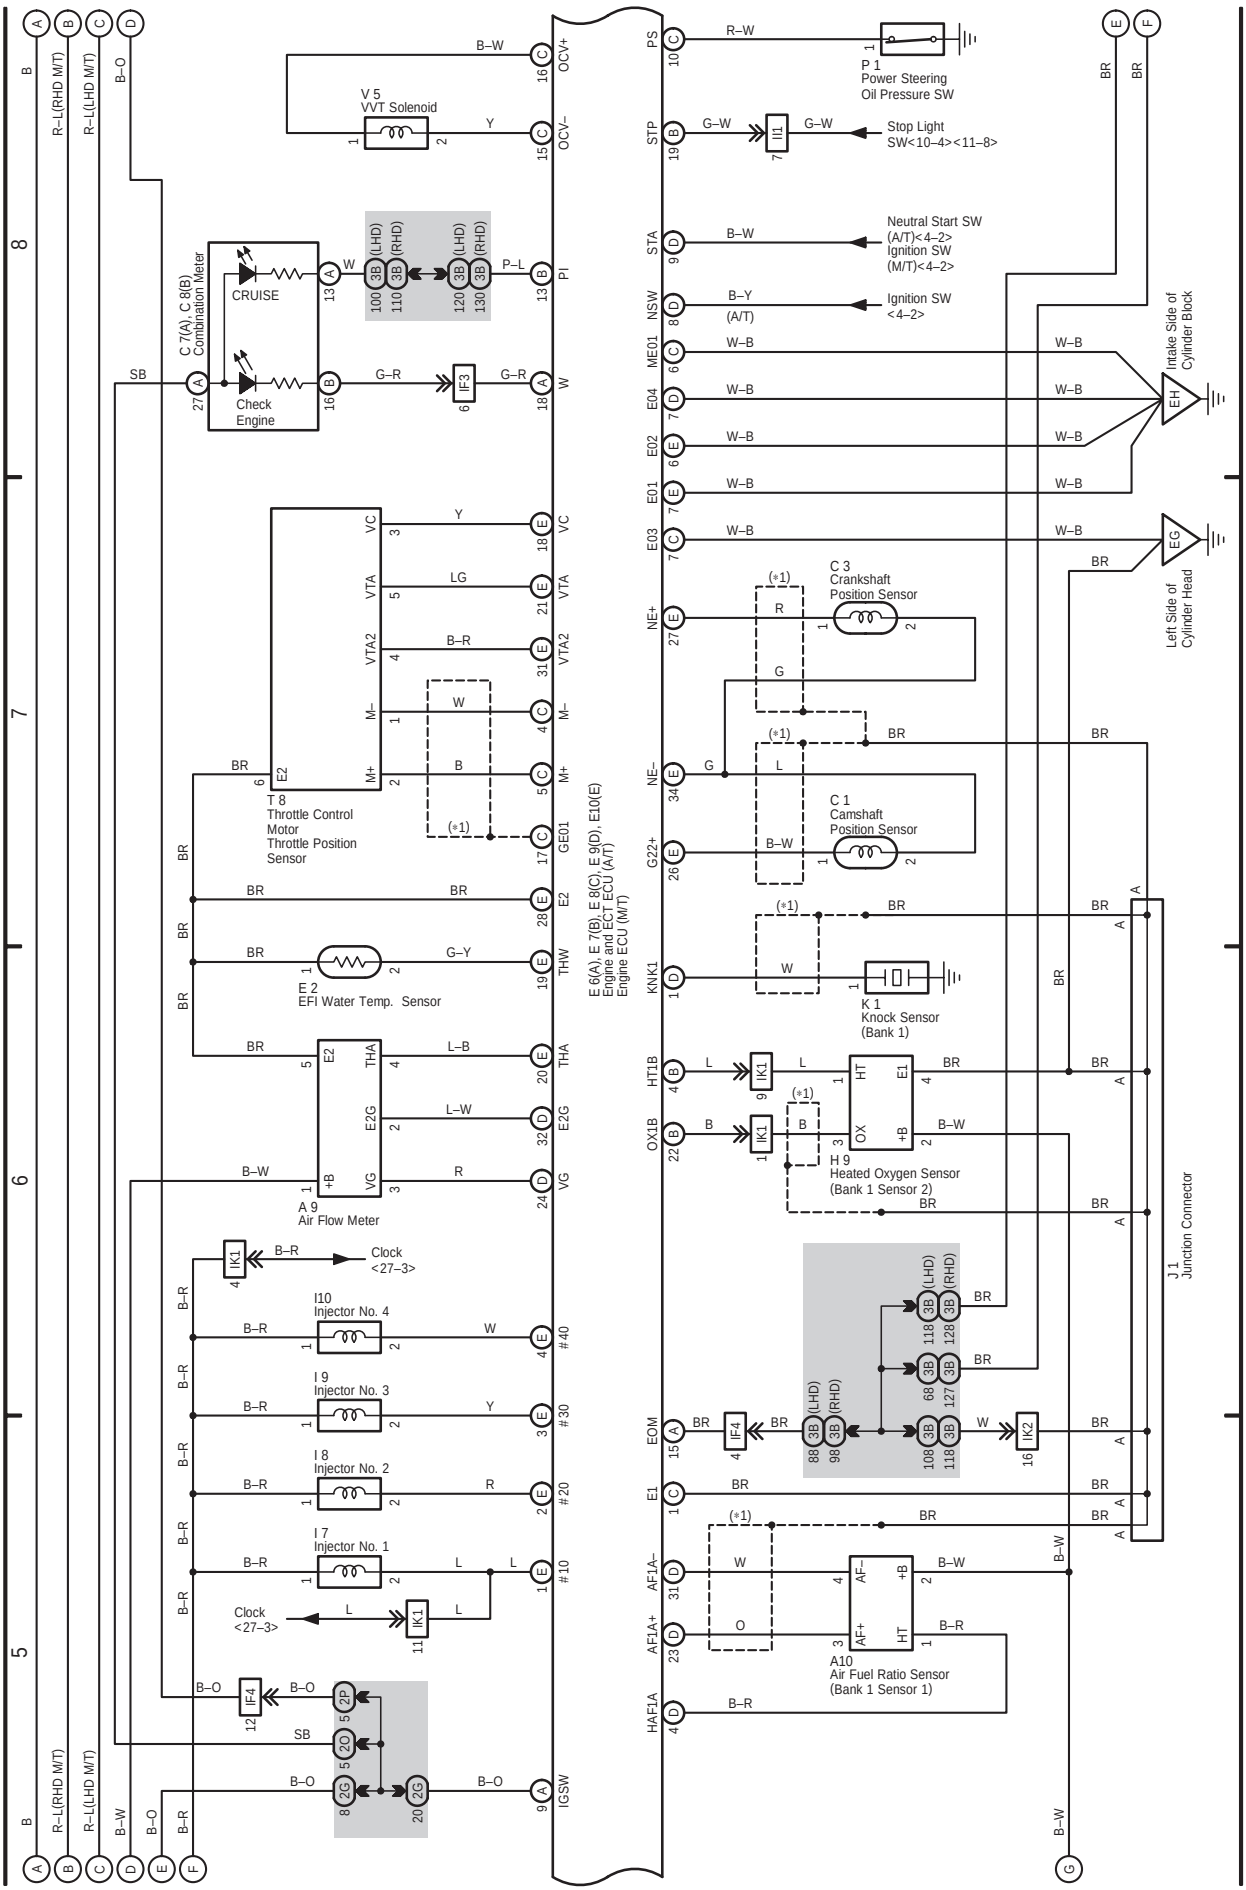
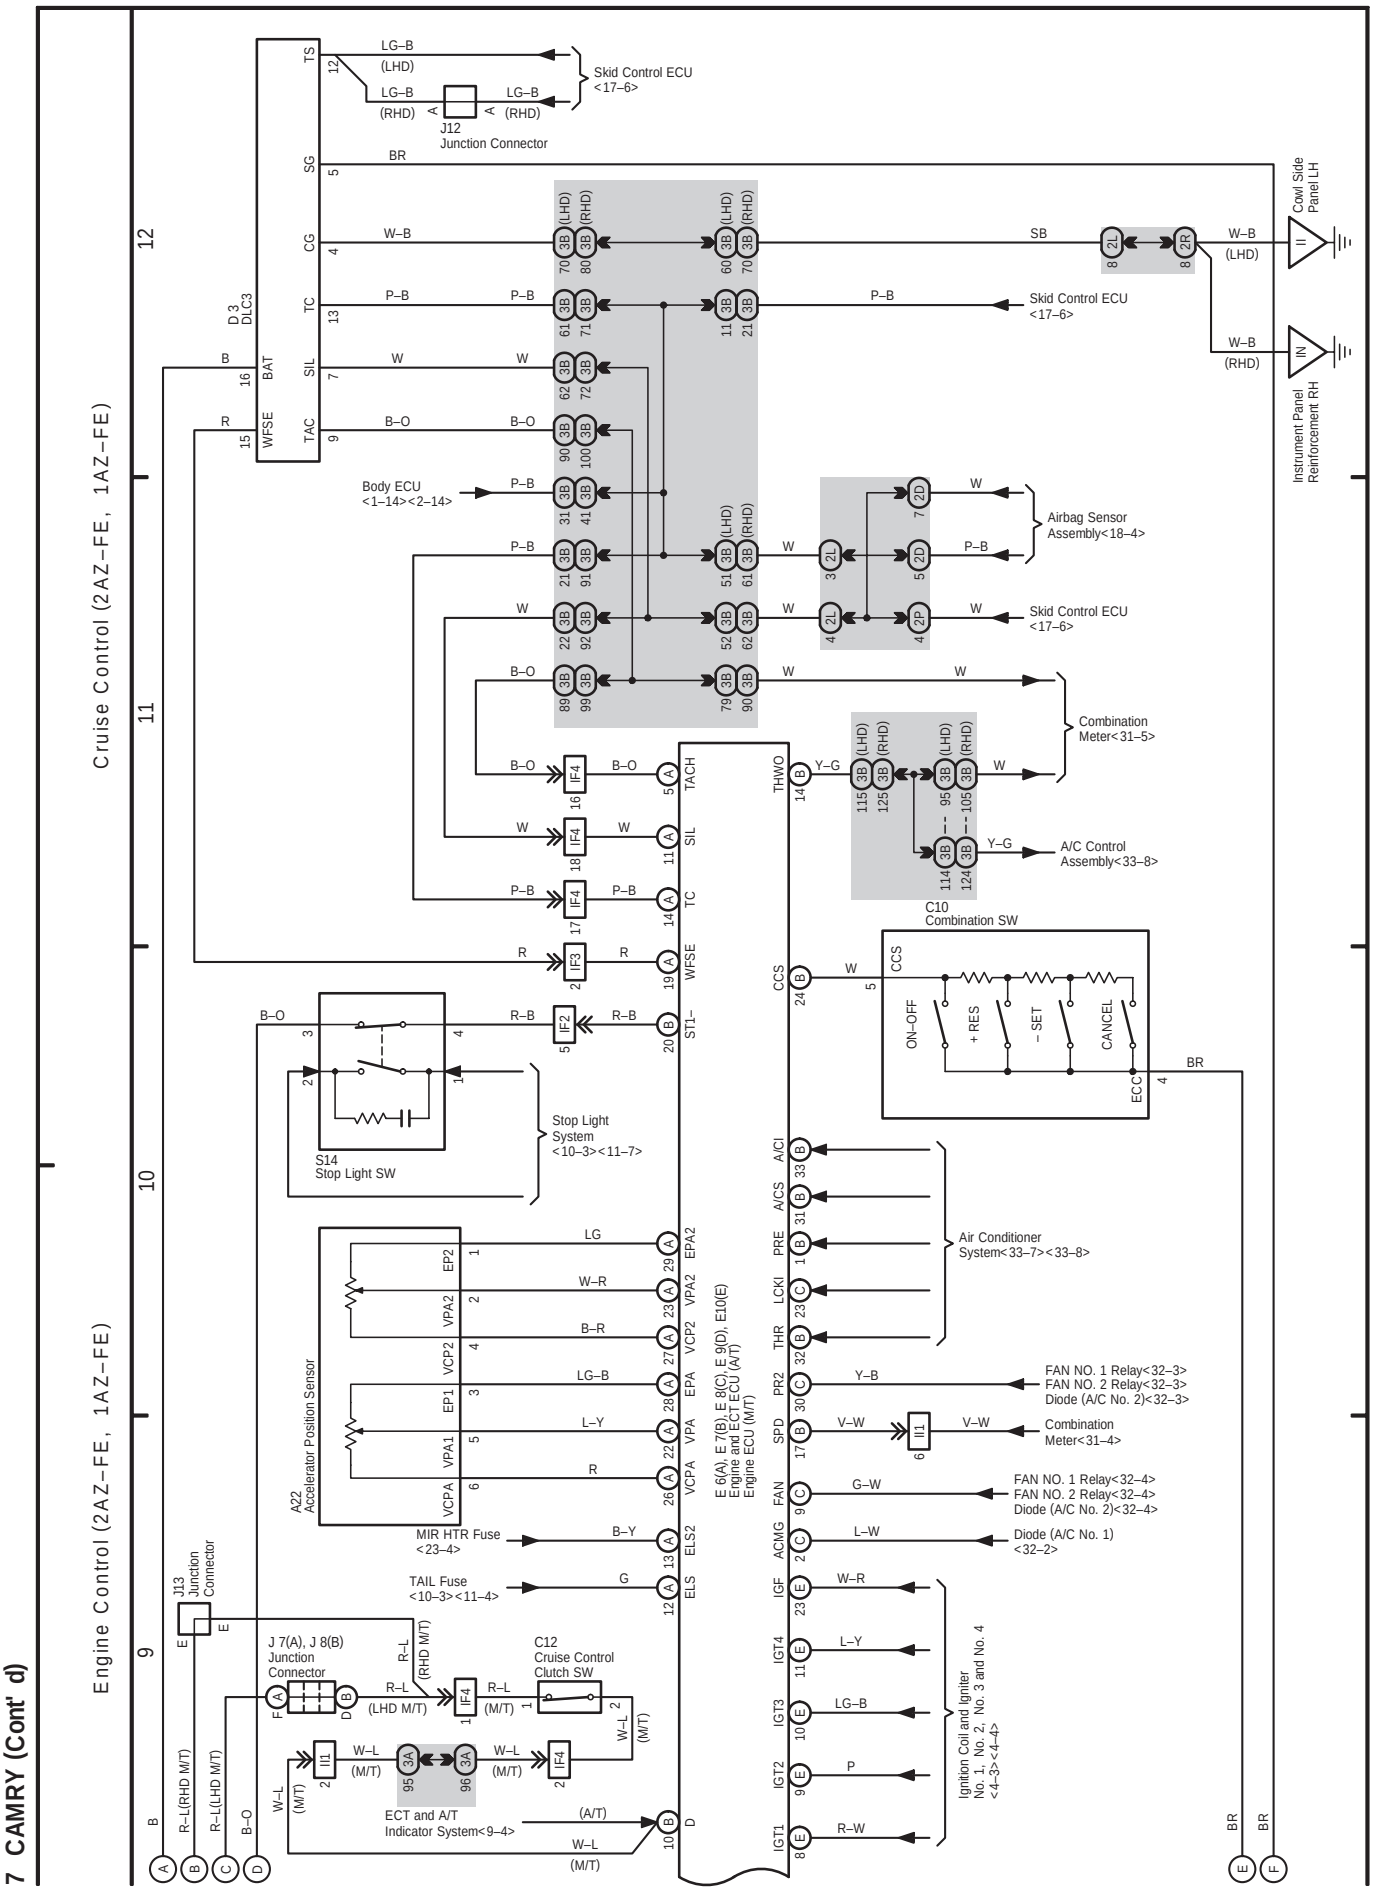

(Cont. next page)
Power Source
Engine Immobilizer System (2AZ–FE, 1AZ–FE)
Engine Control (2AZ–FE, 1AZ–FE)
7 CAMRY
Unlock Warning SW
<1–14><2–14>
E 6(A), E 7(B), E 8(C), E 9(D), E10(E)
Engine ECU (M/T)
Engine and ECT ECU (A/T)
V 4
VSV (EVAP)
Option Connector
(TVSS ECU)<35–3>
J 7
Junction
Connector
J 2
Junction
Connector
I14
Transponder Key
Amplifier
Instrument Panel
Reinforcement RH
Front Side of
Rear Quarter
Wheel House LH
J11
Junction
Connector
Left Fender
Cowl Side
Panel LH
15A IGN
10A IG2
C/OPN Relay
EFI Relay
20A EFI
30A AM2
10A ETCS
IG1 Relay
5A AM1
10A GAUGE2
7. 5A OBD
I15
Ignition SW
A17
A/C Control
Assembly
F12
Fuel
Pump
120A
ALT
FL MAIN
3. 0W
Battery

7 CAMRY (Cont' d)

(Cont. next page)




Cruise Control (2AZ–FE, 1AZ–FE)
Engine Control (2AZ–FE, 1AZ–FE)
Skid Control ECU <17–6>
J12 Junction Connector
Cowl Side Panel LH
Instrument Panel Reinforcement RH
D3 DLC3
Body ECU <1–14><2–14>
Airbag Sensor Assembly<18–4>
Combination Meter<31–5>
A/C Control Assembly<33–8>
C10 Combination SW
ON–OFF
+ RES
– SET
CANCEL
Stop Light System <10–3><11–7>
S14 Stop Light SW
A22 Accelerator Position Sensor
E 6(A), E 7(B), E 8(C), E 9(D), E10(E) Engine and ECT ECU (A/T) Engine ECU (M/T)
Air Conditioner System<33–7><33–8>
FAN NO. 1 Relay<32–3>
FAN NO. 2 Relay<32–3>
Diode (A/C No. 2)<32–3>
Combination Meter<31–4>
FAN NO. 1 Relay<32–4>
FAN NO. 2 Relay<32–4>
Diode (A/C No. 2)<32–4>
Diode (A/C No. 1) <32–2>
MIR HTR Fuse <23–4>
TAIL Fuse <10–3><11–4>
J13 Junction Connector
J 7(A), J 8(B) Junction Connector
C12 Cruise Control Clutch SW
ECT and A/T Indicator System<9–4>
Ignition Coil and Igniter No. 1, No. 2, No. 3 and No. 4 <4–3><4–4>
7 CAMRY (Cont' d)