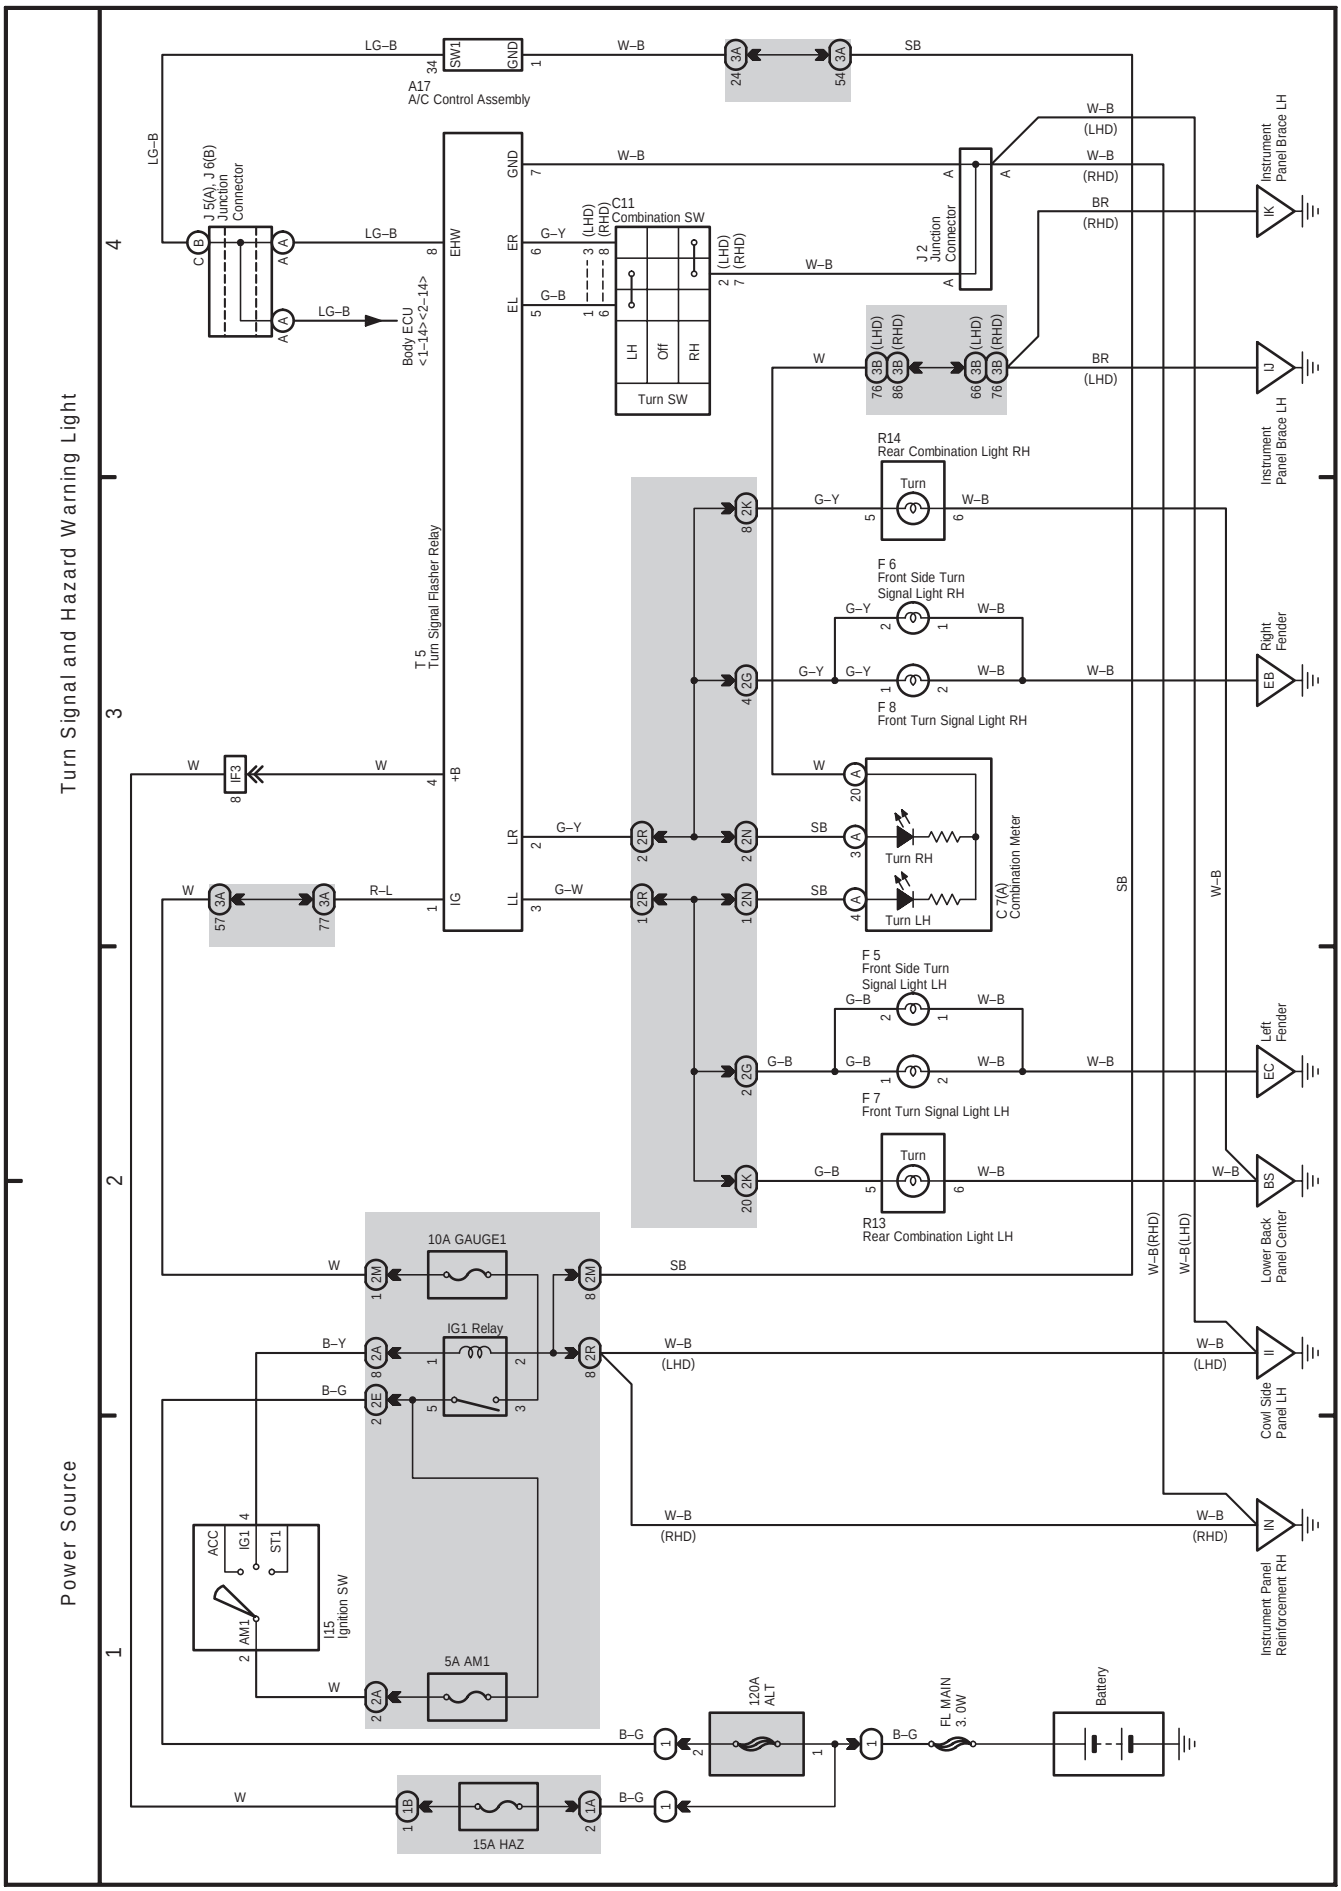

Turn Signal and Hazard Warning Light
Power Source
A17
A/C Control Assembly
J 5(A), J 6(B)
Junction
Connector
Body ECU
<1–14><2–14>
C11
Combination SW
Turn SW
LH
Off
RH
J 2
Junction
Connector
T 5
Turn Signal Flasher Relay
Instrument
Panel Brace LH
R14
Rear Combination Light RH
F 6
Front Side Turn
Signal Light RH
F 8
Front Turn Signal Light RH
Right
Fender
C 7(A)
Combination Meter
Turn RH
Turn LH
F 5
Front Side Turn
Signal Light LH
F 7
Front Turn Signal Light LH
Left
Fender
R13
Rear Combination Light LH
Lower Back
Panel Center
10A GAUGE1
IG1 Relay
Cowl Side
Panel LH
Instrument Panel
Reinforcement RH
I15
Ignition SW
5A AM1
120A
ALT
FL MAIN
3. 0W
Battery
15A HAZ
W–B
(LHD)
W–B
(RHD)
BR
(RHD)
BR
(LHD)
SB
LG–B
G–Y
G–B
R–L
G–W
B–Y
B–G
W
(LHD)
(RHD)