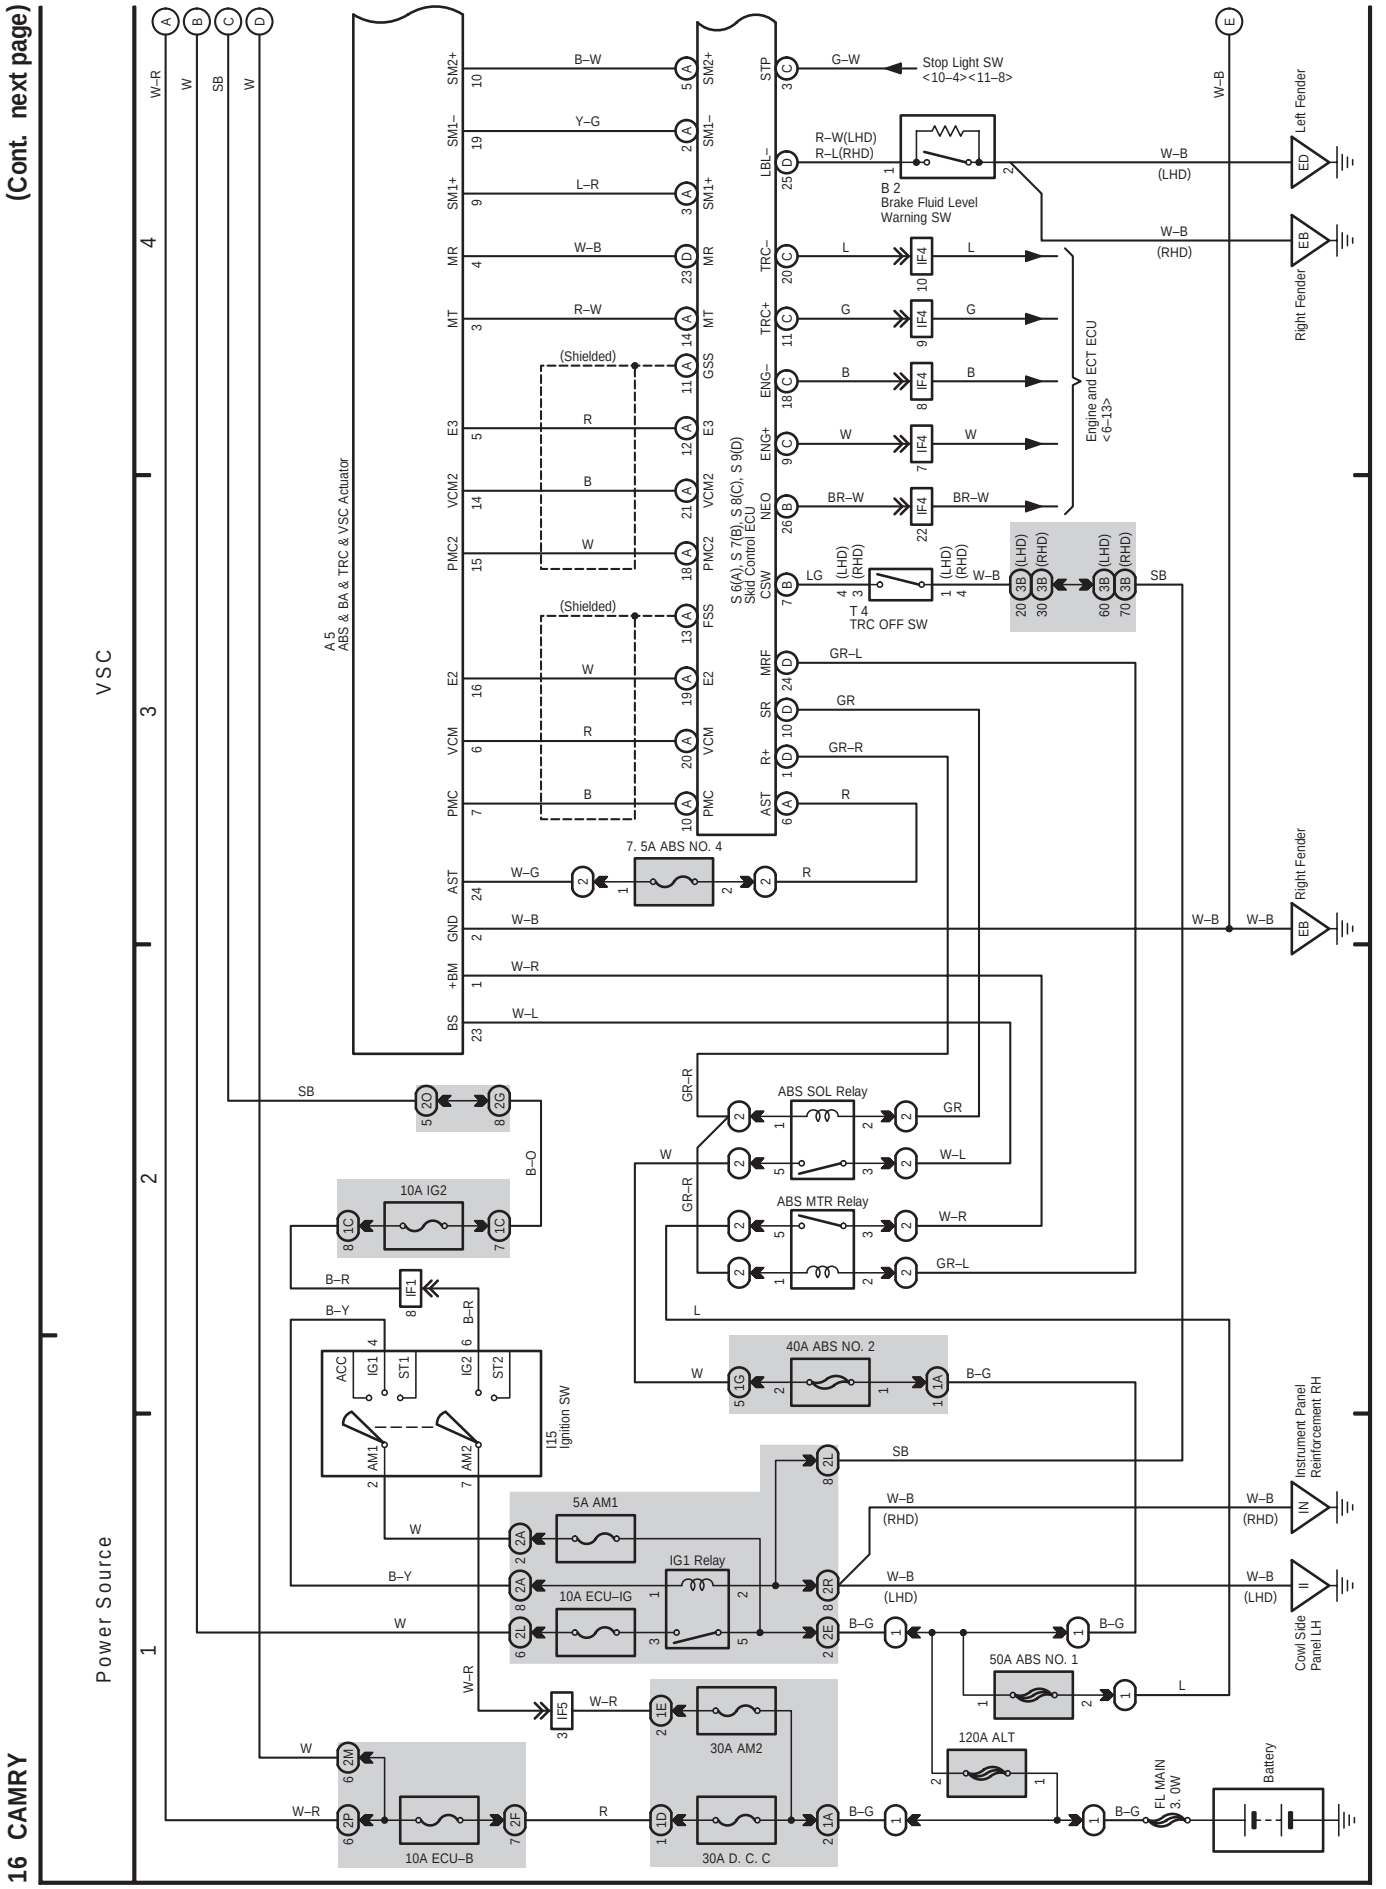
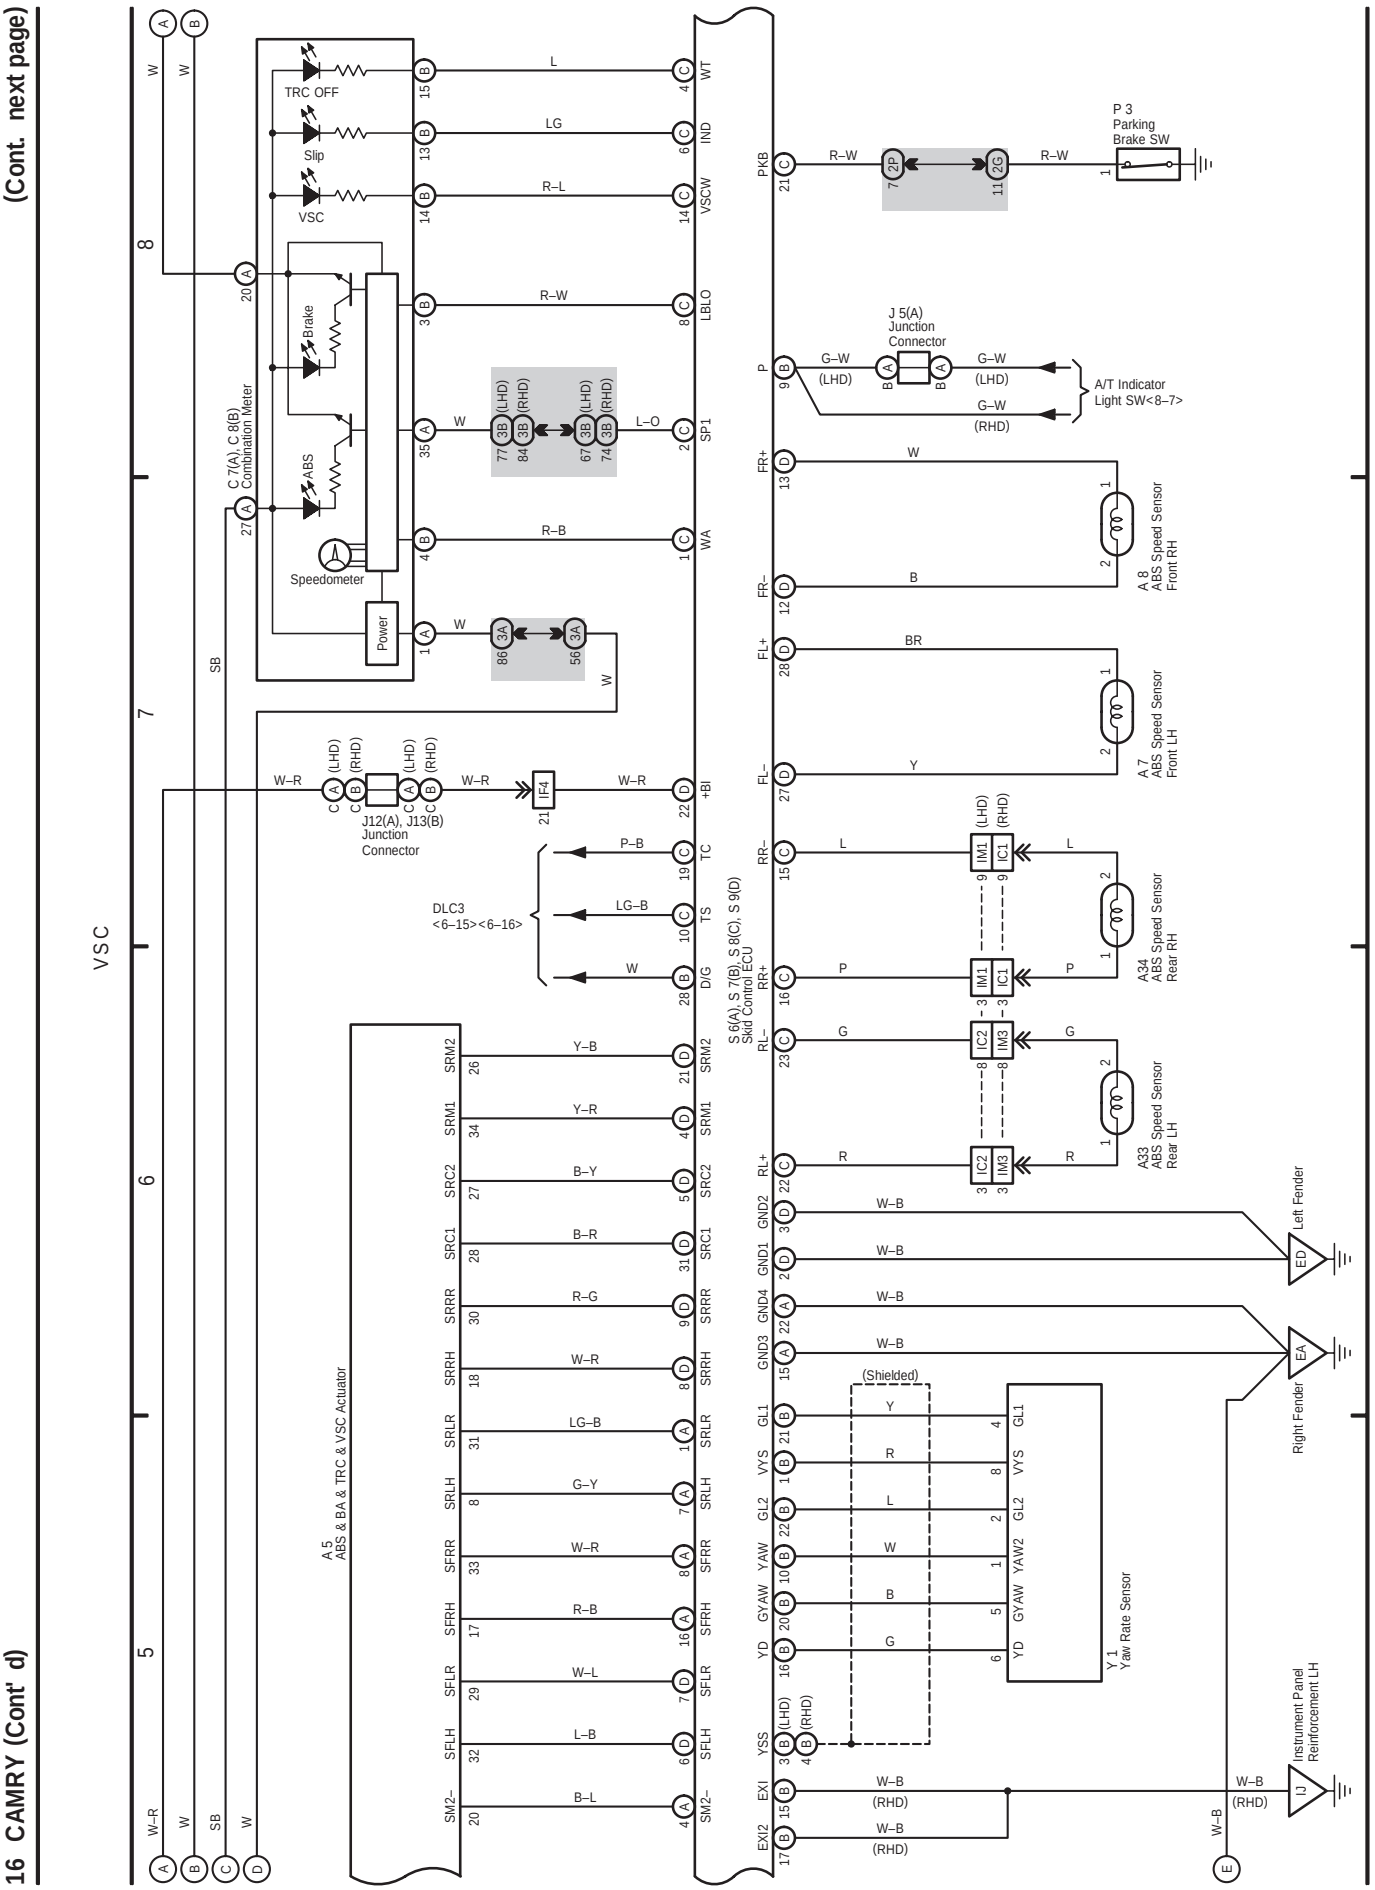

(Cont. next page)
16 CAMRY
Power Source
VSC
A5 ABS & BA & TRC & VSC Actuator
S 6(A), S 7(B), S 8(C), S 9(D) Skid Control ECU
Engine and ECT ECU <6–13>
Stop Light SW <10–4><11–8>
B 2 Brake Fluid Level Warning SW
T 4 TRC OFF SW
I15 Ignition SW
7. 5A ABS NO. 4
ABS SOL Relay
ABS MTR Relay
40A ABS NO. 2
50A ABS NO. 1
120A ALT
FL MAIN 3. 0W
Battery
10A IG2
5A AM1
IG1 Relay
10A ECU–IG
30A AM2
10A ECU–B
30A D. C. C
Left Fender
Right Fender
Instrument Panel Reinforcement RH
Cowl Side Panel LH
(Shielded)
(LHD)
(RHD)


16 CAMRY (Cont' d)
(Cont. next page)
VSC
TRC OFF
Slip
VSC
Brake
ABS
Speedometer
Power
C 7(A), C 8(B)
Combination Meter
J12(A), J13(B)
Junction
Connector
DLC3
<6–15><6–16>
S 6(A), S 7(B), S 8(C), S 9(D)
Skid Control ECU
A 5
ABS & BA & TRC & VSC Actuator
J 5(A)
Junction
Connector
P 3
Parking
Brake SW
A/T Indicator
Light SW<8–7>
A 8
ABS Speed Sensor
Front RH
A 7
ABS Speed Sensor
Front LH
A34
ABS Speed Sensor
Rear RH
A33
ABS Speed Sensor
Rear LH
Y 1
Yaw Rate Sensor
(Shielded)
Left Fender
Right Fender
Instrument Panel
Reinforcement LH

16 CAMRY (Cont' d)

