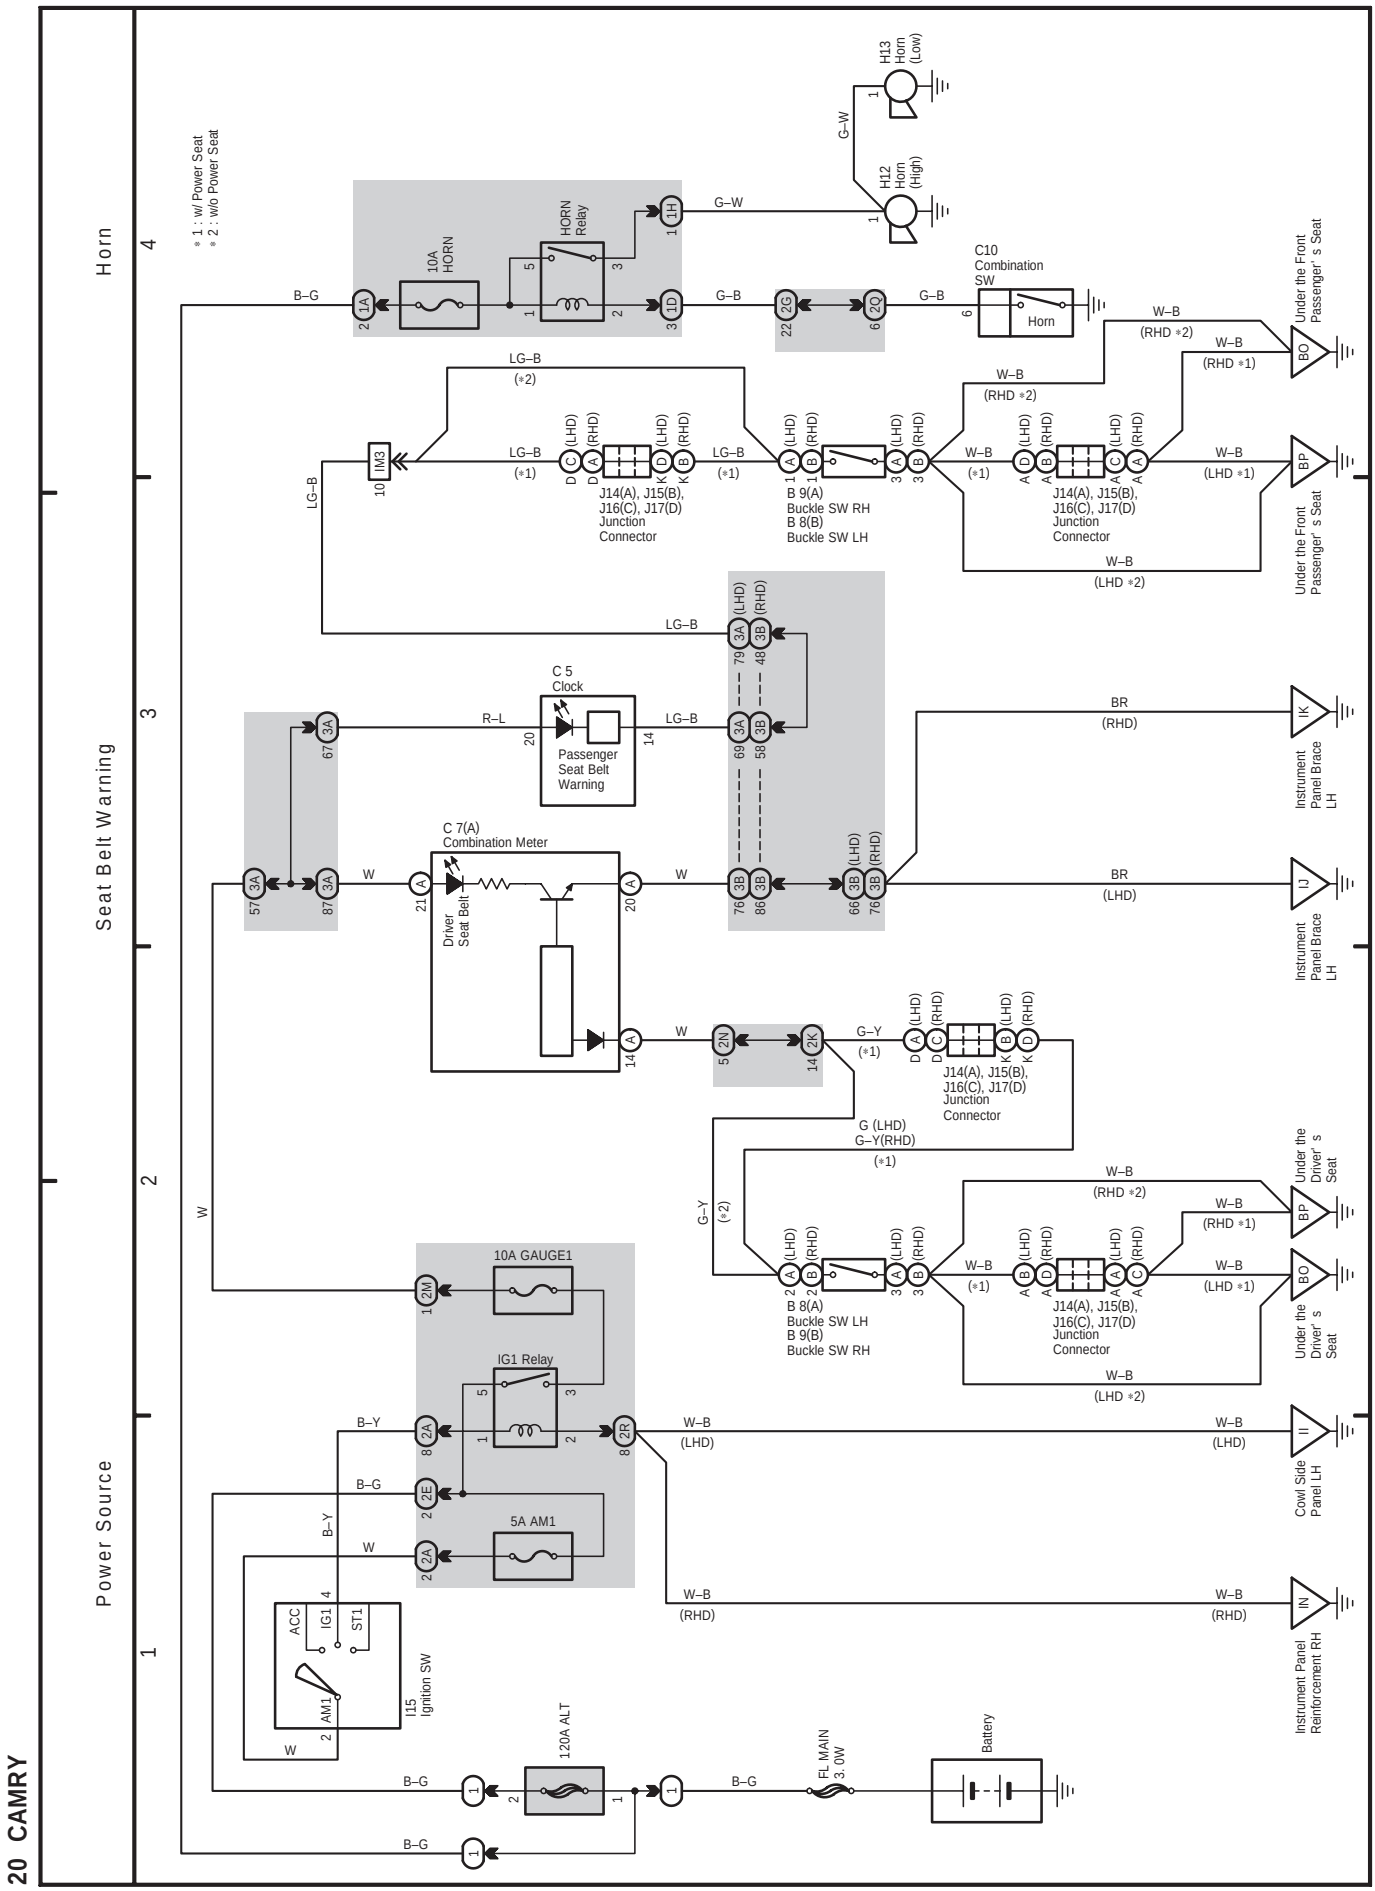

20 CAMRY
Power Source
Seat Belt Warning
Horn
1
2
3
4
* 1 : w/ Power Seat
* 2 : w/o Power Seat
H13 Horn (Low)
H12 Horn (High)
G–W
HORN Relay
10A HORN
B–G
C10 Combination SW
Horn
W–B
(RHD *2)
(RHD *1)
Under the Front Passenger' s Seat
LG–B
(*2)
(*1)
J14(A), J15(B), J16(C), J17(D) Junction Connector
B 9(A) Buckle SW RH
B 8(B) Buckle SW LH
(LHD *1)
(LHD *2)
C 5 Clock
Passenger Seat Belt Warning
R–L
BR
(RHD)
(LHD)
Instrument Panel Brace LH
C 7(A) Combination Meter
Driver Seat Belt
W
G–Y
G (LHD)
G–Y(RHD)
Under the Driver' s Seat
10A GAUGE1
IG1 Relay
5A AM1
B–Y
Cowl Side Panel LH
Instrument Panel Reinforcement RH
ACC
IG1
ST1
AM1
I15 Ignition SW
120A ALT
FL MAIN 3. 0W
Battery