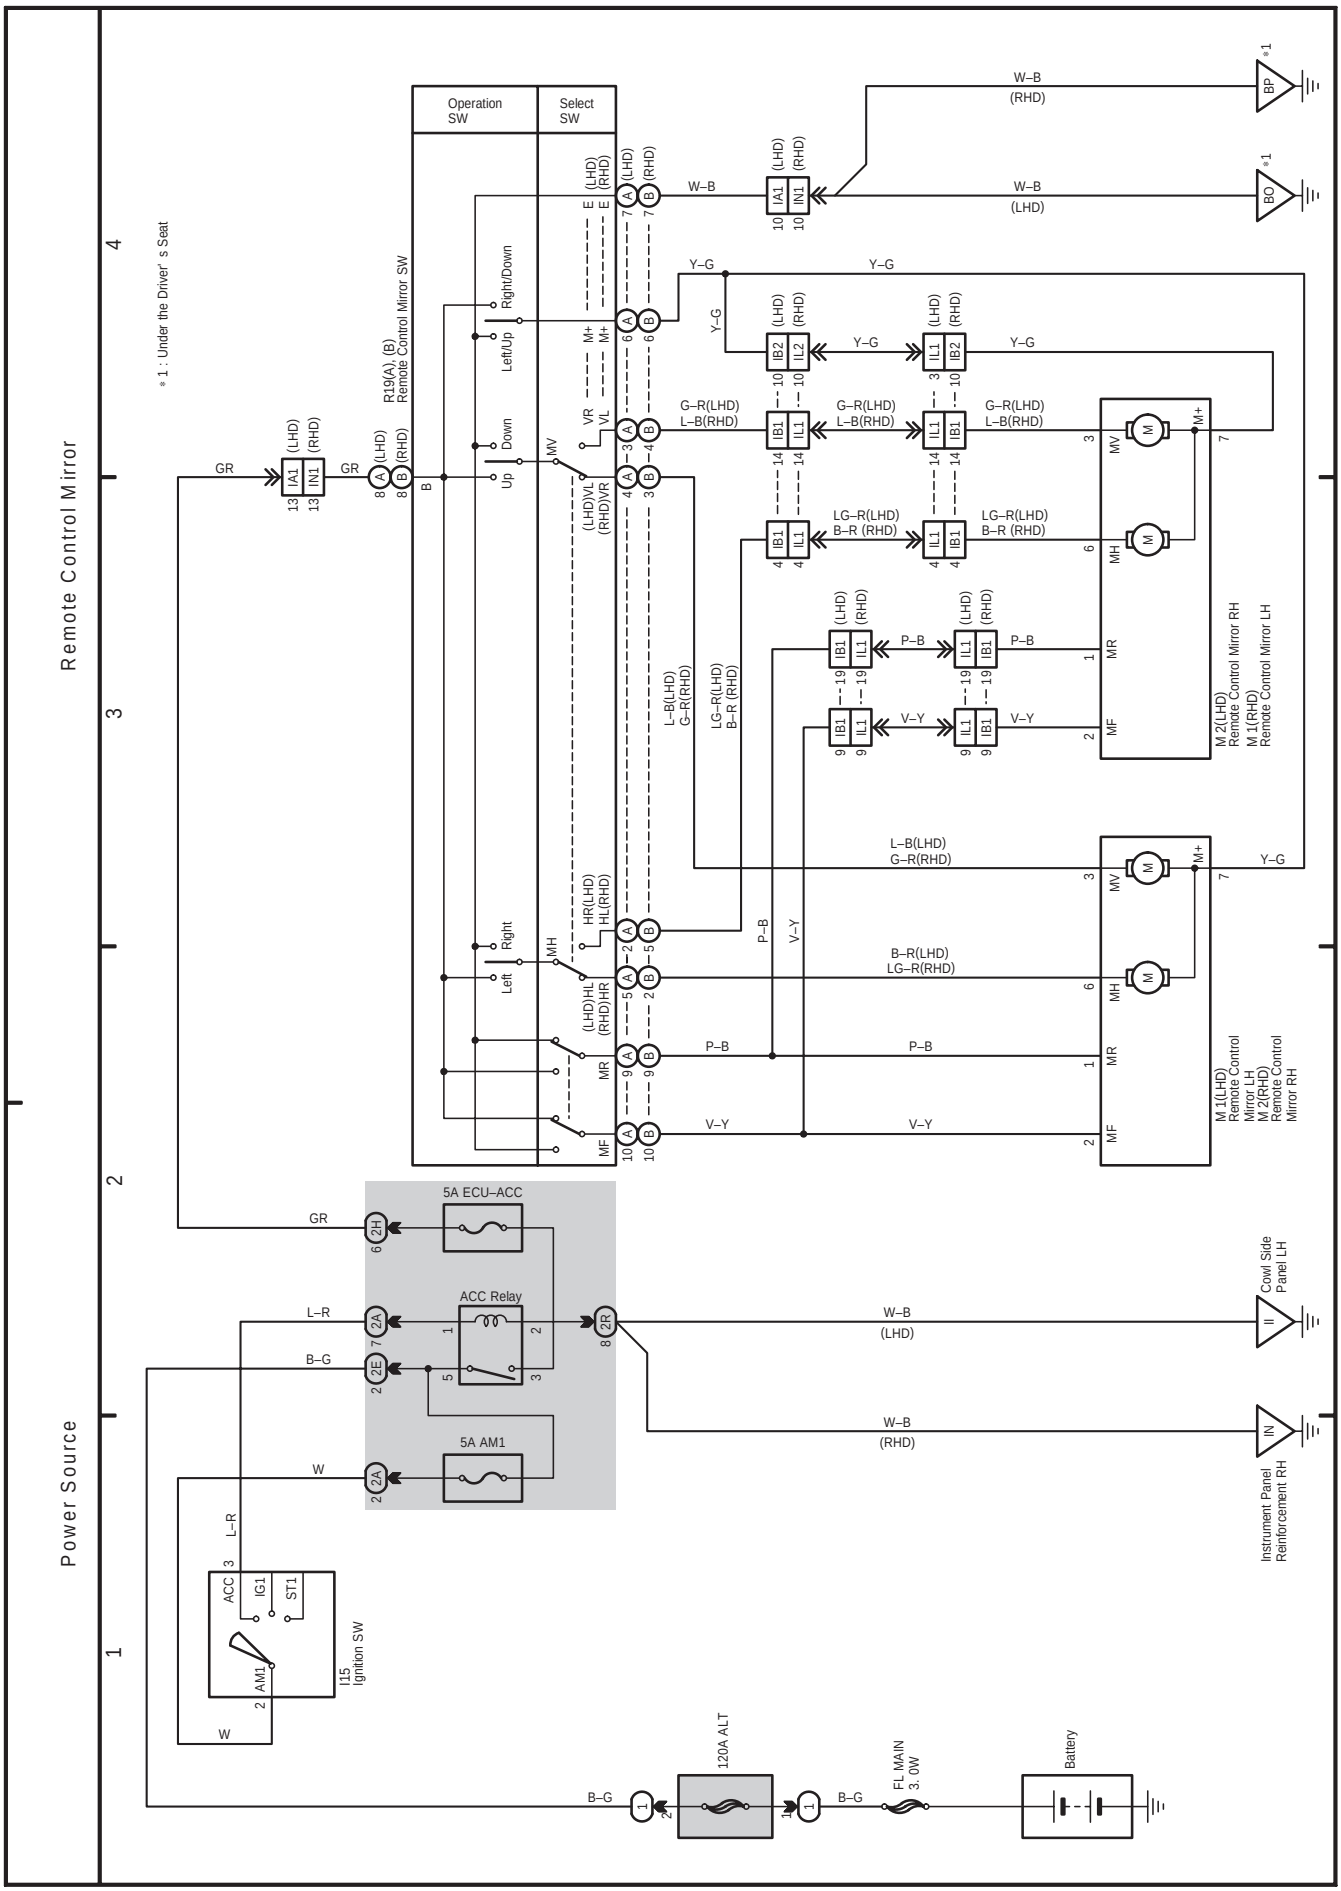

Remote Control Mirror
Power Source
Operation SW
Select SW
R19(A), (B) Remote Control Mirror SW
*1 : Under the Driver' s Seat
Right/Down
Left/Up
Down
Up
Right
Left
M 2(LHD) Remote Control Mirror RH
M 1(RHD) Remote Control Mirror LH
M 1(LHD) Remote Control Mirror LH
M 2(RHD) Remote Control Mirror RH
5A ECU–ACC
ACC Relay
5A AM1
I15 Ignition SW
120A ALT
FL MAIN 3. 0W
Battery
Cowl Side Panel LH
Instrument Panel Reinforcement RH