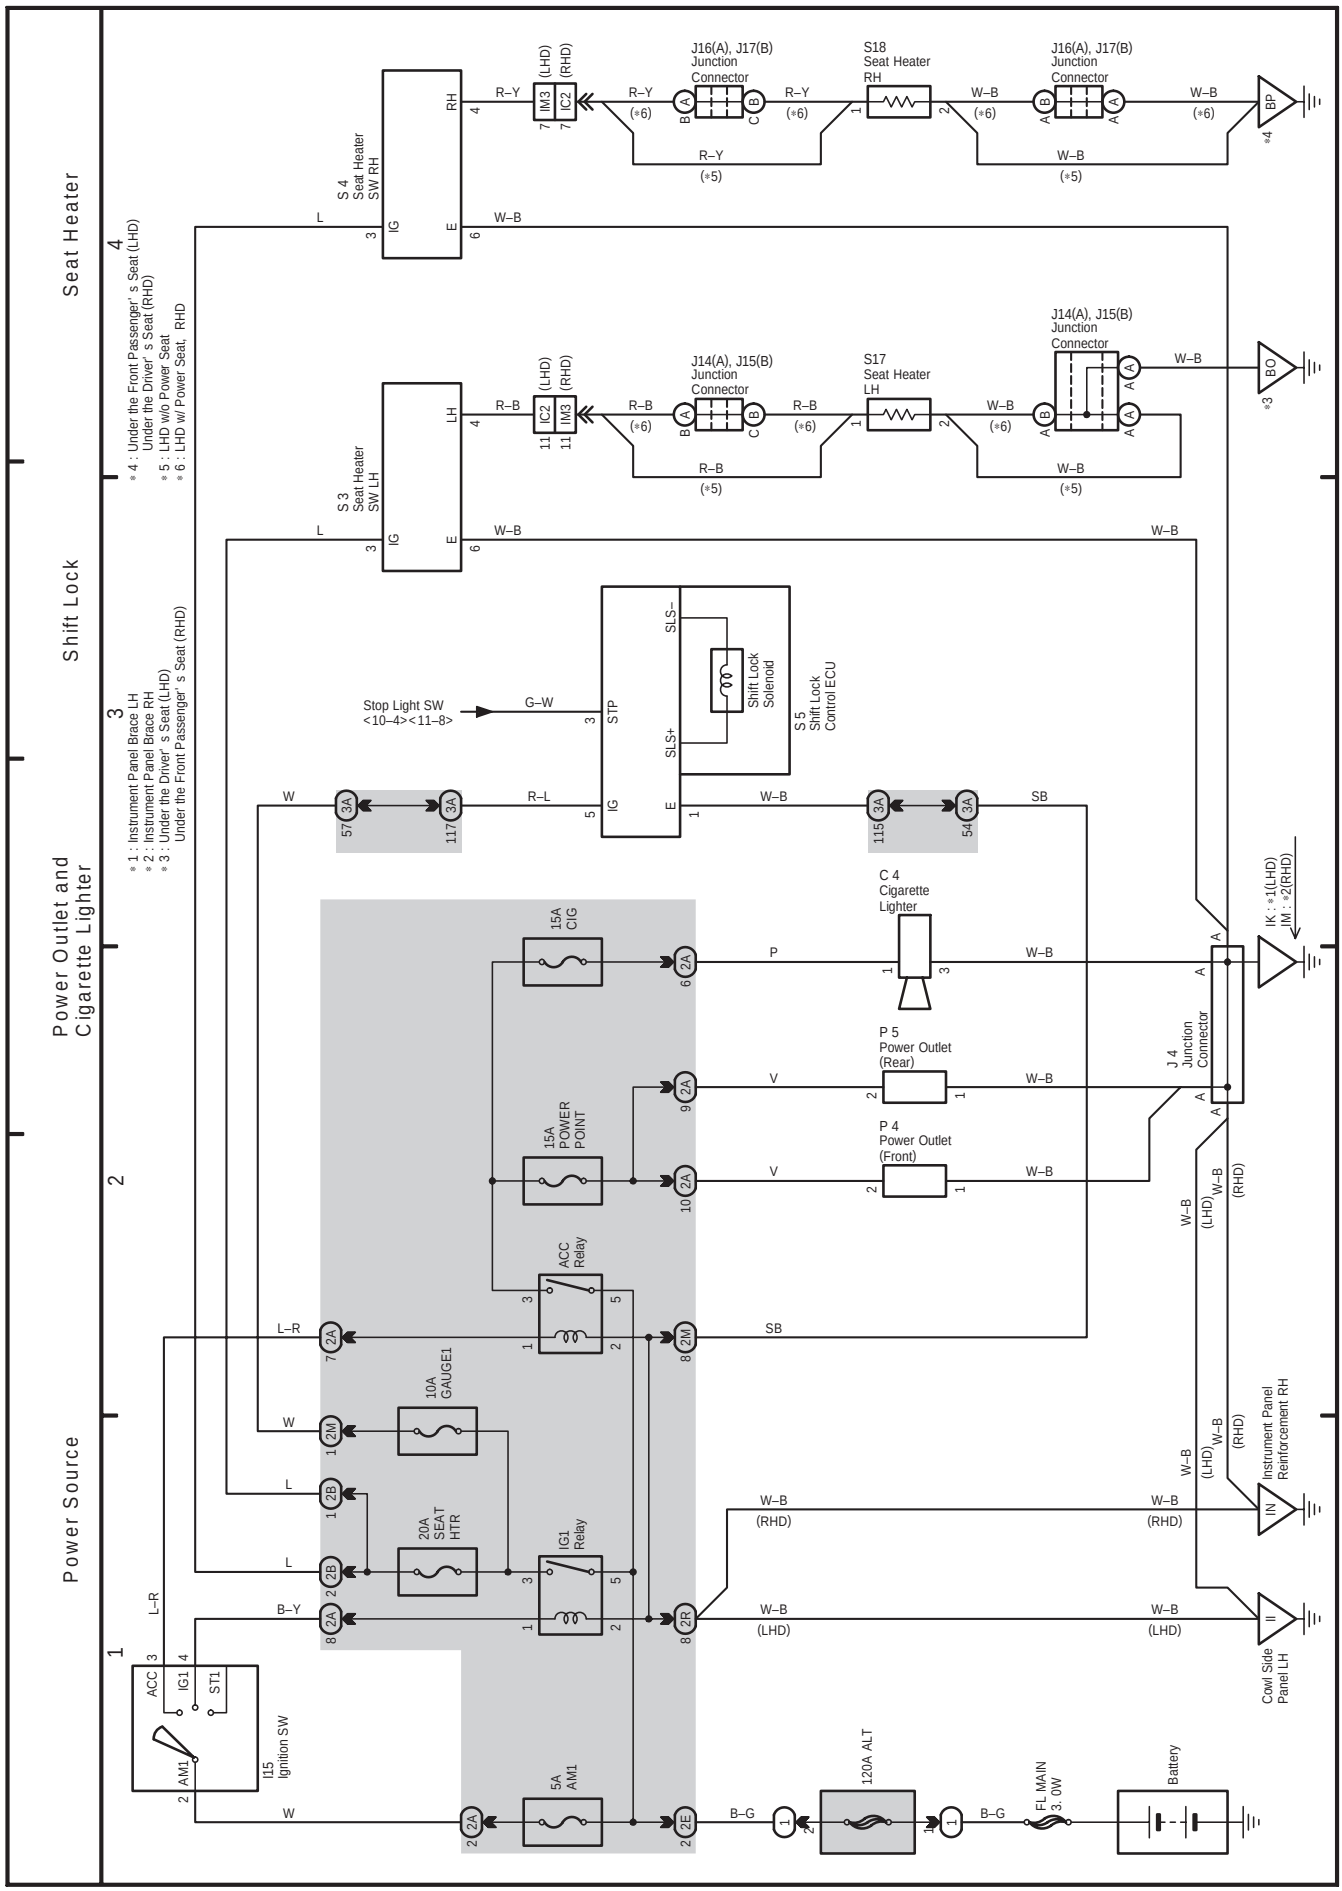

25 CAMRY
Power Source
Power Outlet and Cigarette Lighter
Shift Lock
Seat Heater
1
2
3
4
* 1 : Instrument Panel Brace LH
* 2 : Instrument Panel Brace RH
* 3 : Under the Driver' s Seat (LHD)
Under the Front Passenger' s Seat (RHD)
* 4 : Under the Front Passenger' s Seat (LHD)
Under the Driver' s Seat (RHD)
* 5 : LHD w/o Power Seat
* 6 : LHD w/ Power Seat, RHD
I15 Ignition SW
ACC
IG1
ST1
AM1
5A AM1
15A CIG
15A POWER POINT
10A GAUGE1
20A SEAT HTR
ACC Relay
IG1 Relay
120A ALT
FL MAIN 3. 0W
Battery
C 4 Cigarette Lighter
P 5 Power Outlet (Rear)
P 4 Power Outlet (Front)
J 4 Junction Connector
S 3 Seat Heater SW LH
S 4 Seat Heater SW RH
S 5 Shift Lock Control ECU
Shift Lock Solenoid
Stop Light SW <10–4><11–8>
S17 Seat Heater LH
S18 Seat Heater RH
J14(A), J15(B) Junction Connector
J16(A), J17(B) Junction Connector
Instrument Panel Reinforcement RH
Cowl Side Panel LH
IK : *1(LHD) IM : *2(RHD)
BO
BP
IN
IL
(LHD)
(RHD)