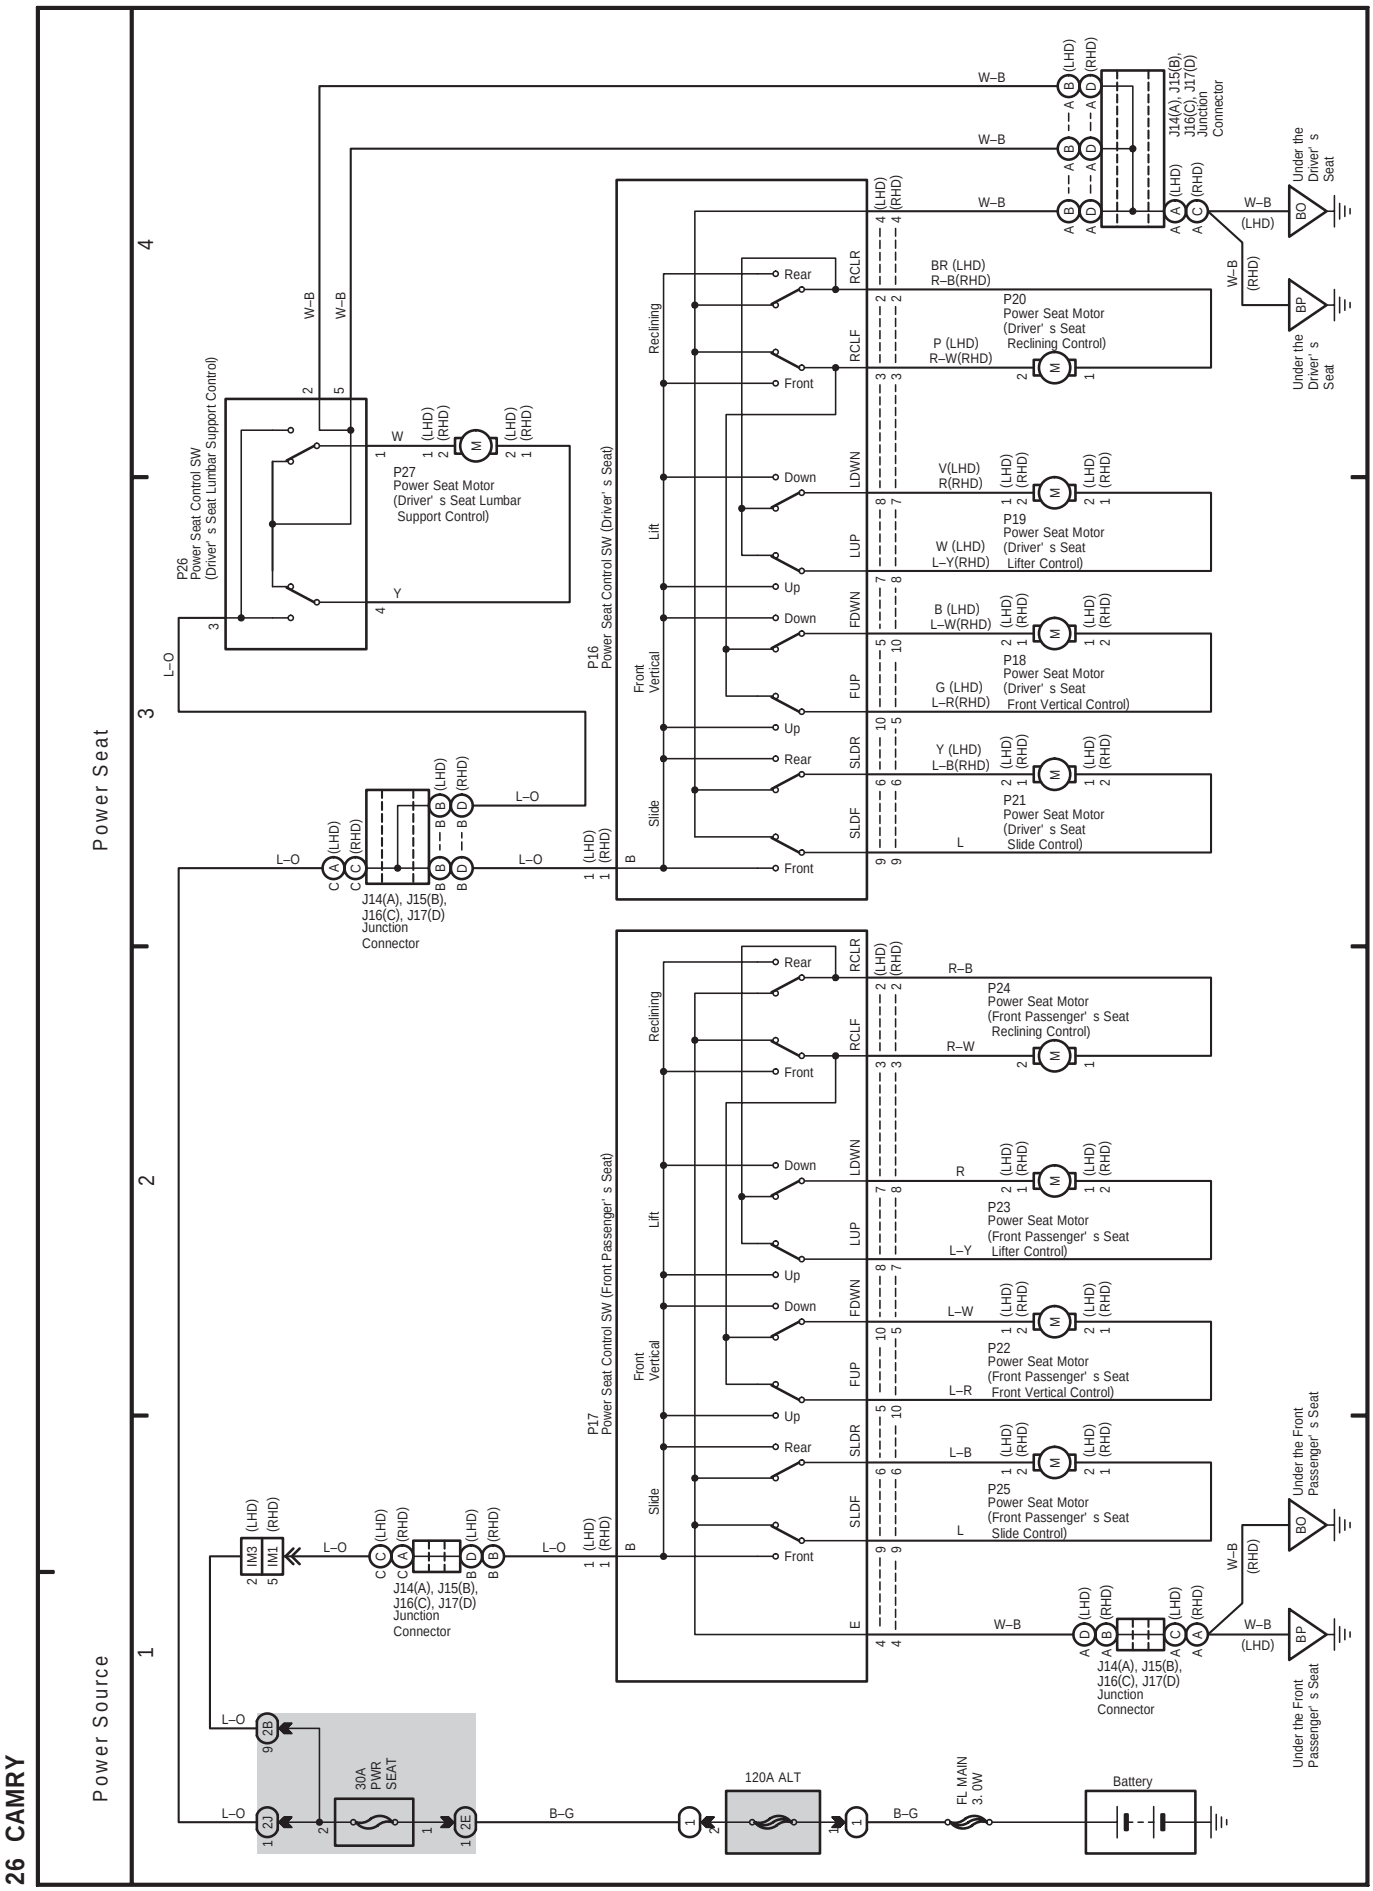

Power Seat
Power Source
26 CAMRY
P26 Power Seat Control SW (Driver' s Seat Lumbar Support Control)
P27 Power Seat Motor (Driver' s Seat Lumbar Support Control)
P16 Power Seat Control SW (Driver' s Seat)
P17 Power Seat Control SW (Front Passenger' s Seat)
P20 Power Seat Motor (Driver' s Seat Reclining Control)
P19 Power Seat Motor (Driver' s Seat Lifter Control)
P18 Power Seat Motor (Driver' s Seat Front Vertical Control)
P21 Power Seat Motor (Driver' s Seat Slide Control)
P24 Power Seat Motor (Front Passenger' s Seat Reclining Control)
P23 Power Seat Motor (Front Passenger' s Seat Lifter Control)
P22 Power Seat Motor (Front Passenger' s Seat Front Vertical Control)
P25 Power Seat Motor (Front Passenger' s Seat Slide Control)
J14(A), J15(B), J16(C), J17(D) Junction Connector
Under the Driver' s Seat
Under the Front Passenger' s Seat
30A PWR SEAT
120A ALT
Battery
FL MAIN 3.0W
Reclining
Lift
Front Vertical
Slide
Rear
Front
Up
Down
RCLR
RCLF
LDWN
LUP
FDWN
FUP
SLDR
SLDF
W–B
L–O
B–G
BR (LHD) R–B(RHD)
P (LHD) R–W(RHD)
V(LHD) R(RHD)
W (LHD) L–Y(RHD)
B (LHD) L–W(RHD)
G (LHD) L–R(RHD)
Y (LHD) L–B(RHD)
R–B
R–W
R
L–Y
L–W
L–R
L–B
W–B (LHD)
W–B (RHD)