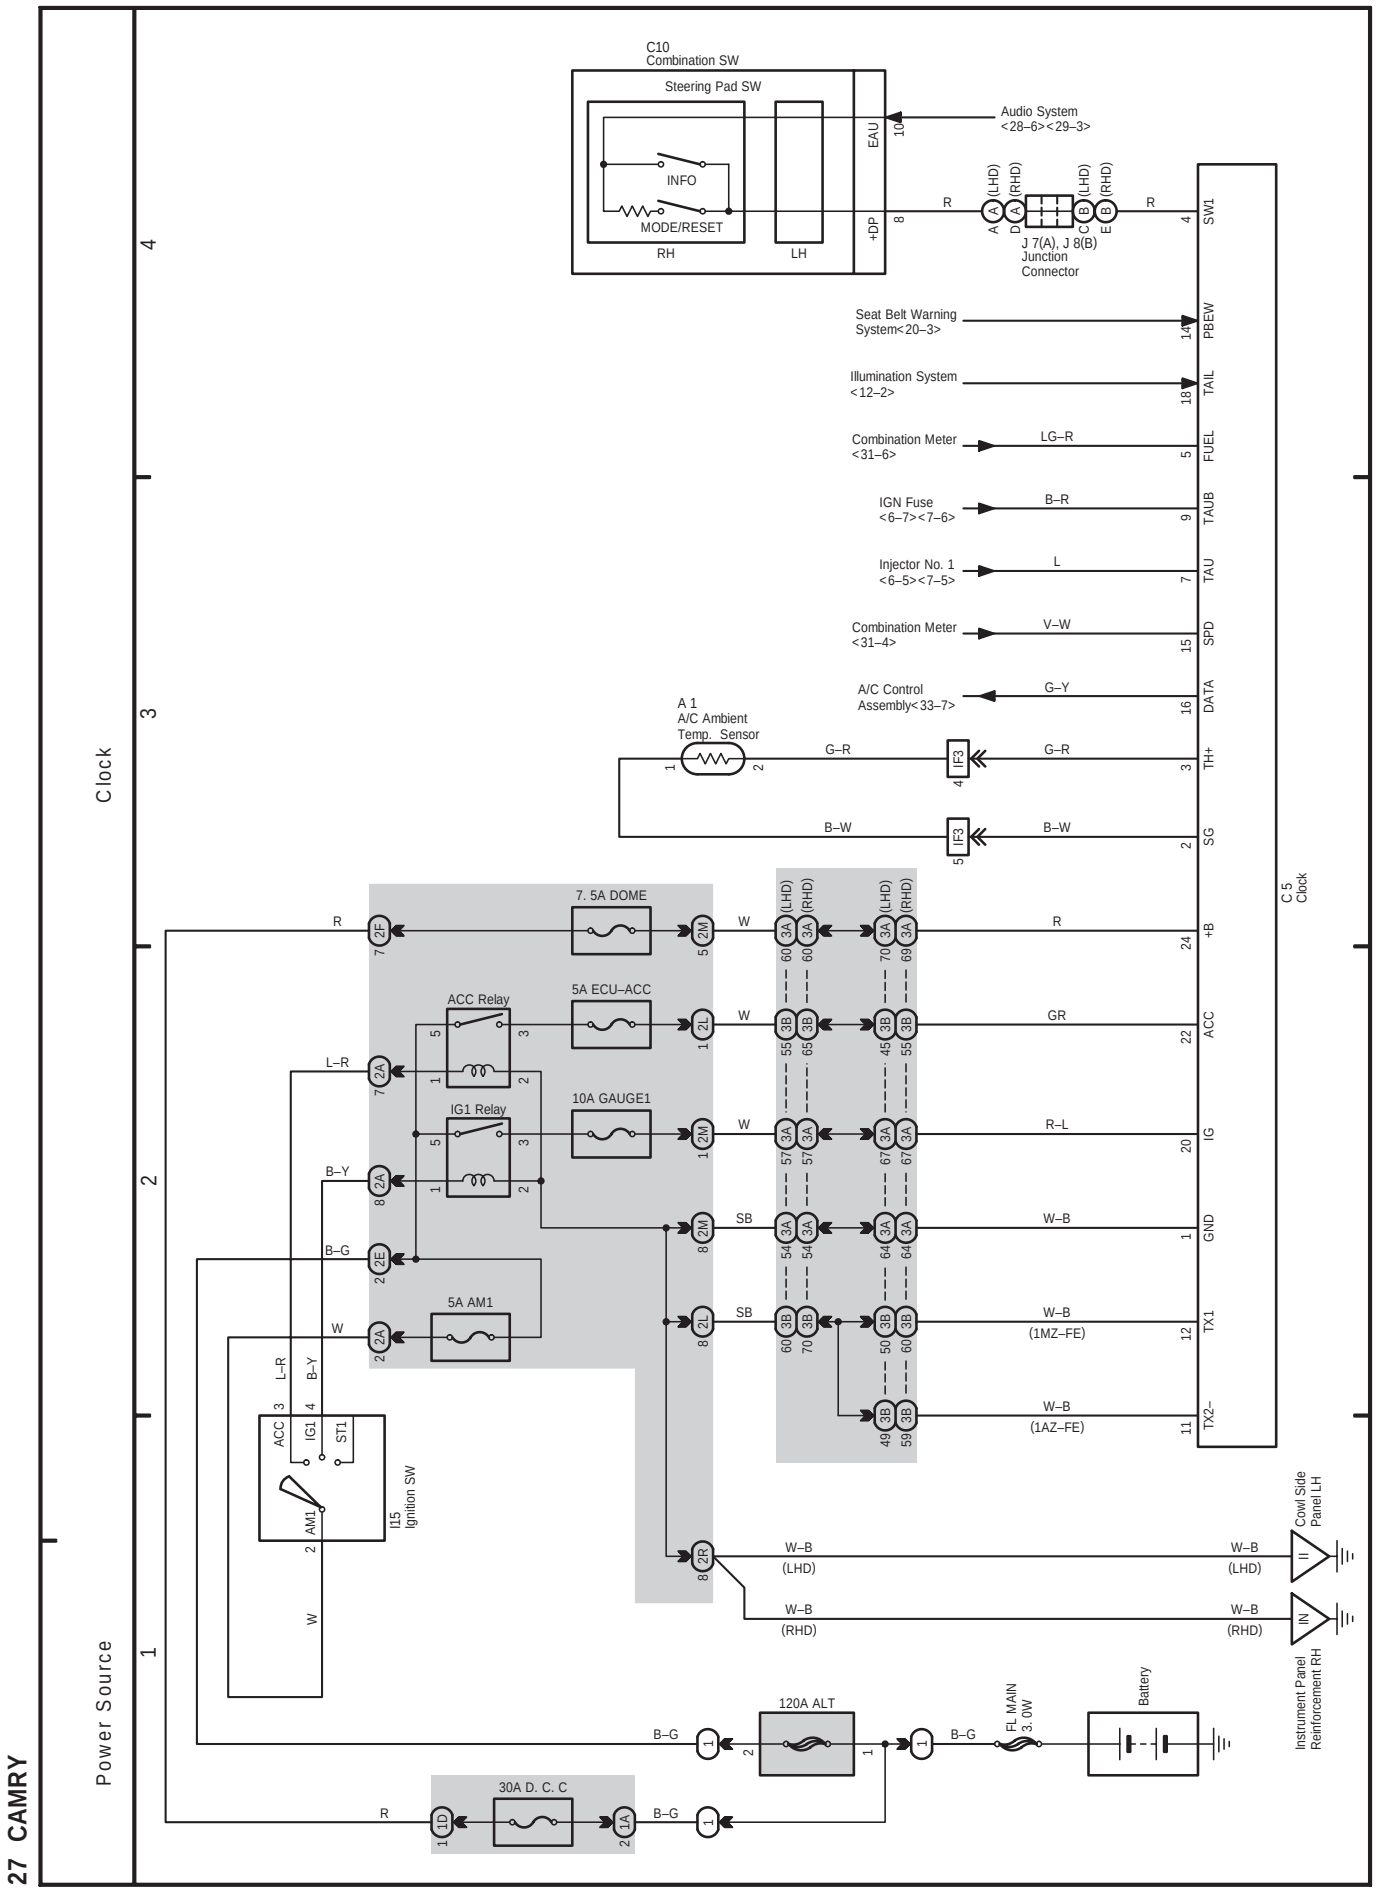

C10
Combination SW
Steering Pad SW
INFO
MODE/RESET
RH
LH
EAU
+DP
Audio System
<28–6><29–3>
J 7(A), J 8(B)
Junction
Connector
SW1
Seat Belt Warning
System<20–3>
PBEW
Illumination System
<12–2>
TAIL
Combination Meter
<31–6>
LG–R
FUEL
IGN Fuse
<6–7><7–6>
B–R
TAUB
Injector No. 1
<6–5><7–5>
L
TAU
Combination Meter
<31–4>
V–W
SPD
A/C Control
Assembly<33–7>
G–Y
DATA
A 1
A/C Ambient
Temp. Sensor
G–R
TH+
B–W
SG
C 5
Clock
7. 5A DOME
ACC Relay
5A ECU–ACC
IG1 Relay
10A GAUGE1
5A AM1
+B
ACC
IG
GND
TX1
TX2–
W–B
(1MZ–FE)
W–B
(1AZ–FE)
I15
Ignition SW
Cowl Side
Panel LH
Instrument Panel
Reinforcement RH
120A ALT
FL MAIN
3. 0W
Battery
30A D. C. C
Clock
Power Source
1
2
3
4