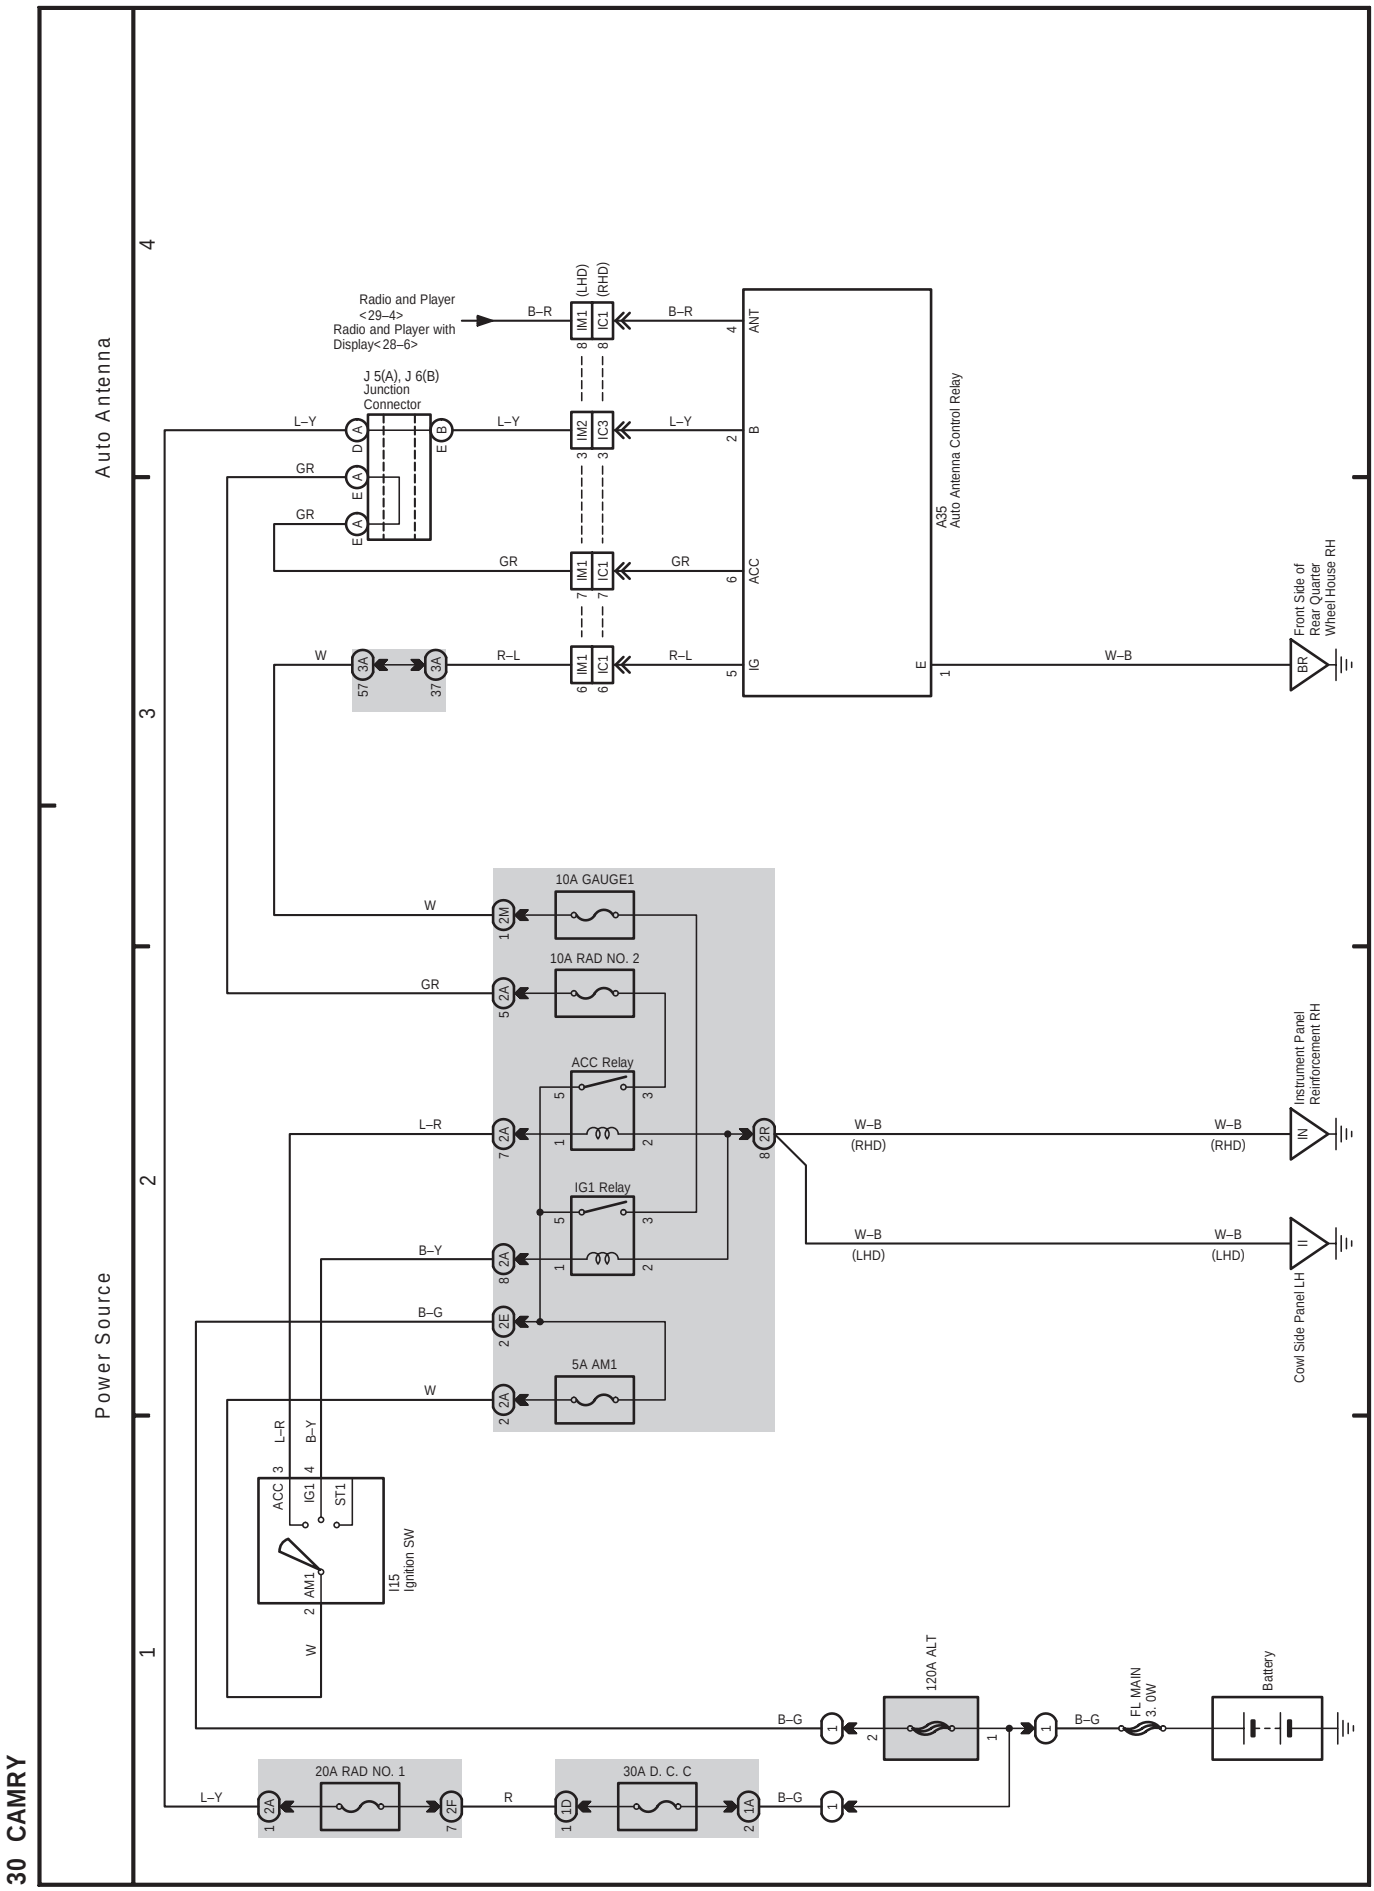

Auto Antenna
Power Source
Radio and Player
<29–4>
Radio and Player with
Display<28–6>
J 5(A), J 6(B)
Junction
Connector
A35
Auto Antenna Control Relay
ANT
B
ACC
IG
E
Front Side of
Rear Quarter
Wheel House RH
10A GAUGE1
10A RAD NO. 2
ACC Relay
IG1 Relay
5A AM1
Instrument Panel
Reinforcement RH
Cowl Side Panel LH
I15
Ignition SW
120A ALT
FL MAIN
3. 0W
Battery
20A RAD NO. 1
30A D. C. C