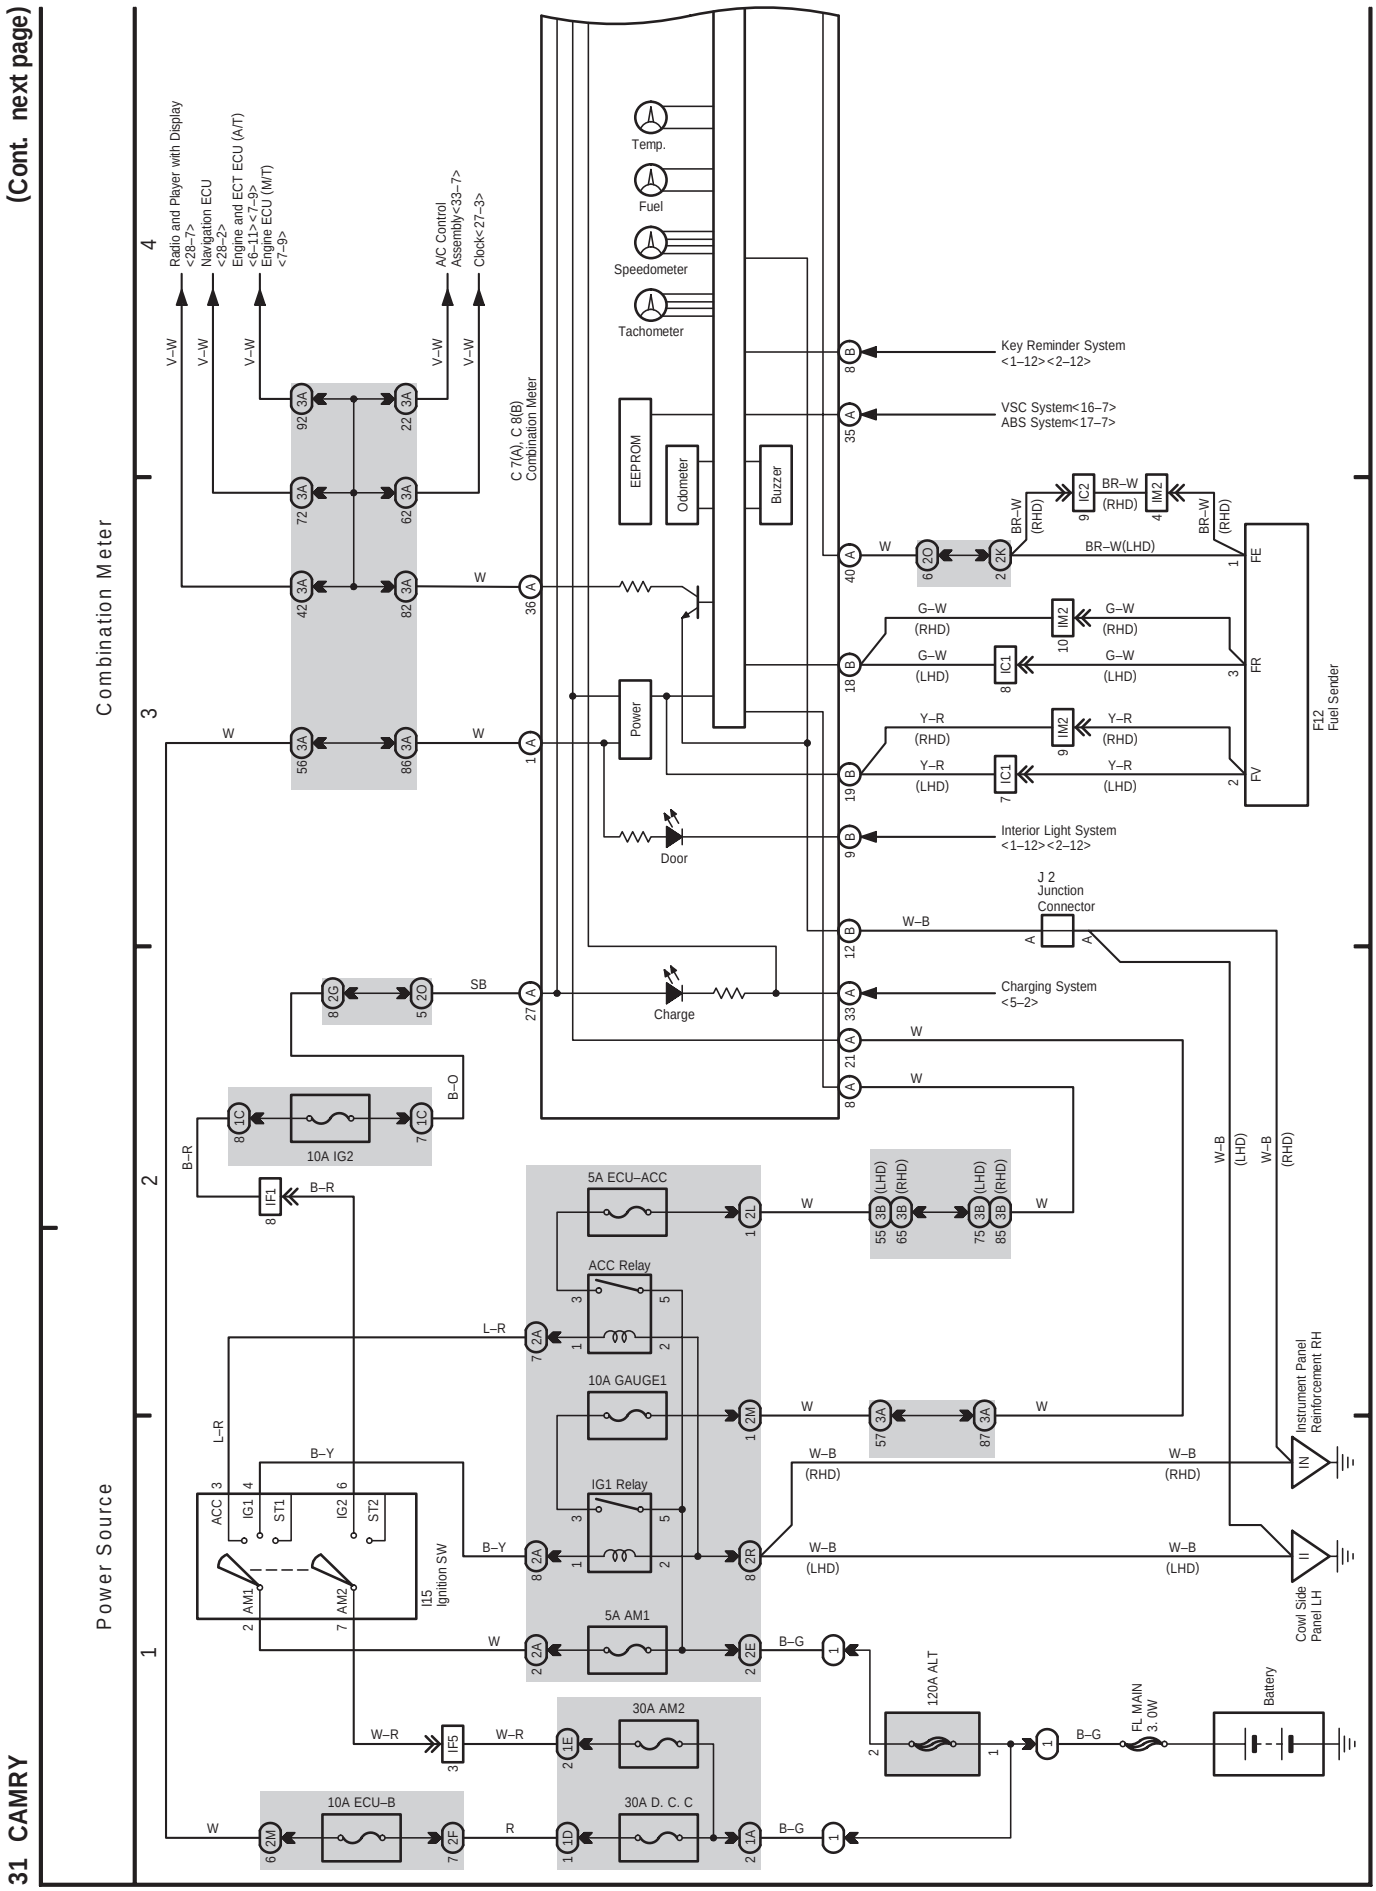
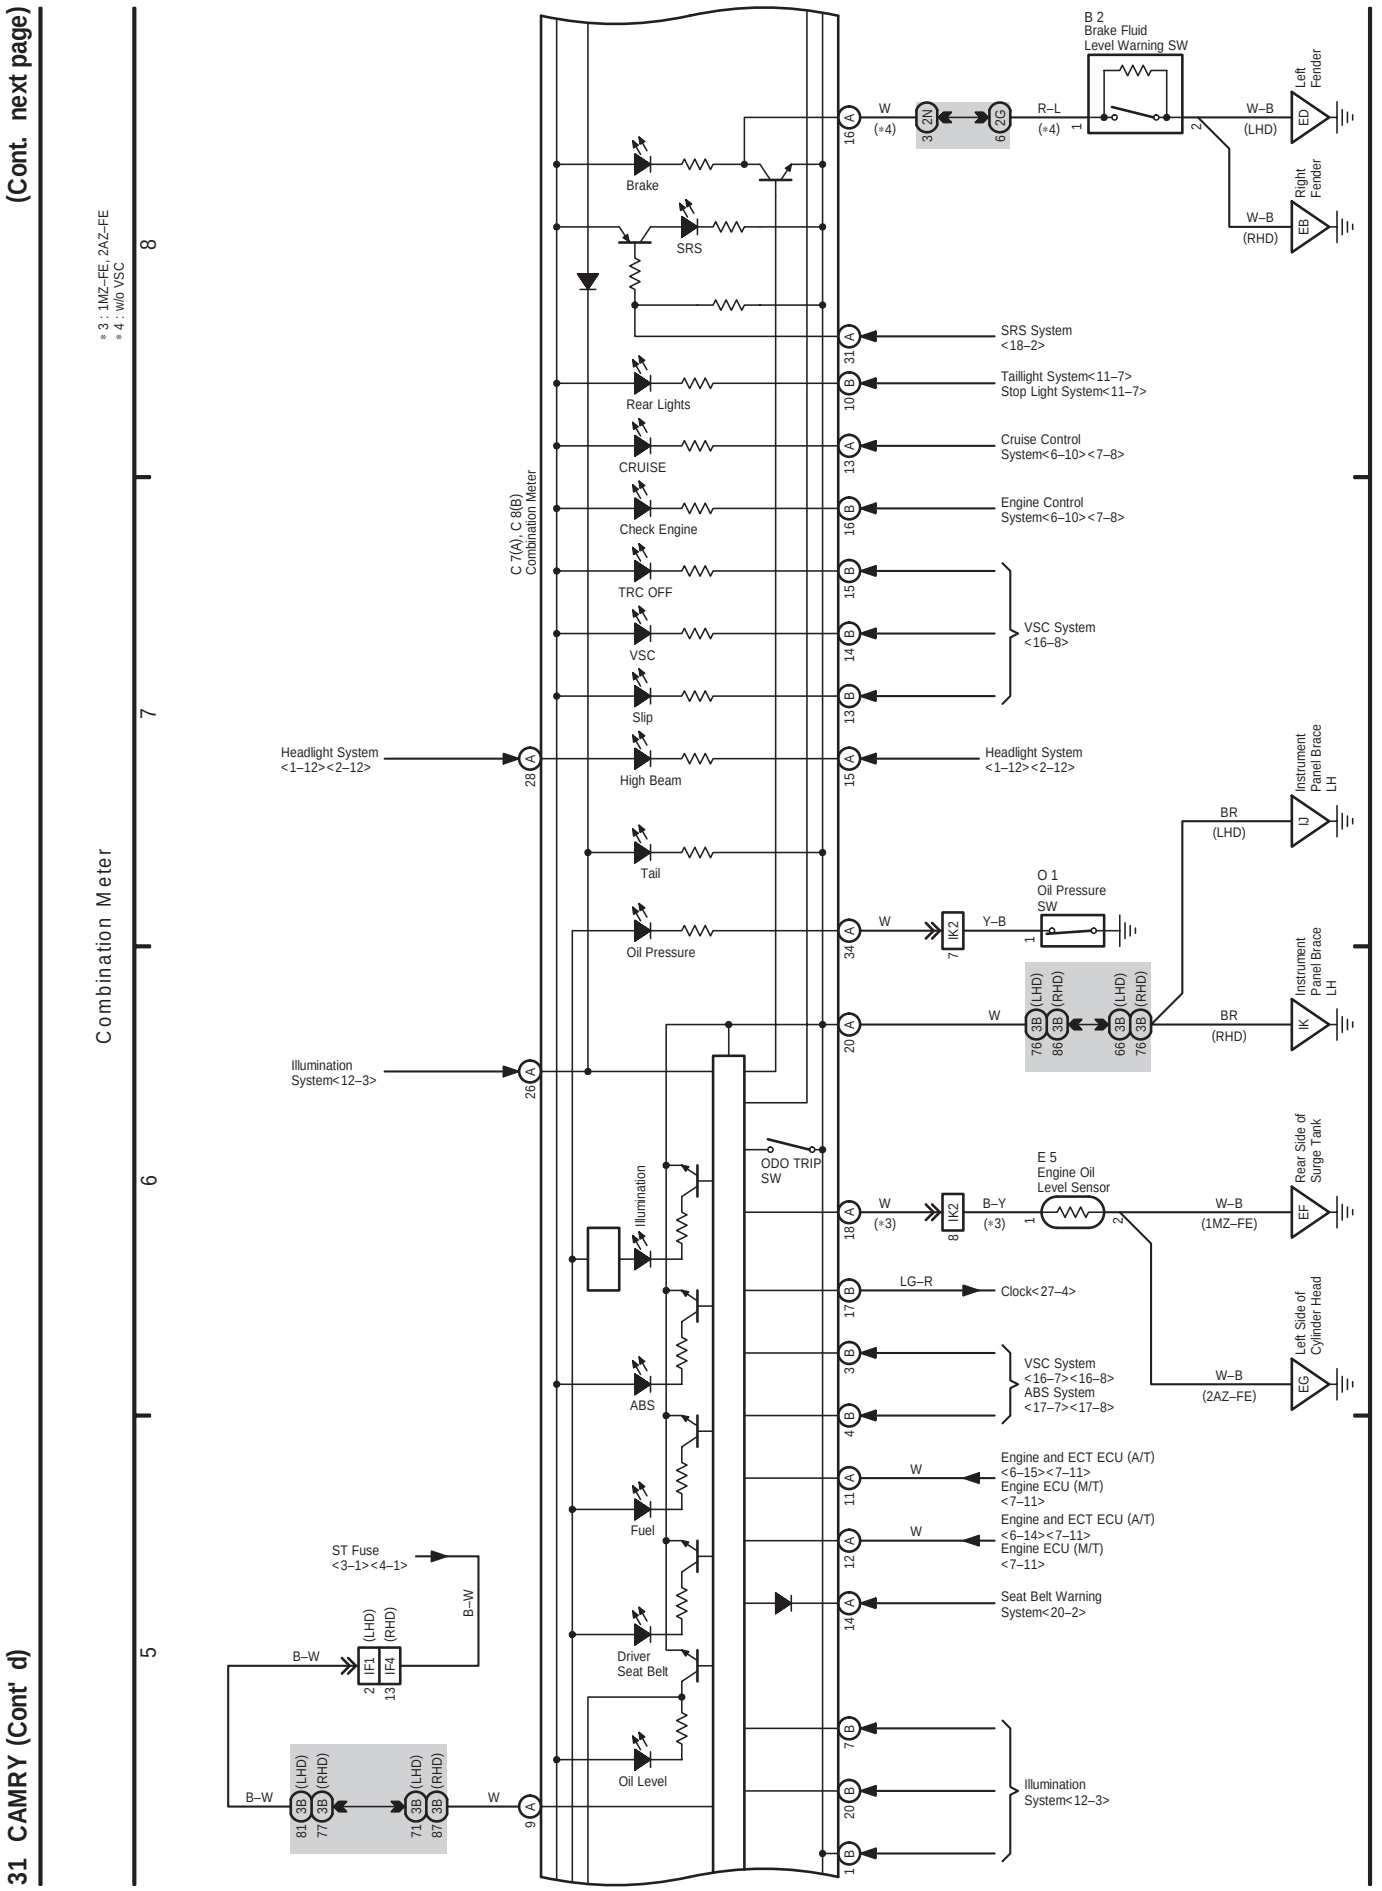
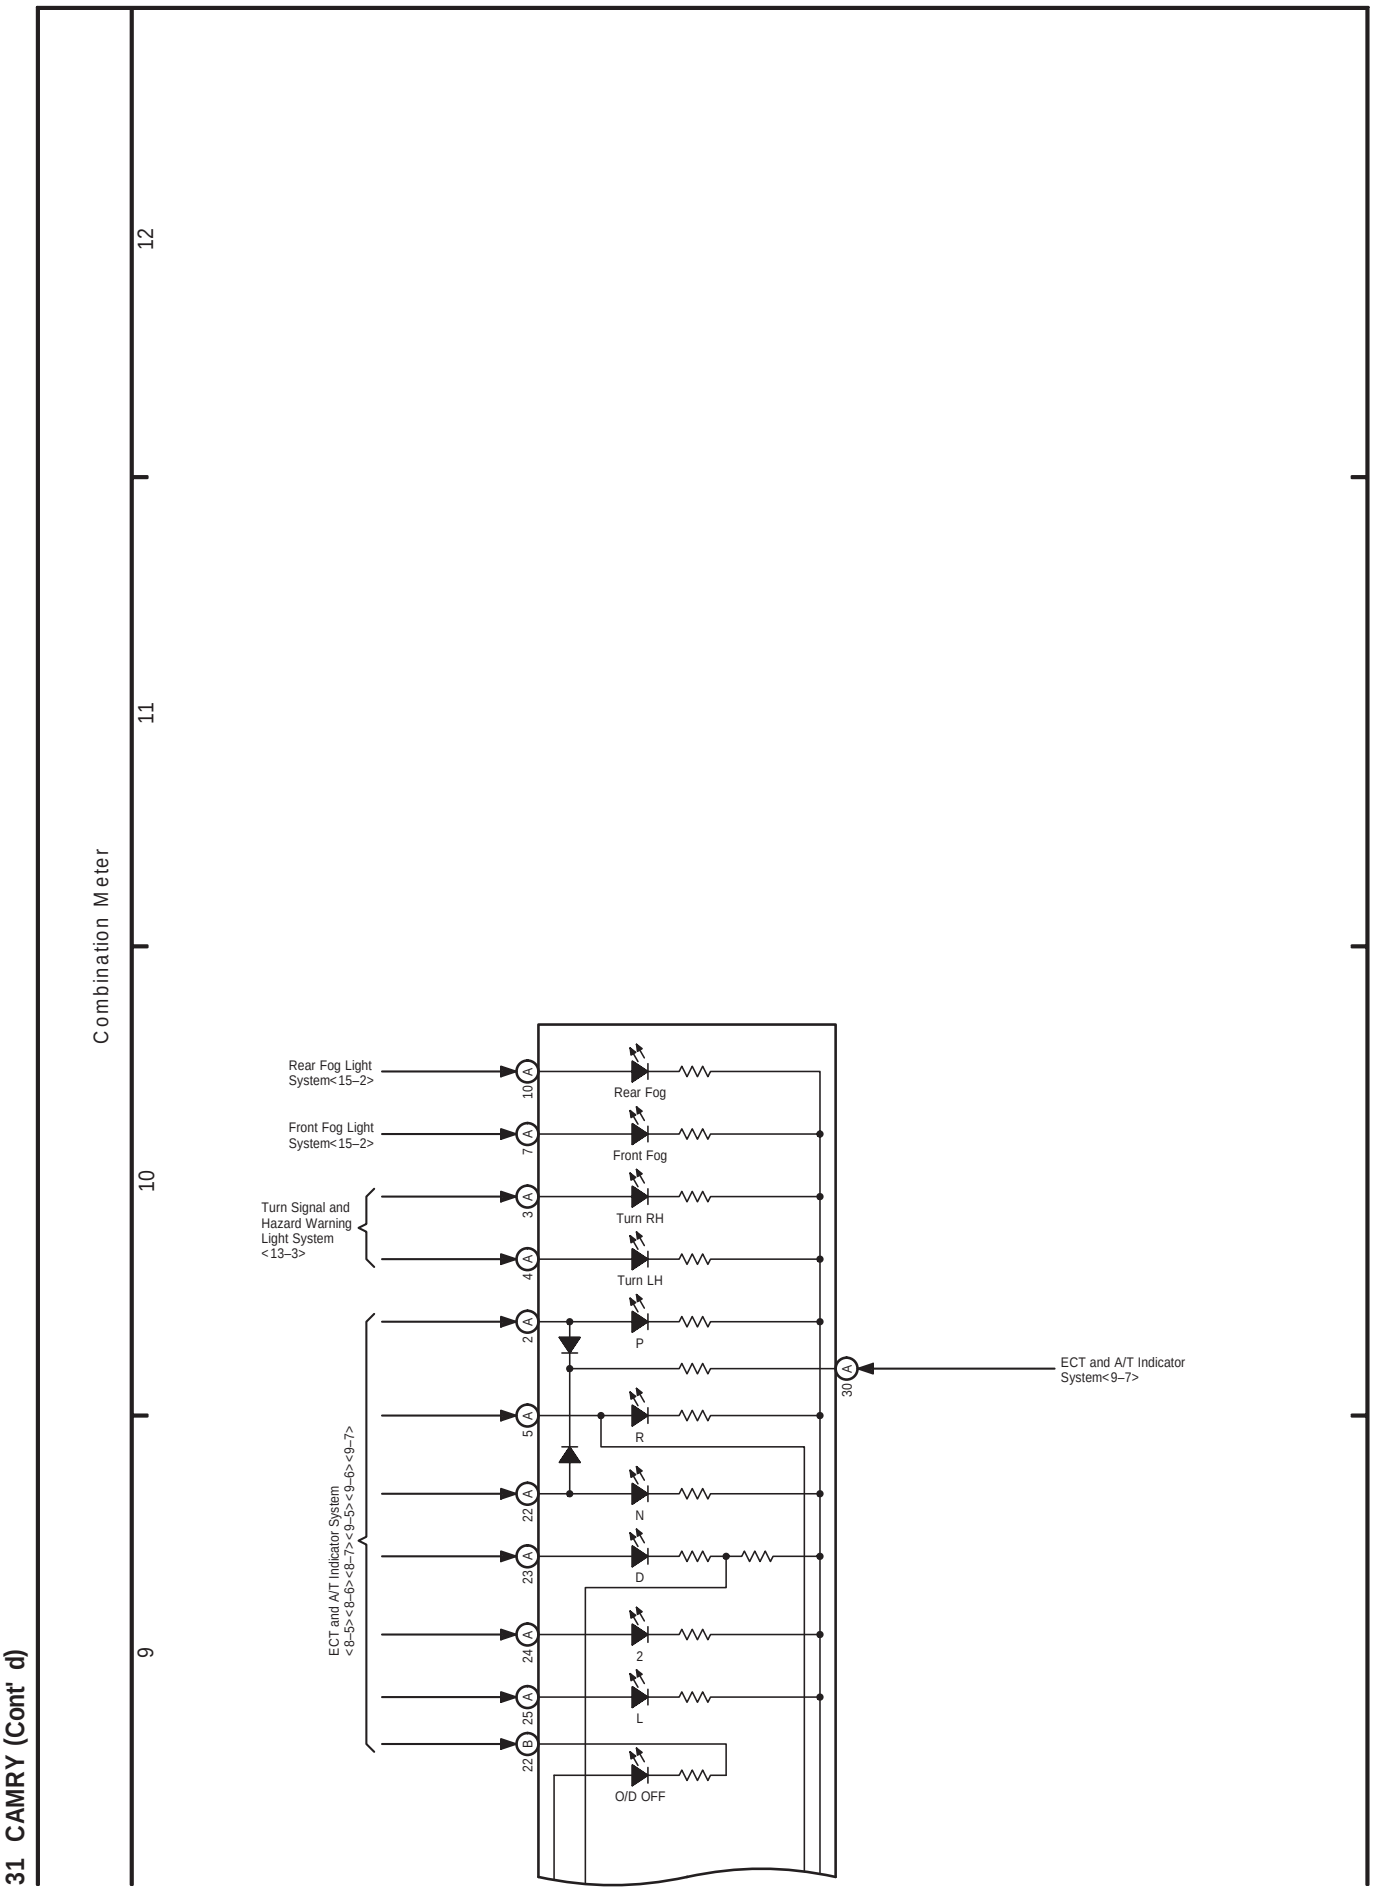

(Cont. next page)
Combination Meter
Power Source
Radio and Player with Display <28–7>
Navigation ECU <28–2>
Engine and ECT ECU (A/T) <6–11><7–9>
Engine ECU (M/T) <7–9>
A/C Control Assembly<33–7>
Clock<27–3>
C 7(A), C 8(B) Combination Meter
Temp.
Fuel
Speedometer
Tachometer
EEPROM
Odometer
Buzzer
Power
Door
Charge
Key Reminder System <1–12><2–12>
VSC System<16–7> ABS System<17–7>
Interior Light System <1–12><2–12>
Charging System <5–2>
J 2 Junction Connector
F12 Fuel Sender
10A IG2
5A ECU–ACC
ACC Relay
10A GAUGE1
IG1 Relay
5A AM1
30A AM2
30A D. C. C
10A ECU–B
I15 Ignition SW
120A ALT
Battery
FL MAIN 3. 0W
Instrument Panel Reinforcement RH
Cowl Side Panel LH
31 CAMRY


31 CAMRY (Cont' d)
(Cont. next page)
Combination Meter
* 3 : 1MZ–FE, 2AZ–FE
* 4 : w/o VSC
B 2
Brake Fluid
Level Warning SW
Left Fender
Right Fender
Brake
SRS
SRS System <18–2>
Rear Lights
Taillight System<11–7>
Stop Light System<11–7>
CRUISE
Cruise Control System<6–10><7–8>
Check Engine
Engine Control System<6–10><7–8>
C 7(A), C 8(B)
Combination Meter
TRC OFF
VSC
Slip
VSC System <16–8>
Headlight System <1–12><2–12>
High Beam
Tail
Oil Pressure
O 1
Oil Pressure SW
Instrument Panel Brace LH
Illumination System<12–3>
ODO TRIP SW
Illumination
E 5
Engine Oil Level Sensor
Rear Side of Surge Tank
Left Side of Cylinder Head
ABS
Clock<27–4>
VSC System <16–7><16–8>
ABS System <17–7><17–8>
Fuel
Engine and ECT ECU (A/T) <6–15><7–11>
Engine ECU (M/T) <7–11>
Engine and ECT ECU (A/T) <6–14><7–11>
Engine ECU (M/T) <7–11>
ST Fuse <3–1><4–1>
Seat Belt Warning System<20–2>
Driver Seat Belt
Oil Level
Illumination System<12–3>


12
11
10
9
Combination Meter
Rear Fog Light System<15–2>
Front Fog Light System<15–2>
Turn Signal and Hazard Warning Light System <13–3>
ECT and A/T Indicator System <8–5><8–6><8–7><9–5><9–6><9–7>
10 A
7 A
3 A
4 A
2 A
5 A
22 A
23 A
24 A
25 A
22 B
Rear Fog
Front Fog
Turn RH
Turn LH
P
R
N
D
2
L
O/D OFF
30 A
ECT and A/T Indicator System<9–7>
31 CAMRY (Cont' d)