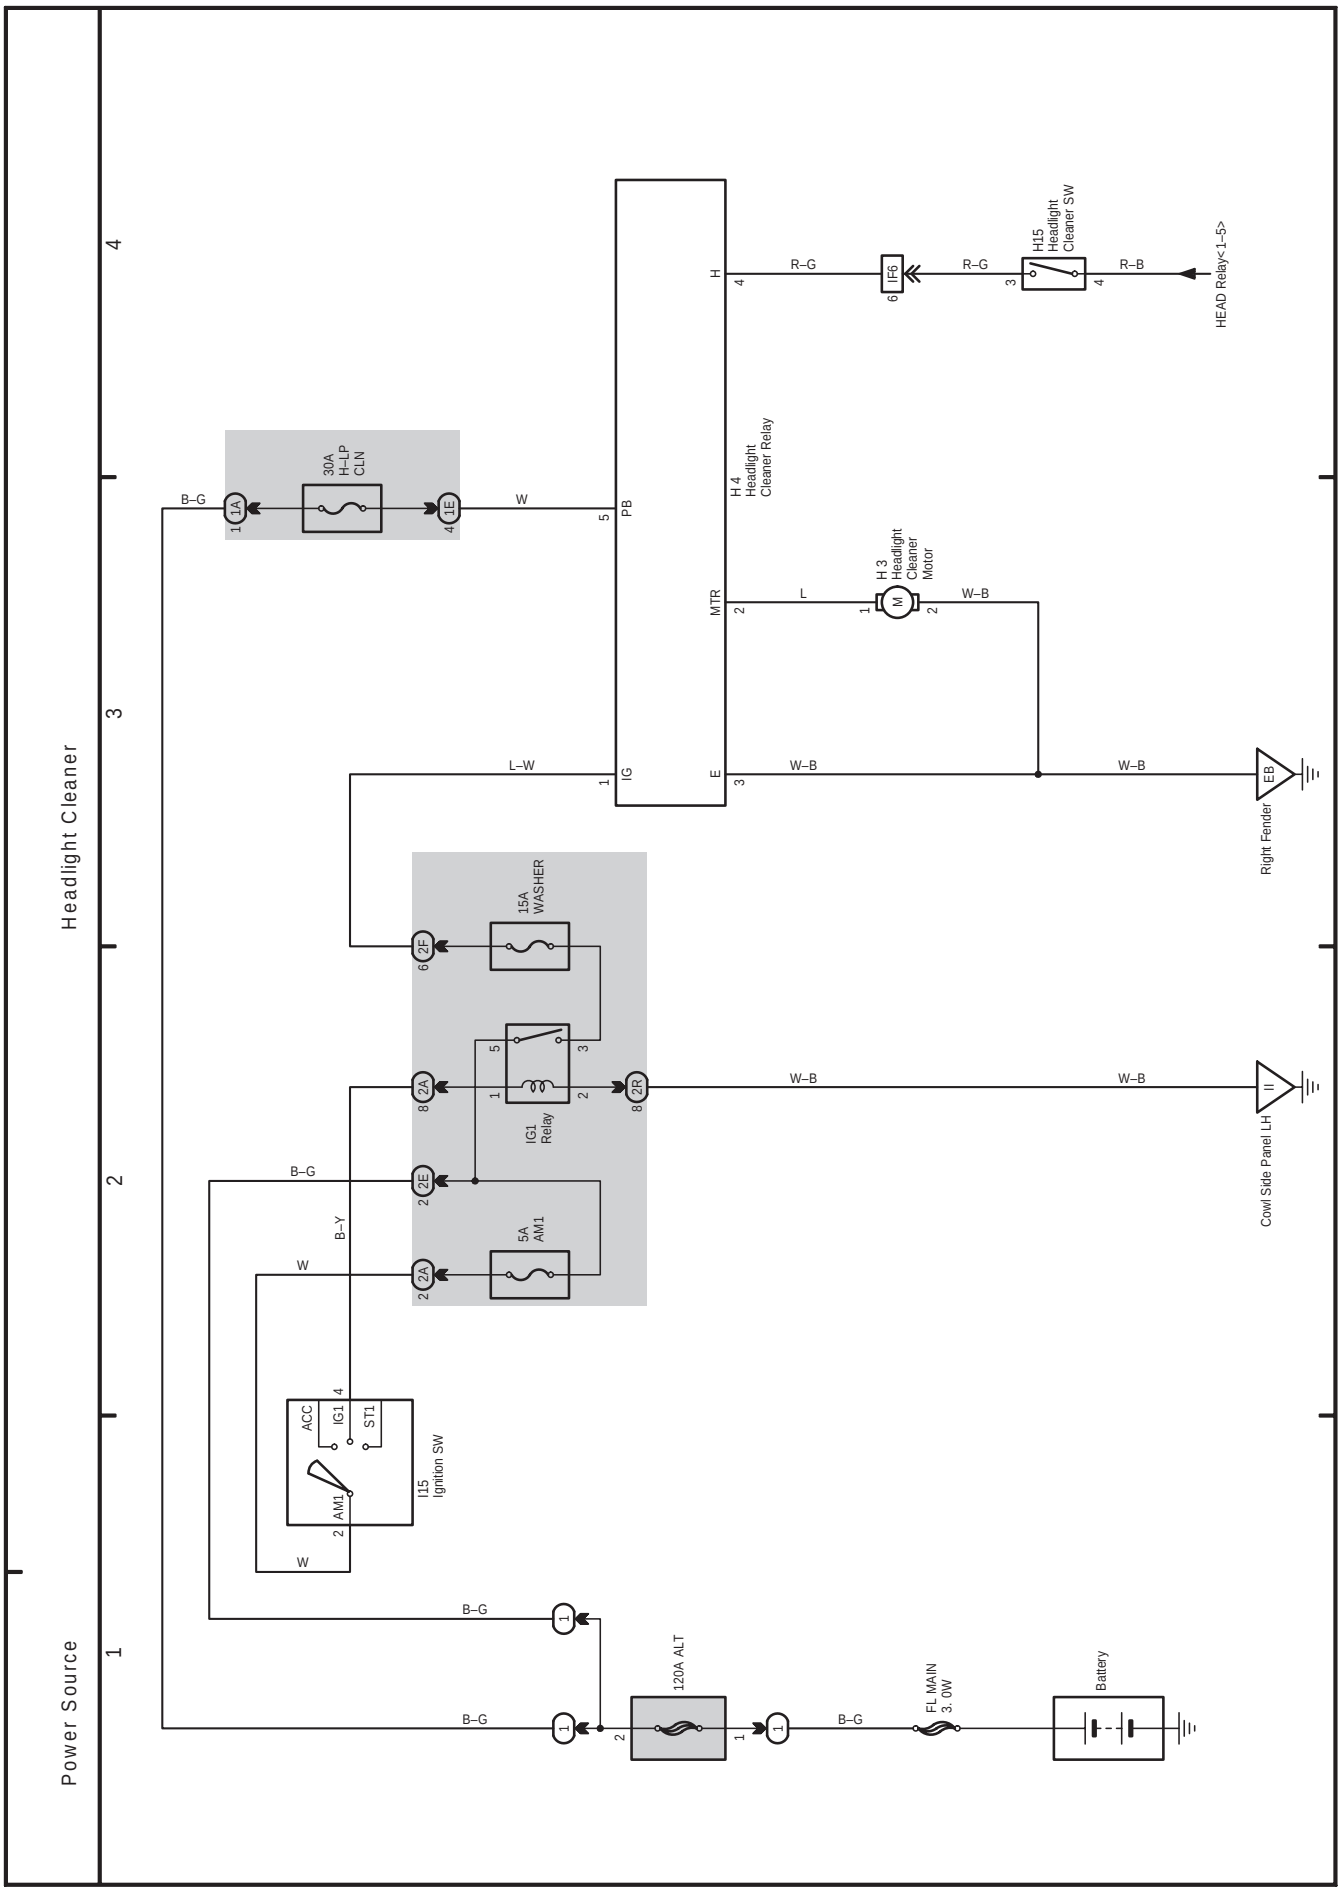

36 CAMRY
Power Source
Headlight Cleaner
1
2
3
4
30A H-LP CLN
1A
1E
B–G
W
5
PB
IG
1
H 4 Headlight Cleaner Relay
H
MTR
E
4
2
3
R–G
IF6
6
R–G
H15 Headlight Cleaner SW
3
4
R–B
HEAD Relay<1–5>
H 3 Headlight Cleaner Motor
M
1
2
L
W–B
L–W
W–B
W–B
EB
Right Fender
15A WASHER
2F
6
IG1 Relay
5
3
1
2
2A
8
2R
8
W–B
W–B
II
Cowl Side Panel LH
B–G
2E
2
B–Y
5A AM1
W
2A
2
ACC
IG1
ST1
4
AM1
2
I15 Ignition SW
W
B–G
1
B–G
1
120A ALT
2
1
1
B–G
FL MAIN 3. 0W
Battery