
ILLUMINATION FOR PANEL SWITCH DOES NOT COME ON WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1	DISPLAY CHECK MODE(VEHICLE SIGNAL CHECK MODE)

(a) Enter the ”Display Check” mode (Vehicle Signal Check Mode) (see page 05–54).

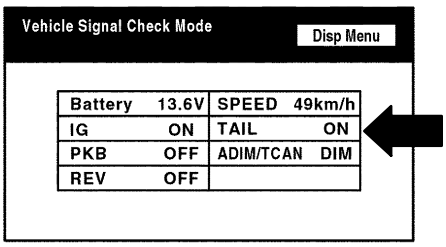

(b) Turn the light control switch TAIL or ON and OFF.

Standard:

TAIL Switch	Display
TAIL or ON	ON
OFF	OFF

HINT:

This display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK → **REPLACE RADIO AND NAVIGATION ASSY (SEE PUB. NO. RM915E, PAGE 67–4)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–46)