PANEL SWITCH DOES NOT FUNCTION

INSPECTION PROCEDURE

1	CHECK THE PANEL SWITCH


(a) Check for foreign matter around the switch that might prevent operation.
Standard: No foreign matter is found.

NG → **REMOVE ANY FOREIGN MATTER FOUND**

OK

2	DISPLAY CHECK MODE(PANEL SWITCH CHECK MODE)

(a) Enter the ”Display Check” mode (Panel Switch Check Mode) (see page 05–53).

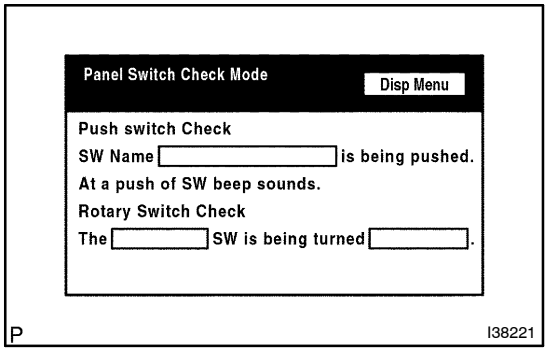

(b) Operate the abnormal switch and check if the switch name and status are correctly displayed.
Standard: The switch name and status are correctly displayed as operated.

OK → **REPLACE RADIO AND NAVIGATION ASSY (SEE PUB. NO. RM915E, PAGE 67–4)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–46)