TOUCH PANEL SWITCH DOES NOT FUNCTION

INSPECTION PROCEDURE

1	CHECK TOUCH PANEL


(a) Check for dirt on the display surface.
Standard: The display surface is clean.

NG → **REMOVE ANY DIRT FOUND AND RECHECK TOUCH PANEL**

OK

2	DISPLAY CHECK MODE(TOUCH SWITCH CHECK)

(a) Enter the ”Display Check” mode (Touch Switch Check) (see page 05–52).

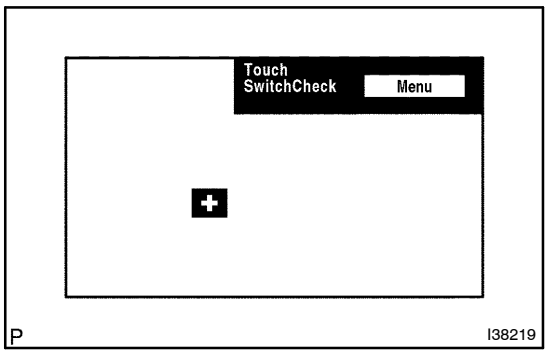

(b) Touch the display in the area where the abnormal switch occurs.
Standard: A ”+” mark appears at the touched position.

OK → **REPLACE RADIO AND NAVIGATION ASSY (SEE PUB. NO. RM915E, PAGE 67–4)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–46)