CD CANNOT BE INSERTED/PLAYED OR CD IS EJECTED RIGHT AFTER INSERTION

INSPECTION PROCEDURE

1	CHECK THE CD

(a) Check if another audio CD can be inserted.
  (1) Check if the CD is a normal audio CD, and that the CD has no cracks, scratches, deformations, dirt, or other defects.


  Standard: The CD is a normal audio CD without any problems.

HINT:
- Translucent or deformed CDs cannot be played.
- CD–ROMs (even those with music) and CD–R discs cannot be played.
- A copy protected CD should not be used.
- An adaptor is not necessary to play 3.2 inch (8 cm) CDs.

NG → **REPLACE THE CD**

OK

2	CHECK CD INSERTION

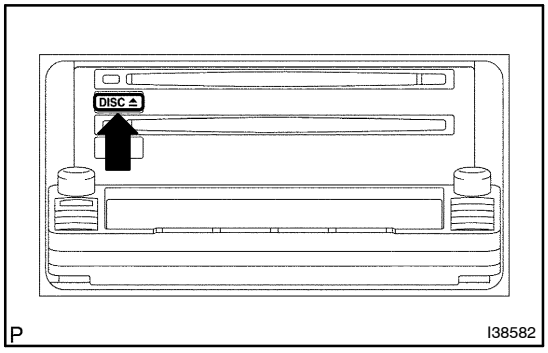

(a) Check that a CD is correctly inserted.
  (1) Check that the ”DISC” indicator near the disc slot comes on.
  (2) Check that the CD has not been inserted up side down.


  Standard: CD is inserted correctly.

NG → **INSERT THE CD CORRECTLY**

OK

3	CHECK THE CD

(a) Check for dirt on the CD surface.
Standard: The CD is clean.

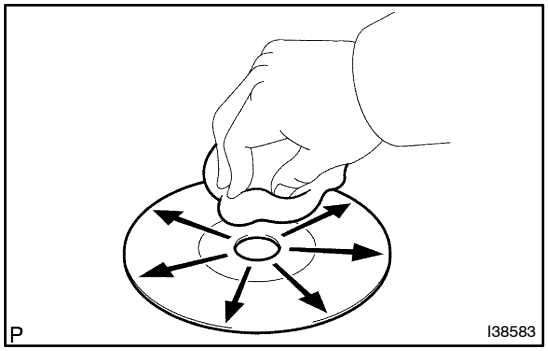

HINT:
If dirt is on the CD surface, wipe it with a soft cloth from inside to outside in a radial direction.
NOTICE:
Do not use conventional record cleaner or anti–static preservative.

NG → **CLEAN THE CD**

OK

4	CHECK USING ANOTHER CD

(a) Check using another CD.
(1) Check if the problem recurs using another CD.
Standard: The problem does not recur.

OK → **REPLACE THE CD**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05–46)