CD CANNOT BE EJECTED

INSPECTION PROCEDURE


1	CHECK RADIO AND NAVIGATION ASSY

(a) Turn the ignition switch to the ACC position.
(b) Keep pressing the "DISC" eject switch for 5 seconds and check if the disc is ejected by forced ejection.
Standard: The disc is ejected.

NG → **PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–46)**

OK

2	CHECK THE CD

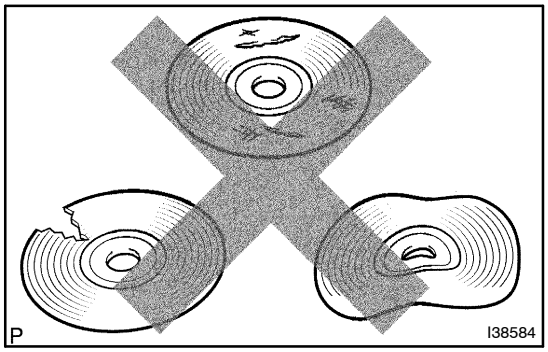

(a) Check that the CD is not deformed or cracked.
Standard: No deformations or cracks appear on the CD.

NG → **REPLACE THE CD**

OK

3	CHECK RADIO AND NAVIGATION ASSY

(a) Insert another CD and check if it is ejected.
Standard: The disc is ejected.

NG → **REPLACE RADIO AND NAVIGATION ASSY (SEE PUB. NO. RM915E, PAGE 67–4)**

OK

NORMAL OPERATION