
CD SOUND SKIPS

INSPECTION PROCEDURE

1	CHECK THE CD

(a) Check for dirt on the CD surface.
Standard: The CD is clean.

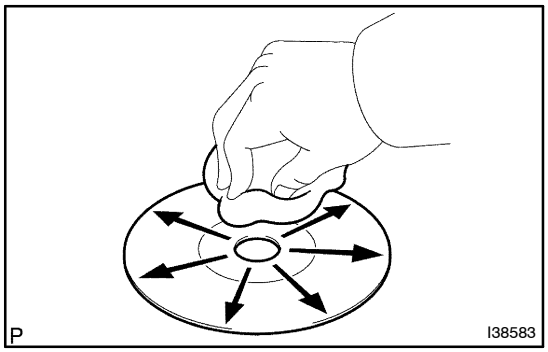


HINT:
If dirt is on the CD surface, wipe it with a soft cloth from inside to outside in a radial direction.
NOTICE:
Do not use conventional record cleaner or anti–static preservative.

NG → **CLEAN THE CD**

OK

2	CHECK THE CD

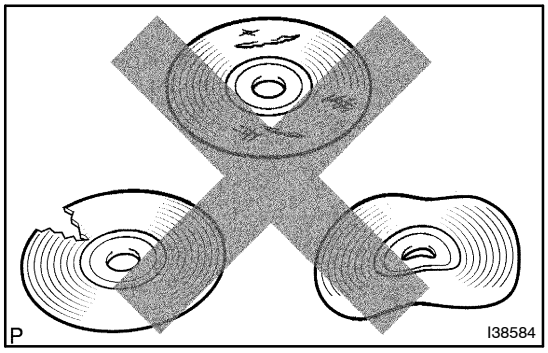

(a) Check that the CD is not deformed or cracked.
Standard: No deformations or cracks appear on the CD.

NG → **REPLACE THE CD**

OK

3	CHECK USING ANOTHER CD

(a) Check using another CD.
(1) Check if the problem recurs using another CD.
Standard: The problem does not recur.

OK → **REPLACE THE CD**

NG

4	CHECK RADIO AND NAVIGATION ASSY

(a) Check the radio and navigation assy installation condition.

(1) Check that the radio and navigation assy is properly installed (see pub. No. RM915E, page 67–4).

Standard: Radio and navigation assy is properly installed.

NG → **REINSTALL THE RADIO AND NAVIGATION ASSY PROPERLY**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05–46)