
MAP DISC CANNOT BE INSERTED

INSPECTION PROCEDURE

1	CHECK MAP DISC

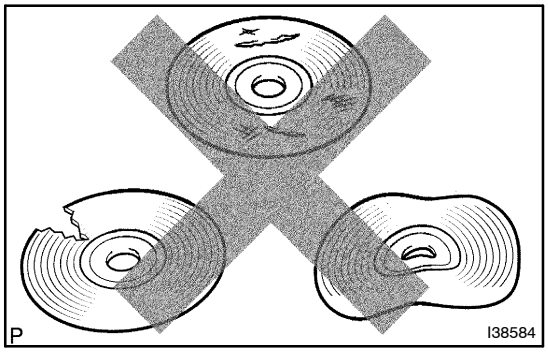


(a) Check that the map disc is not deformed or cracked.
Standard: No deformations or cracks appear on the map disc.

NG → **CHECK THE MAP DISC**

OK

2	CHECK RADIO AND NAVIGATION ASSY

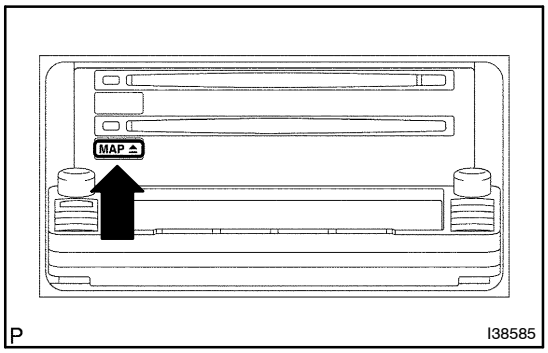

(a) Check that the ”MAP” indicator near the disc slot comes on.
Standard: It does not come on.

NG → **PRESS THE EJECT SWITCH TO EJECT THE DISC**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05–46)