MAP DISC CANNOT BE EJECTED

INSPECTION PROCEDURE


1	CHECK RADIO AND NAVIGATION ASSY

(a) Turn the ignition switch to the ACC position.
(b) Keep pressing the "MAP" eject switch for 5 seconds and check if the disc is ejected by forced ejection.
Standard: The disc is ejected.

NG → **PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE** **(SEE PAGE 05–46)**

OK

2	CHECK THE MAP DISC

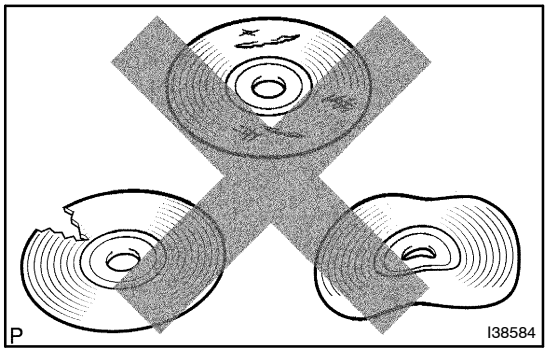

(a) Check that the map disc is not deformed or cracked.
Standard: No deformations or cracks appear on the map disc.

NG → **REPLACE THE MAP DISC**

OK

NORMAL OPERATION