
CURSOR OR MAP ROTATES WHEN VEHICLE IS STOPPED

INSPECTION PROCEDURE

1	CHECK THE CONDITION

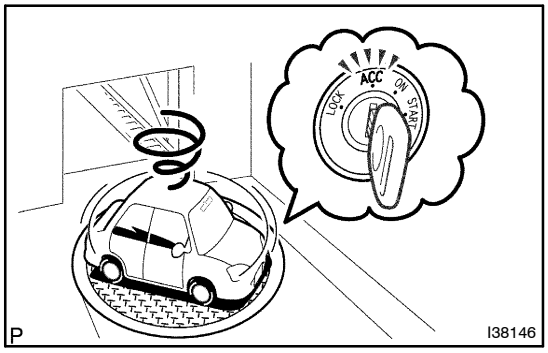

(a) Check with the customer if the vehicle has been turned by a turn–table at parking.
Standard: The vehicle has not been turned by a turn-table.

HINT:
If the ignition switch is turned to the ACC or ON position while the vehicle is being turned by a turnable, the system may store the angular velocity at this time. For this reason, the vehicle position cursor could deviate.

NG → **TURN IGNITION SWITCH TO ON POSITION WHEN VEHICLE IS COMPLETELY STOPPED**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–46)