
CURRENT POSITION DISPLAY DOES NOT APPEAR

INSPECTION PROCEDURE

1	CHECK RADIO AND NAVIGATION ASSY

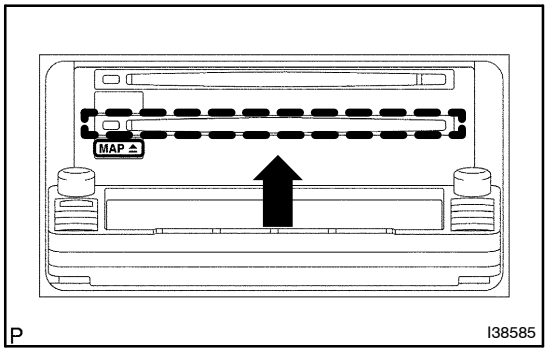


(a) Check if a map disc is inserted in the map disc slot.
Standard: A map disc is inserted.

NG → **INSERT THE MAP DISC IN THE "MAP" SIDE SLOT**

OK

2	CHECK THE MAP DISC

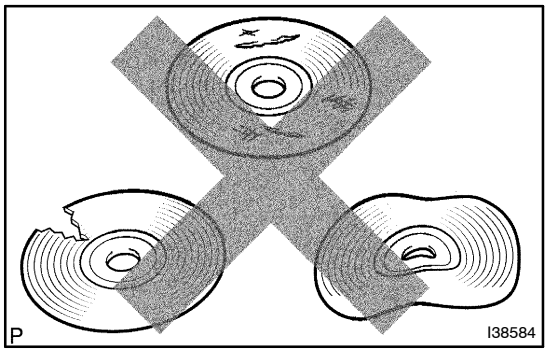

(a) Check that the map disc is not deformed or cracked.
Standard: No deformations or cracks appear on the map disc.

NG → **REPLACE THE MAP DISC**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05–46)