
GYRO ERROR

INSPECTION PROCEDURE

1	NAVIGATION CHECK MODE(VEHICLE SENSORS CHECK)

(a) Enter the ”Navigation Check” mode (Vehicle Sensors) (see page 05–56).

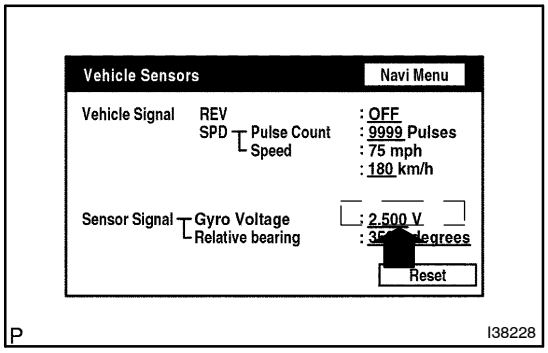

(b) Check the gyro voltage.
Standard: 0.1 to 4.5 V

NG → **REPLACE RADIO AND NAVIGATION ASSY (SEE PUB. NO. RM915E, PAGE 67–4)**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05–44)