
SPEED SIGNAL ERROR

INSPECTION PROCEDURE

1	NAVIGATION CHECK MODE(VEHICLE SENSORS CHECK)

(a) Enter the ”Navigation Check” mode (Vehicle Sensors) (see page 05–56).

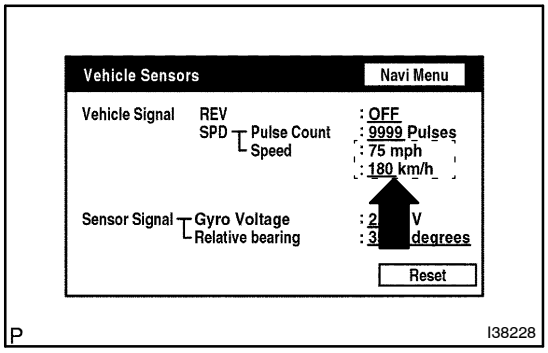

(b) While driving, compare the ”SPD” indicator to the reading on the speedometer. Check if these readings are almost the same.

Standard: The readings are almost the same.

OK → **REPLACE RADIO AND NAVIGATION ASSY (SEE PUB. NO. RM915E, PAGE 67–4)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05–44)