
POWER SOURCE CIRCUIT (AUTO ANTENNA CONTROL RELAY)

CIRCUIT DESCRIPTION

This circuit provides the power to the auto antenna control relay.


WIRING DIAGRAM

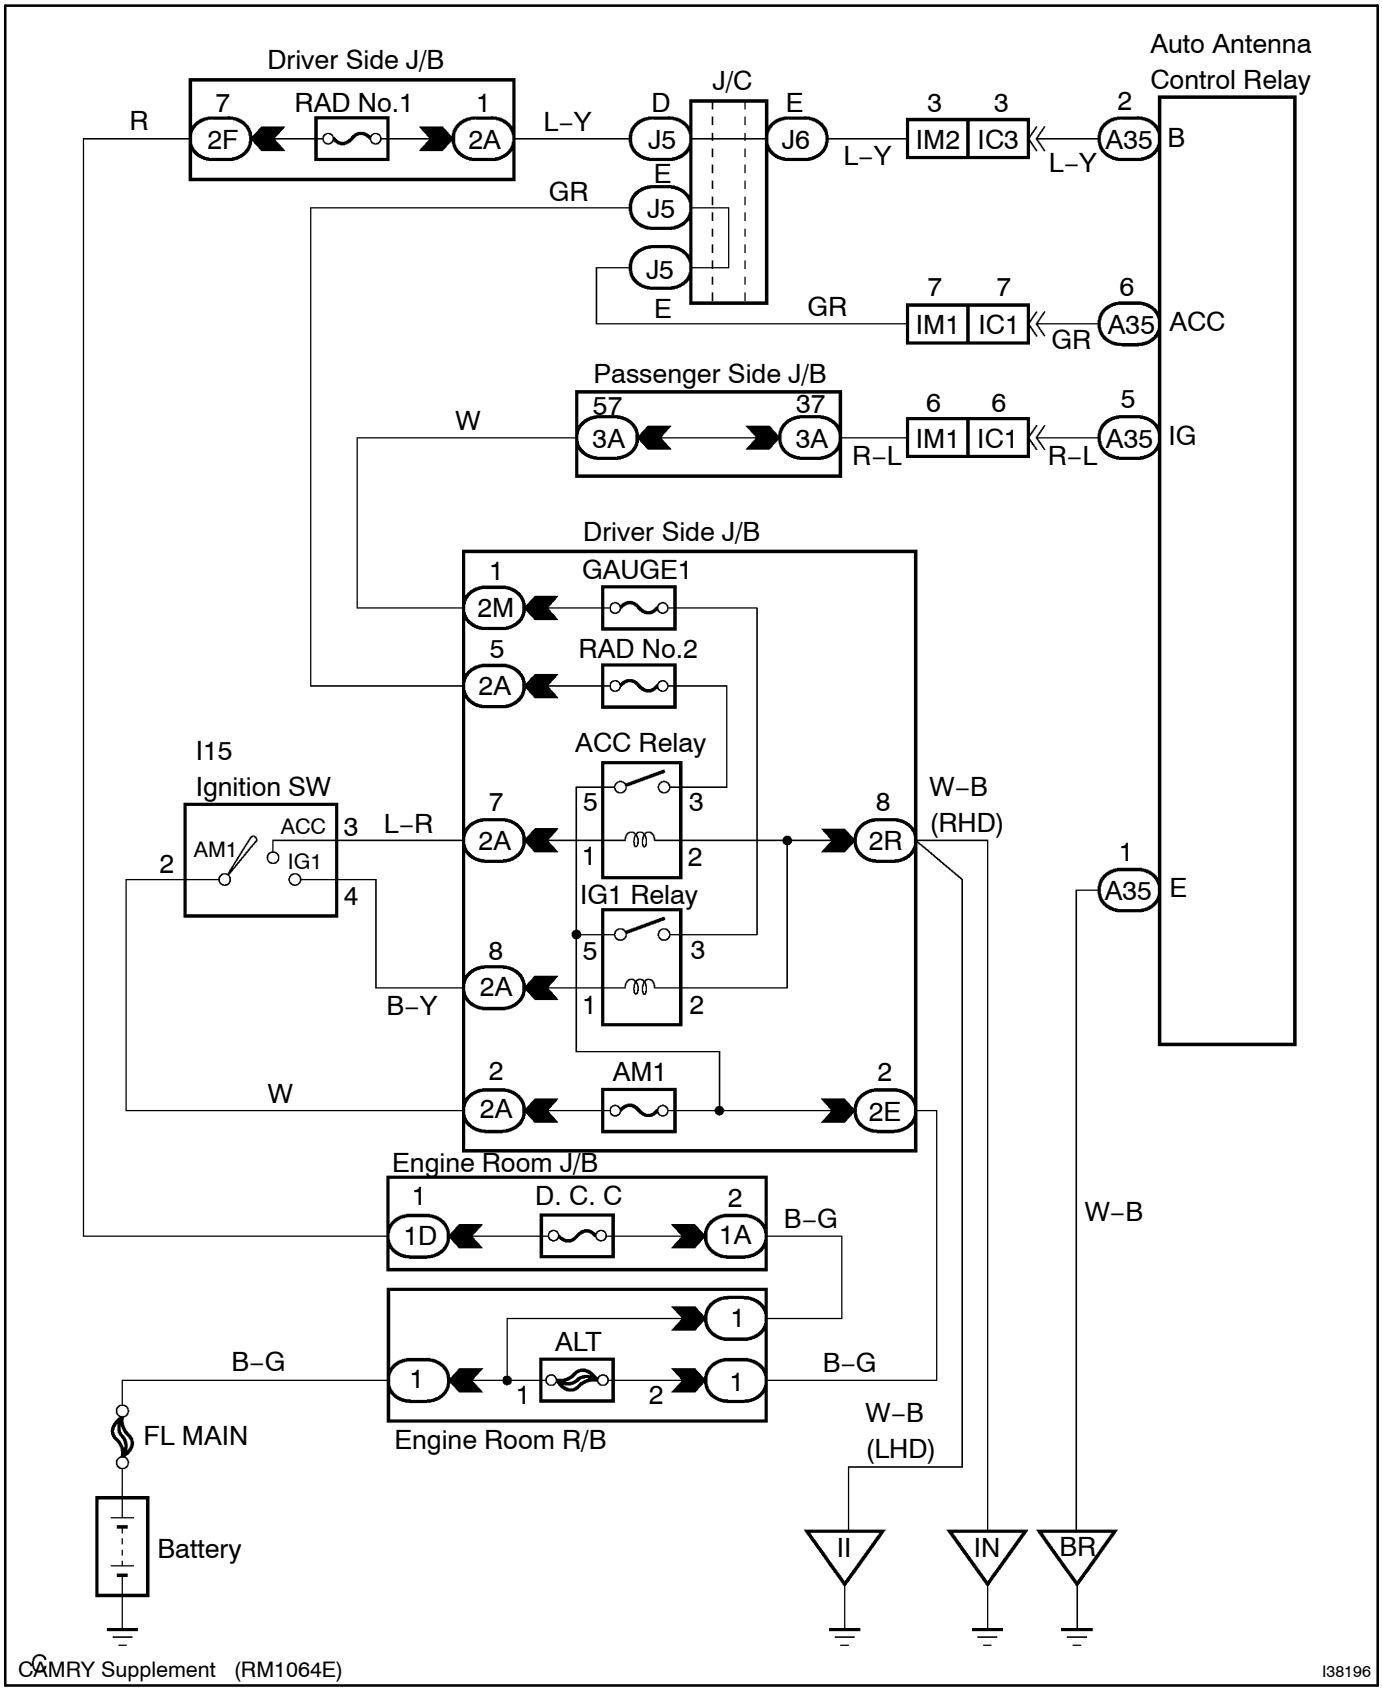

I38196

INSPECTION PROCEDURE

1	INSPECT AUTO ANTENNA CONTROL RELAY(B, ACC, IG, E)

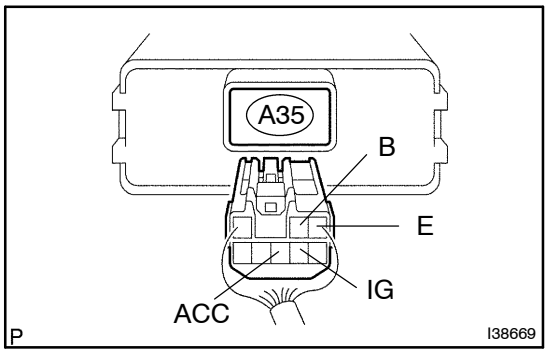

(a) Disconnect the auto antenna control relay connector A35.

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
E – Body ground	Always	Below 1 Ω

(c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
B – E	Always	10 to 14 V
IG – E	Ignition SW ON	10 to 14 V
ACC – E	Ignition SW ACC	10 to 14 V

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05–46)