


DRIVE SHAFT, PROPELLER SHAFT, AXLE (From July, 2003)

300MK–01

COMPONENTS

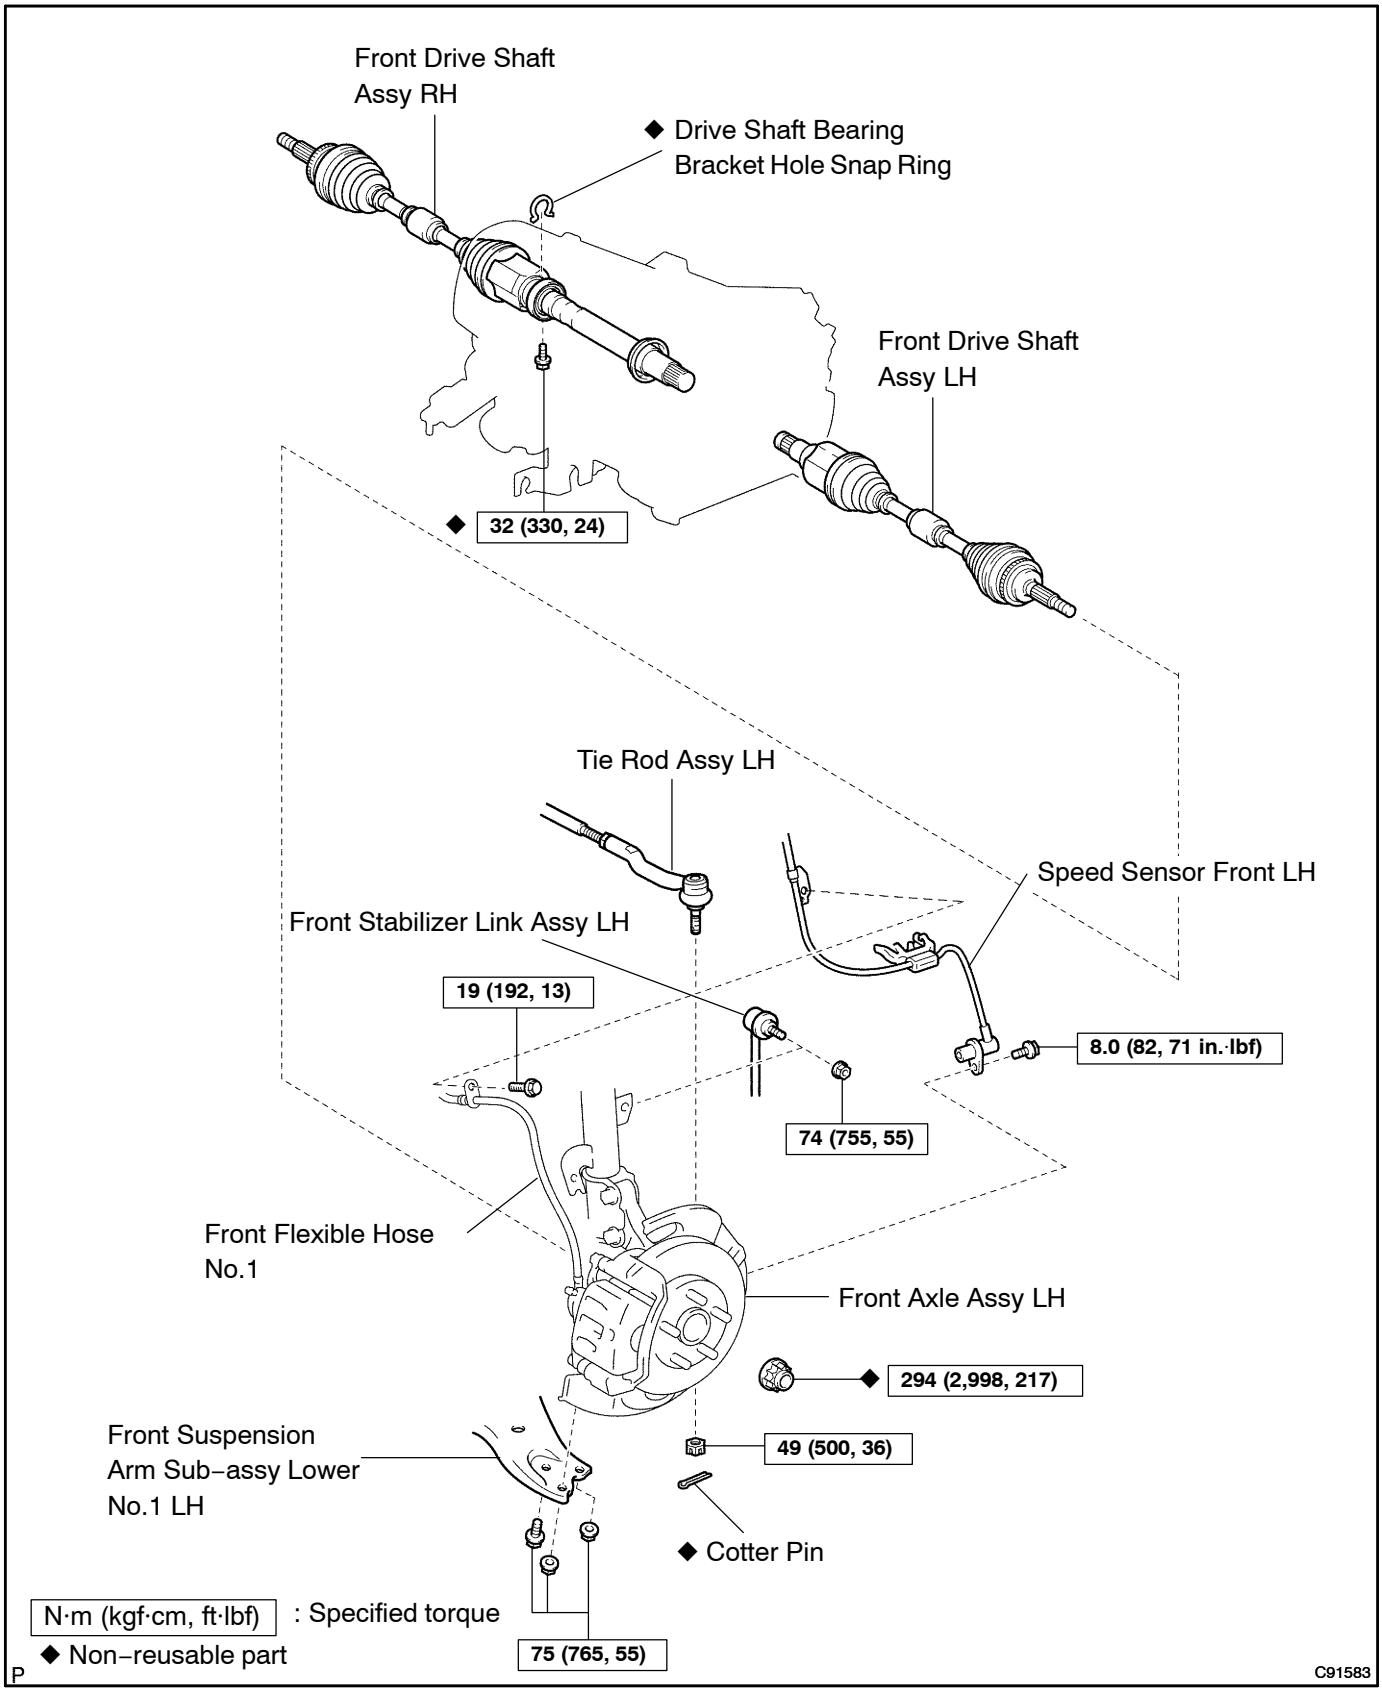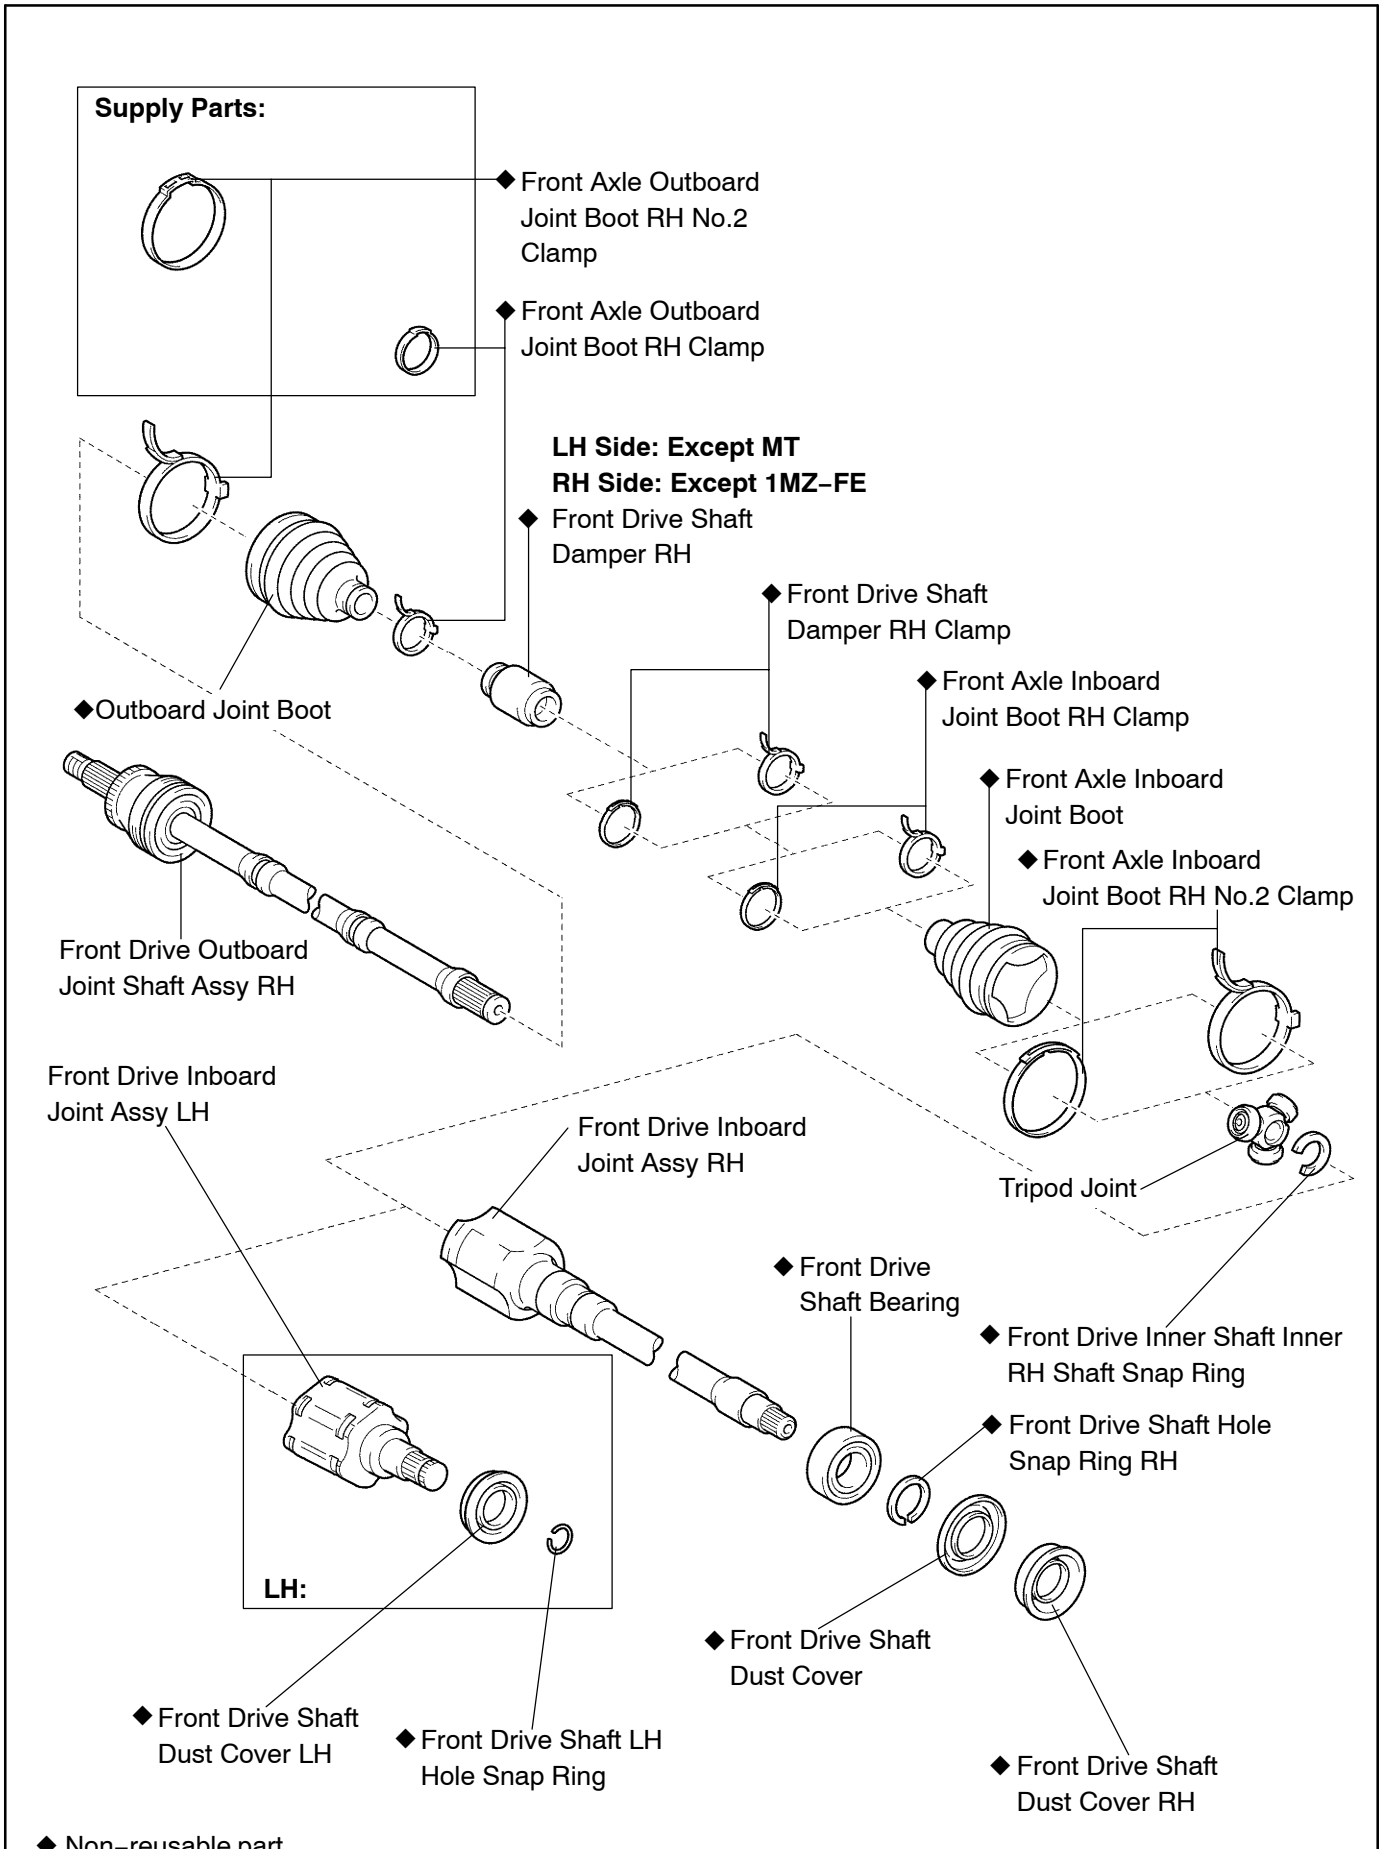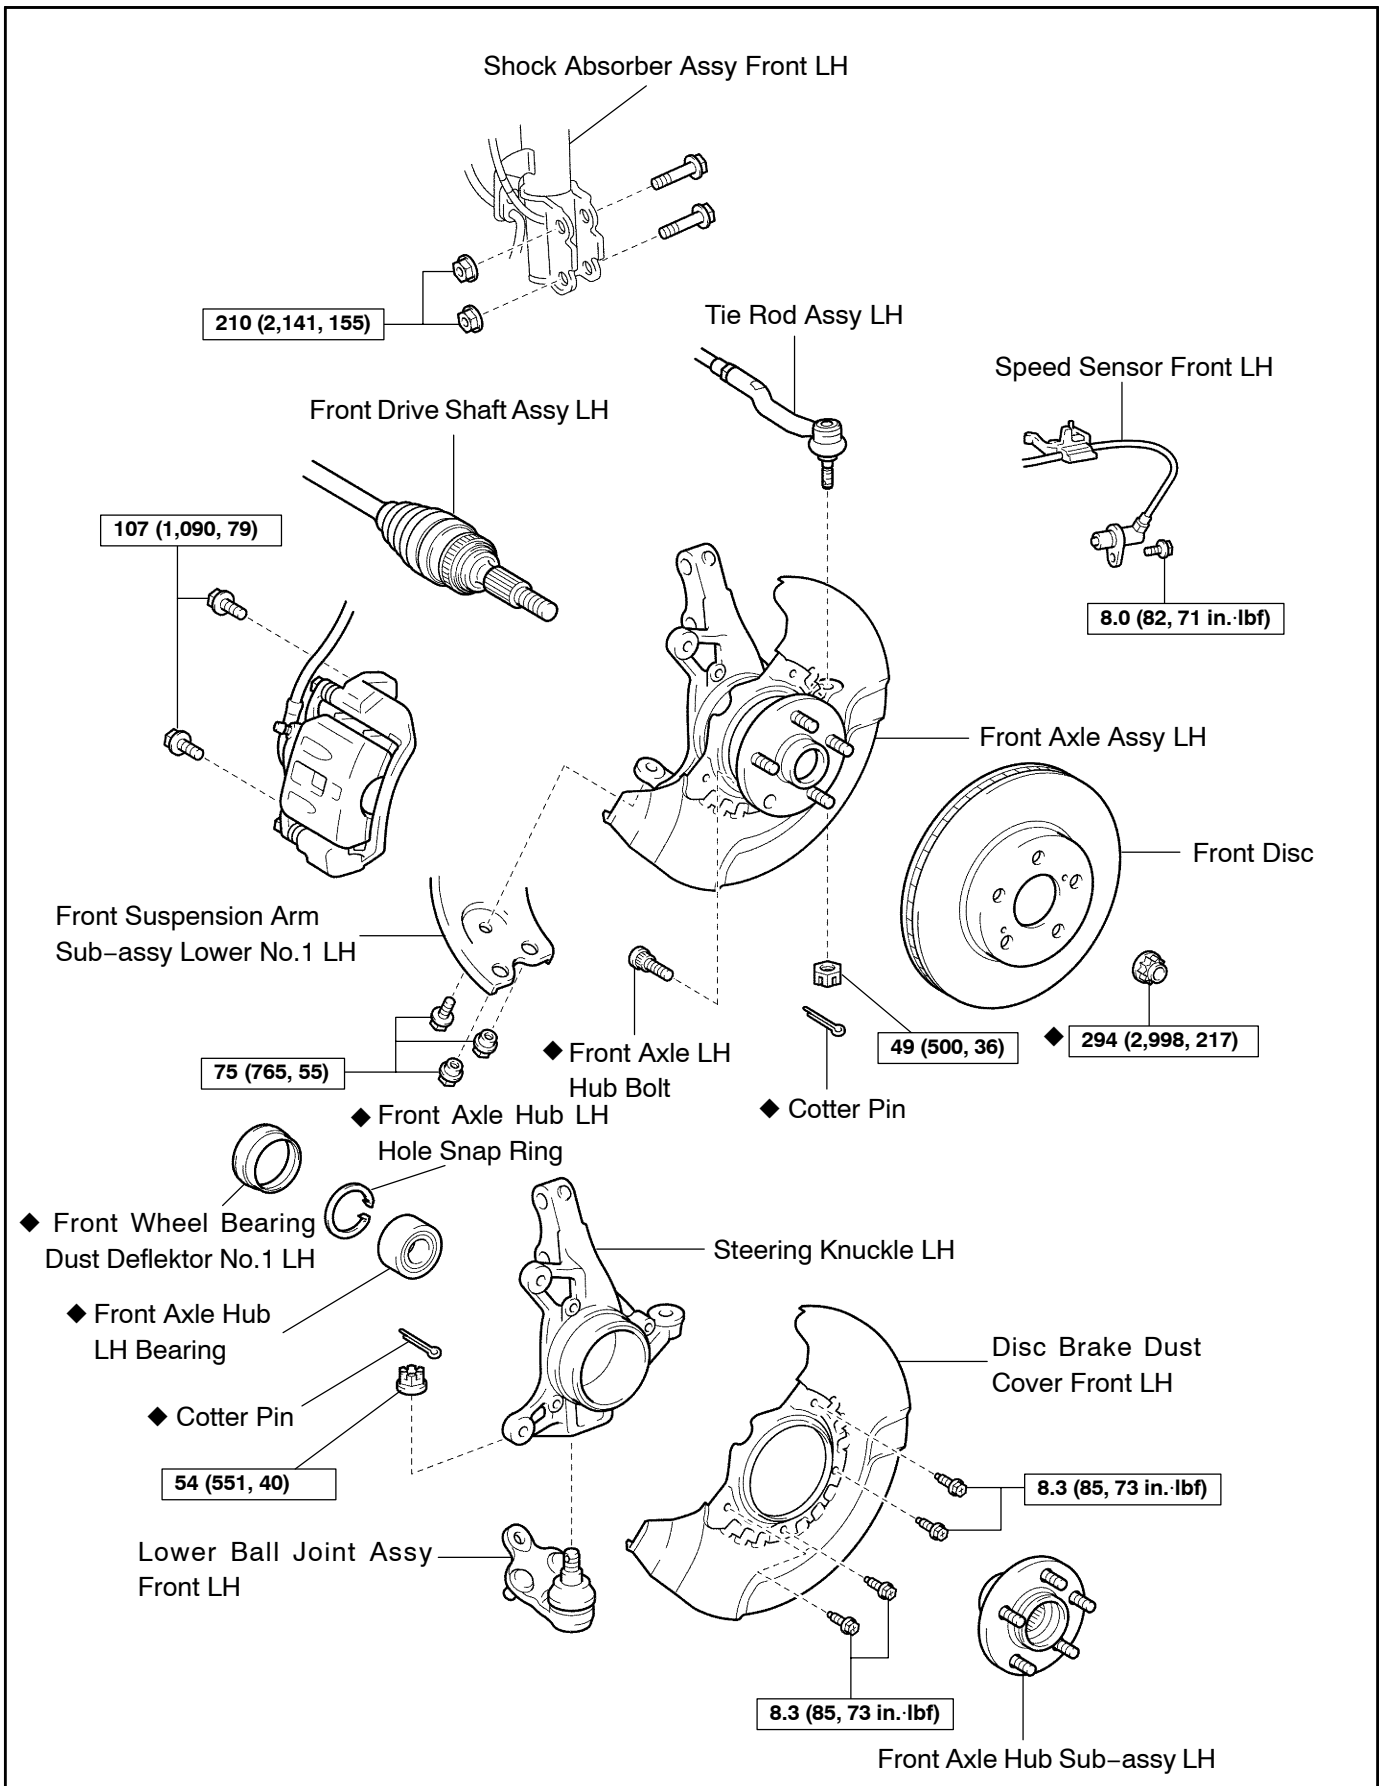


Supply Parts:
◆ Front Axle Outboard Joint Boot RH No.2 Clamp
◆ Front Axle Outboard Joint Boot RH Clamp
LH Side: Except MT
RH Side: Except 1MZ–FE
◆ Front Drive Shaft Damper RH
◆ Front Drive Shaft Damper RH Clamp
◆ Front Axle Inboard Joint Boot RH Clamp
◆ Front Axle Inboard Joint Boot
◆ Front Axle Inboard Joint Boot RH No.2 Clamp
◆ Outboard Joint Boot
Front Drive Outboard Joint Shaft Assy RH
Front Drive Inboard Joint Assy LH
Front Drive Inboard Joint Assy RH
Tripod Joint
◆ Front Drive Shaft Bearing
◆ Front Drive Inner Shaft Inner RH Shaft Snap Ring
◆ Front Drive Shaft Hole Snap Ring RH
LH:
◆ Front Drive Shaft Dust Cover
◆ Front Drive Shaft Dust Cover LH
◆ Front Drive Shaft LH Hole Snap Ring
◆ Front Drive Shaft Dust Cover RH
◆ Non–reusable part
F47213


Shock Absorber Assy Front LH
210 (2,141, 155)
Tie Rod Assy LH
Speed Sensor Front LH
Front Drive Shaft Assy LH
107 (1,090, 79)
8.0 (82, 71 in.·lbf)
Front Axle Assy LH
Front Disc
Front Suspension Arm Sub–assy Lower No.1 LH
75 (765, 55)
◆ Front Axle LH Hub Bolt
49 (500, 36)
◆ 294 (2,998, 217)
◆ Cotter Pin
◆ Front Axle Hub LH Hole Snap Ring
◆ Front Wheel Bearing Dust Deflektor No.1 LH
Steering Knuckle LH
◆ Front Axle Hub LH Bearing
Disc Brake Dust Cover Front LH
◆ Cotter Pin
54 (551, 40)
8.3 (85, 73 in.·lbf)
Lower Ball Joint Assy Front LH
8.3 (85, 73 in.·lbf)
Front Axle Hub Sub–assy LH
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
G29588