
CLUTCH ACCUMULATOR ASSY (From July, 2003)

4207M–01

REPLACEMENT

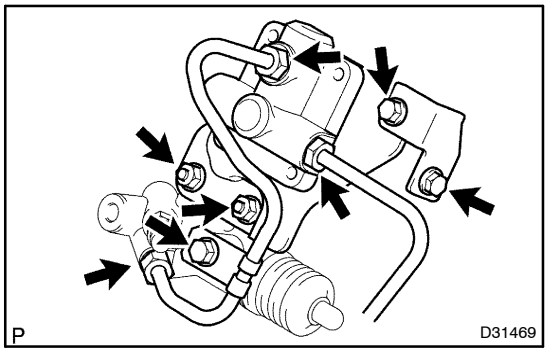

1. DISCONNECT CLUTCH RELEASE CYLINDER TO FLEXIBLE HOSE TUBE

(a) Remove the bolt and separate the tube clamp bracket.

(b) Using SST, disconnect the 3 flexible hose tubes.
SST 09023–00100


HINT:

Use a container to catch the fluid.

2. REMOVE CLUTCH ACCUMULATOR ASSY

(a) Remove the 2 bolts and flexible hose bracket No.2.

(b) Remove the 2 nuts and clutch accumulator assy.

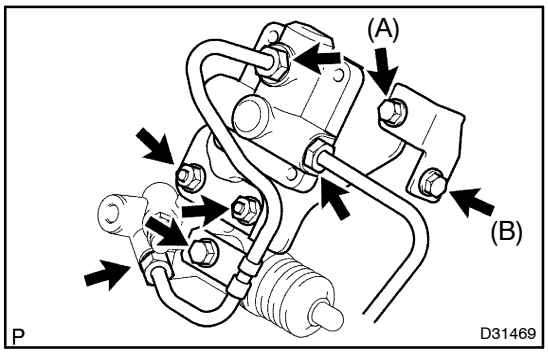

3. INSTALL CLUTCH ACCUMULATOR ASSY

(a) Install the clutch accumulator assy with the 2 nuts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

(b) Install the flexible hose bracket No.2 with the 2 bolts.
Torque:
Bolt A: 12 N·m (120 kgf·cm, 9 ft·lbf)
Bolt B: 39 N·m (398 kgf·cm, 29 ft·lbf)

4. CONNECT CLUTCH RELEASE CYLINDER TO FLEXIBLE HOSE TUBE

(a) Using SST, connect the 3 flexible hose tubes to the clutch accumulator assy.
SST 09023–00100
Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

(b) Install the tube clamp bracket with the bolt.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

5. BLEED CLUTCH PIPE LINE

(a) Fill the brake reservoir tank with brake fluid and bleed the clutch system.
Torque: 8.3 N·m (85 kgf·cm, 73 ft·lbf)

6. CHECK CLUTCH FLUID LEAKAGE

7. CHECK FLUID LEVEL IN RESERVOIR