

05MDF–01

SYSTEM DIAGRAM

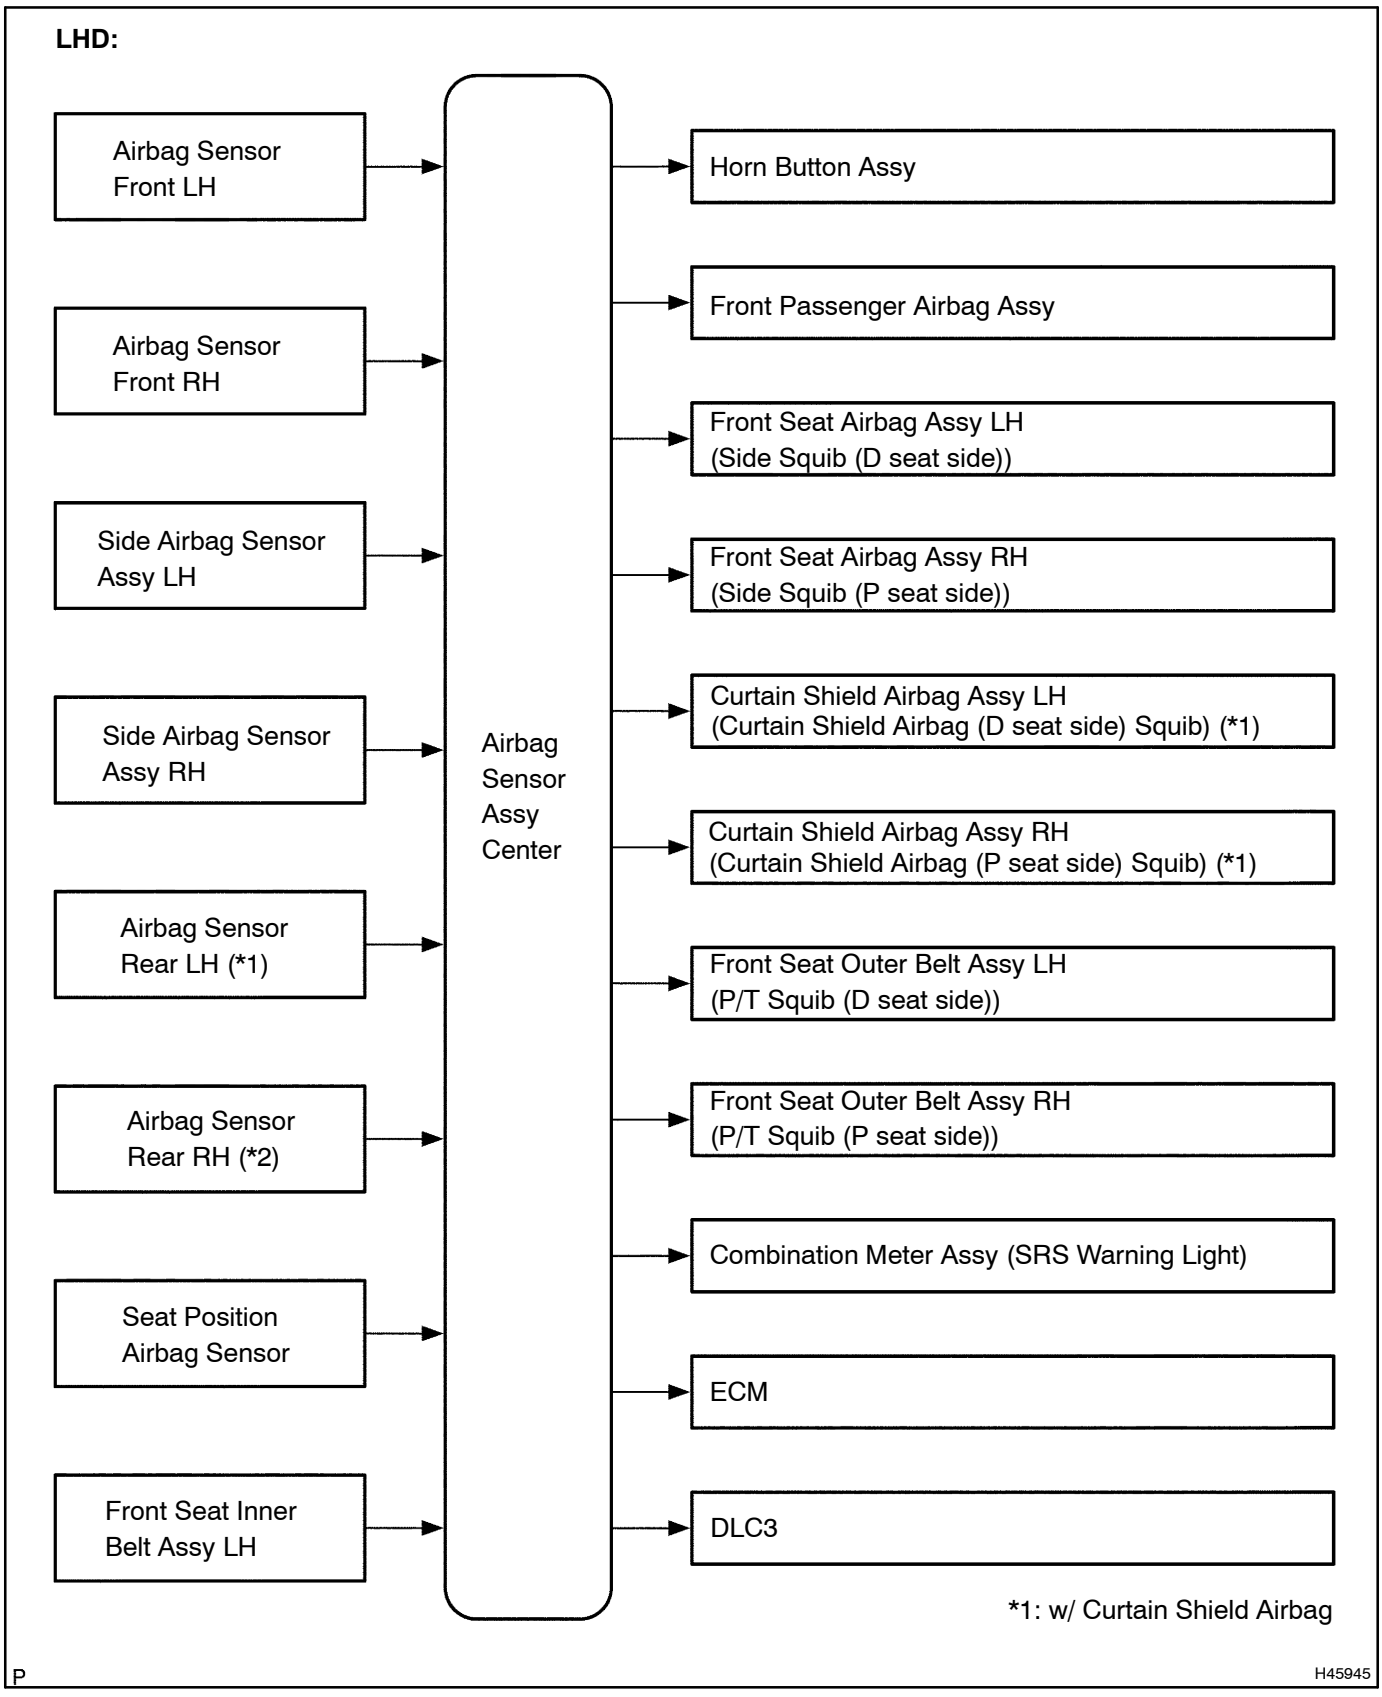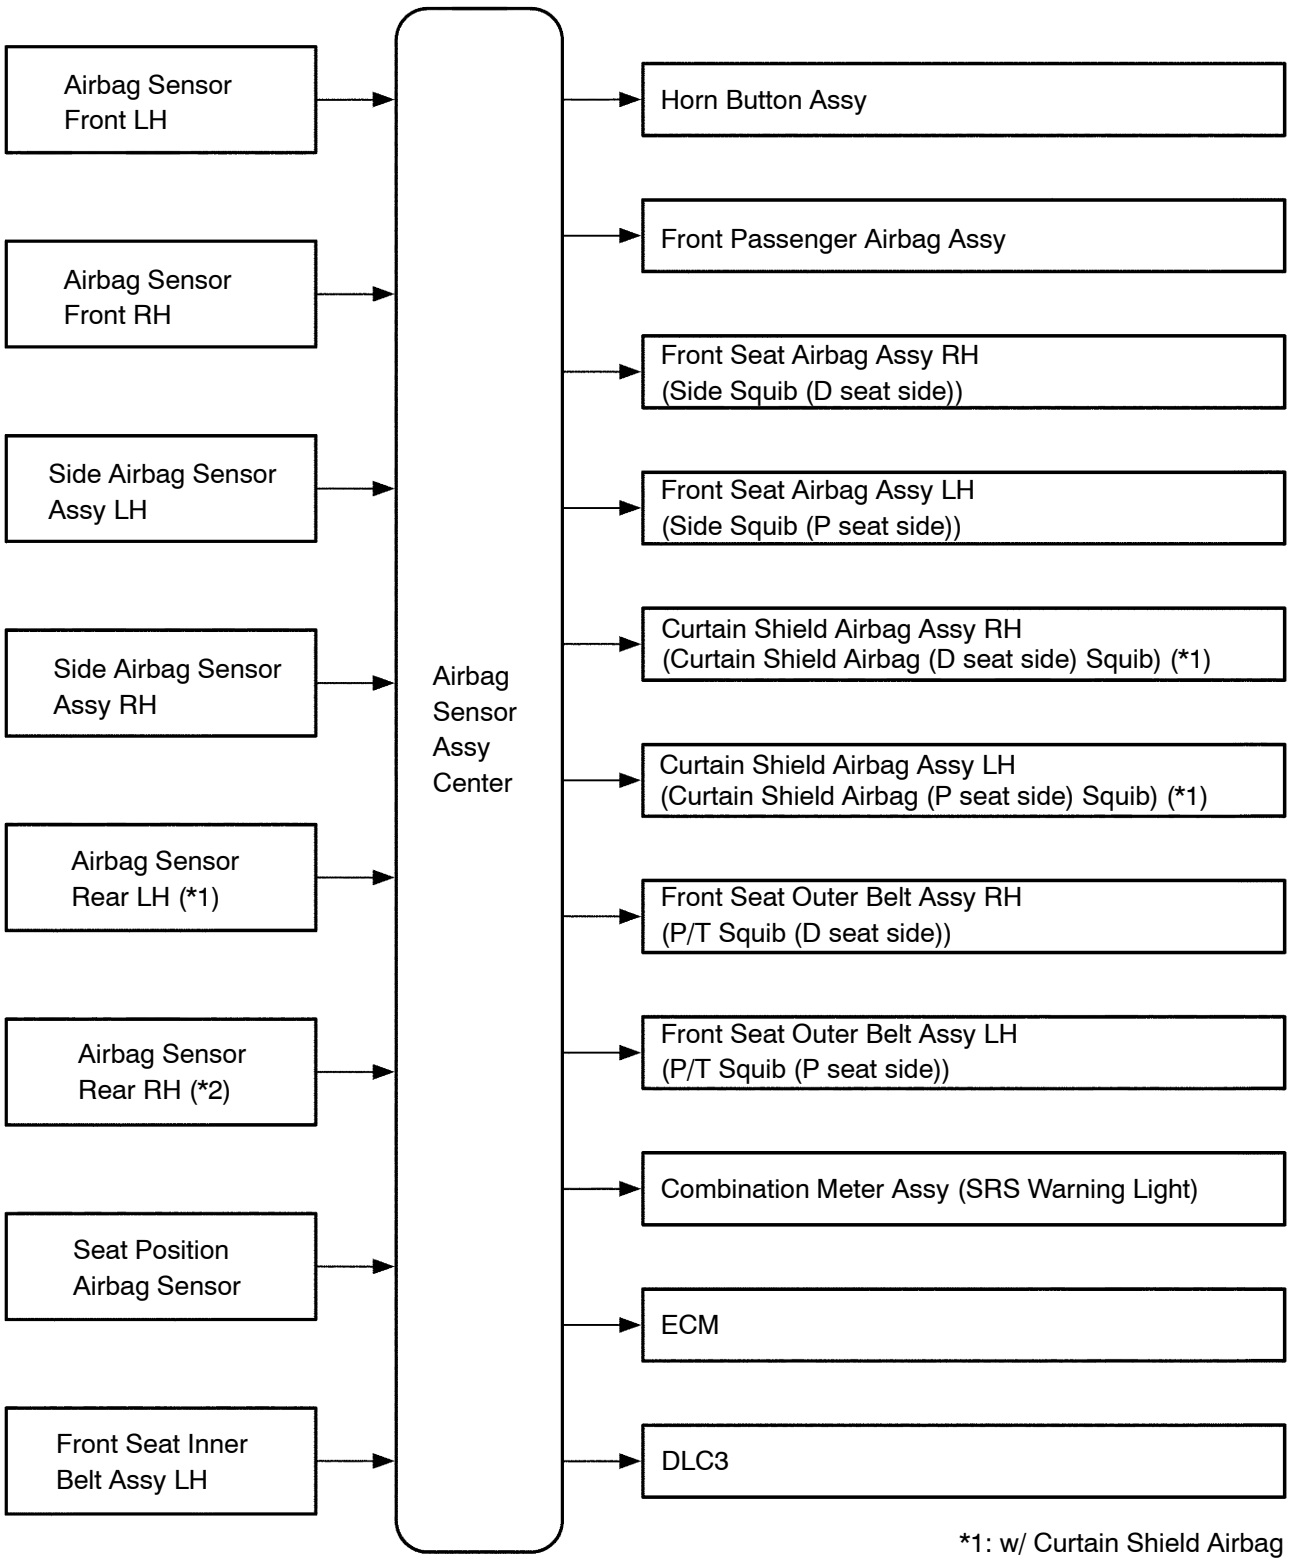

RHD:


Airbag Sensor Front LH
Airbag Sensor Front RH
Side Airbag Sensor Assy LH
Side Airbag Sensor Assy RH
Airbag Sensor Rear LH (*1)
Airbag Sensor Rear RH (*2)
Seat Position Airbag Sensor
Front Seat Inner Belt Assy LH
Airbag Sensor Assy Center
Horn Button Assy
Front Passenger Airbag Assy
Front Seat Airbag Assy RH (Side Squib (D seat side))
Front Seat Airbag Assy LH (Side Squib (P seat side))
Curtain Shield Airbag Assy RH (Curtain Shield Airbag (D seat side) Squib) (*1)
Curtain Shield Airbag Assy LH (Curtain Shield Airbag (P seat side) Squib) (*1)
Front Seat Outer Belt Assy RH (P/T Squib (D seat side))
Front Seat Outer Belt Assy LH (P/T Squib (P seat side))
Combination Meter Assy (SRS Warning Light)
ECM
DLC3
*1: w/ Curtain Shield Airbag
P
H45945