
05D5Z–07

TERMINALS OF ECU

1. AIRBAG SENSOR ASSY CENTER

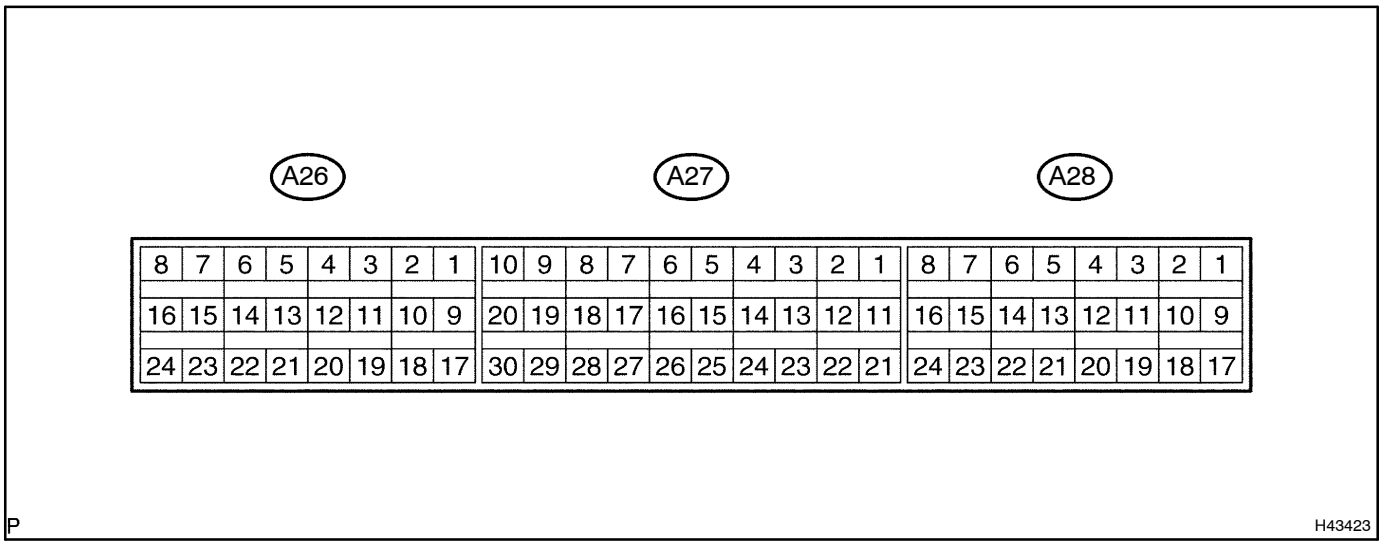

Terminal No.	Terminal Symbol	Destination
A26–1	SFD+	Front seat airbag assy LH (Side squib (D seat side)) (*2) Front seat airbag assy RH (Side squib (D seat side)) (*3)
A26–2	SFD–	Front seat airbag assy LH (Side squib (D seat side)) (*2) Front seat airbag assy RH (Side squib (D seat side)) (*3)
A26–3 (*1)	ICD–	Curtain shield airbag assy LH (Curtain shield airbag (D seat side) squib) (*2) Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib) (*3)
A26–4 (*1)	ICD+	Curtain shield airbag assy LH (Curtain shield airbag (D seat side) squib) (*2) Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib) (*3)
A26–5	PD+	Front seat outer belt assy LH (P/T squib (D seat side)) (*2) Front seat outer belt assy RH (P/T squib (D seat side)) (*3)
A26–6	PD–	Front seat outer belt assy LH (P/T squib (D seat side)) (*2) Front seat outer belt assy RH (P/T squib (D seat side)) (*3)
A26–9	DSP+	Seat position airbag sensor
A26–10	DBE+	Front seat inner belt assy LH (*2) Front seat inner belt assy RH (*3)
A26–17	DSP–	Seat position airbag sensor
A26–18	DBE–	Front seat inner belt assy LH (*2) Front seat inner belt assy RH (*3)
A26–19	VUPD	Side airbag sensor assy LH (*2) Side airbag sensor assy RH (*3)
A26–20 (*1)	VUCD	Airbag sensor rear LH (*2) Airbag sensor rear RH (*3)
A26–21	ESD	Side airbag sensor assy LH (*2) Side airbag sensor assy RH (*3)
A26–22 (*1)	ESCD	Airbag sensor rear LH (*2) Airbag sensor rear RH (*3)
A27–1	P2+	Front passenger airbag assy (P squib (Dual stage – 2nd step))
A27–2	P2–	Front passenger airbag assy (P squib (Dual stage – 2nd step))
A27–3	P–	Front passenger airbag assy (P squib)
A27–4	P+	Front passenger airbag assy (P squib)
A27–5	D+	Horn button assy (D squib)

Terminal No.	Terminal Symbol	Destination
A27–6	D–	Horn button assy (D squib)
A27–7	D2–	Horn button assy (D squib (Dual stage – 2nd step))
A27–8	D2+	Horn button assy (D squib (Dual stage – 2nd step))
A27–14	LA	Combination meter assy (SRS warning light)
A27–15	TC	DLC3
A27–16	SIL	DLC3
A27–21	IG2	IG2 Fuse (Power source)
A27–25	E1	Ground
A27–26	E2	Ground
A27–27	–SR	Airbag sensor front RH
A27–28	–SL	Airbag sensor front LH
A27–29	+SR	Airbag sensor front RH
A27–30	+SL	Airbag sensor front LH
A28–3	PP–	Front seat outer belt assy RH (P/T squib (P seat side)) (*2) Front seat outer belt assy LH (P/T squib (P seat side)) (*3)
A28–4	PP+	Front seat outer belt assy RH (P/T squib (P seat side)) (*2) Front seat outer belt assy LH (P/T squib (P seat side)) (*3)
A28–5 (*1)	ICP+	Curtain shield airbag assy RH (Curtain shield airbag (P seat side) squib) (*2) Curtain shield airbag assy LH (Curtain shield airbag (P seat side) squib) (*3)
A28–6 (*1)	ICP–	Curtain shield airbag assy RH (Curtain shield airbag (P seat side) squib) (*2) Curtain shield airbag assy LH (Curtain shield airbag (P seat side) squib) (*3)
A28–7	SFP–	Front seat airbag assy RH (Side squib (P seat side)) (*2) Front seat airbag assy LH (Side squib (P seat side)) (*3)
A28–8	SFP+	Front seat airbag assy RH (Side squib (P seat side)) (*2) Front seat airbag assy LH (Side squib (P seat side)) (*3)
A28–19 (*1)	ESCP	Airbag sensor assy RH (*2) Airbag sensor assy LH (*3)
A28–20	ESP	Side airbag sensor assy RH (*2) Side airbag sensor assy LH (*3)
A28–21 (*1)	VUCP	Airbag sensor assy RH (*2) Airbag sensor assy LH (*3)
A28–22	VUPP	Side airbag sensor assy RH (*2) Side airbag sensor assy LH (*3)

*1: w/ Curtain shield airbag
*2: LHD
*3: RHD