


COMBINATION METER

LOCATION

05ME6–01

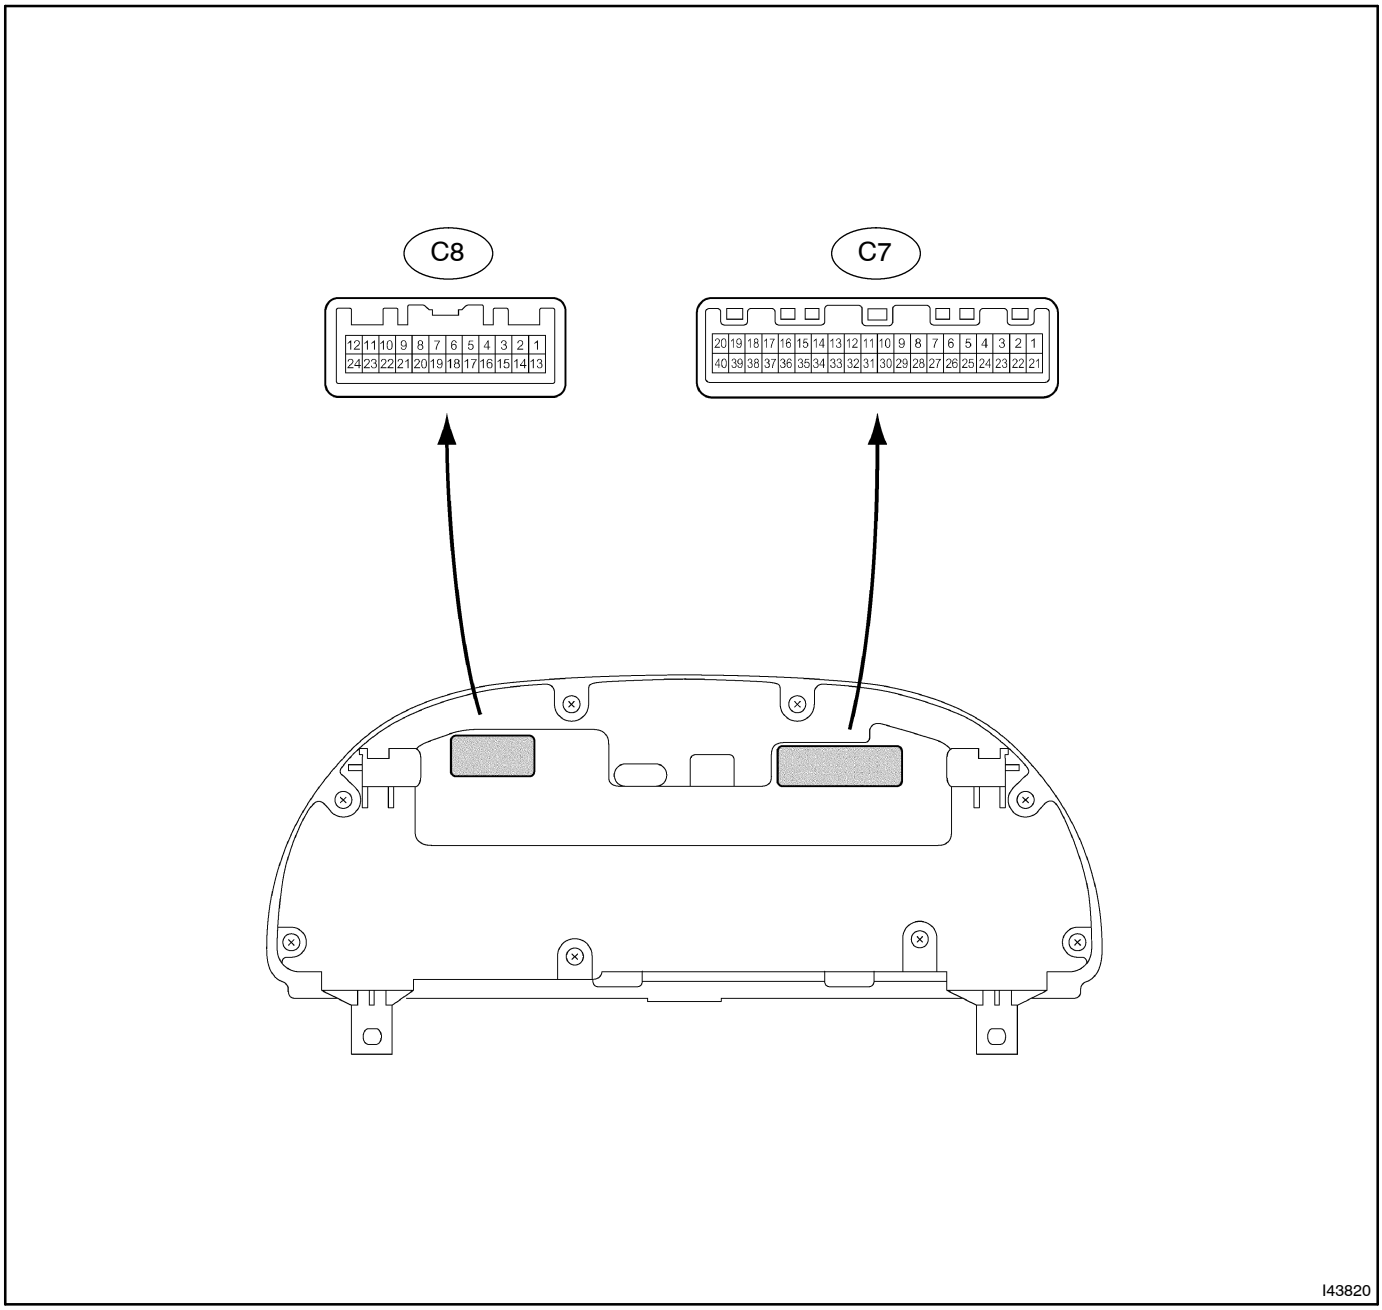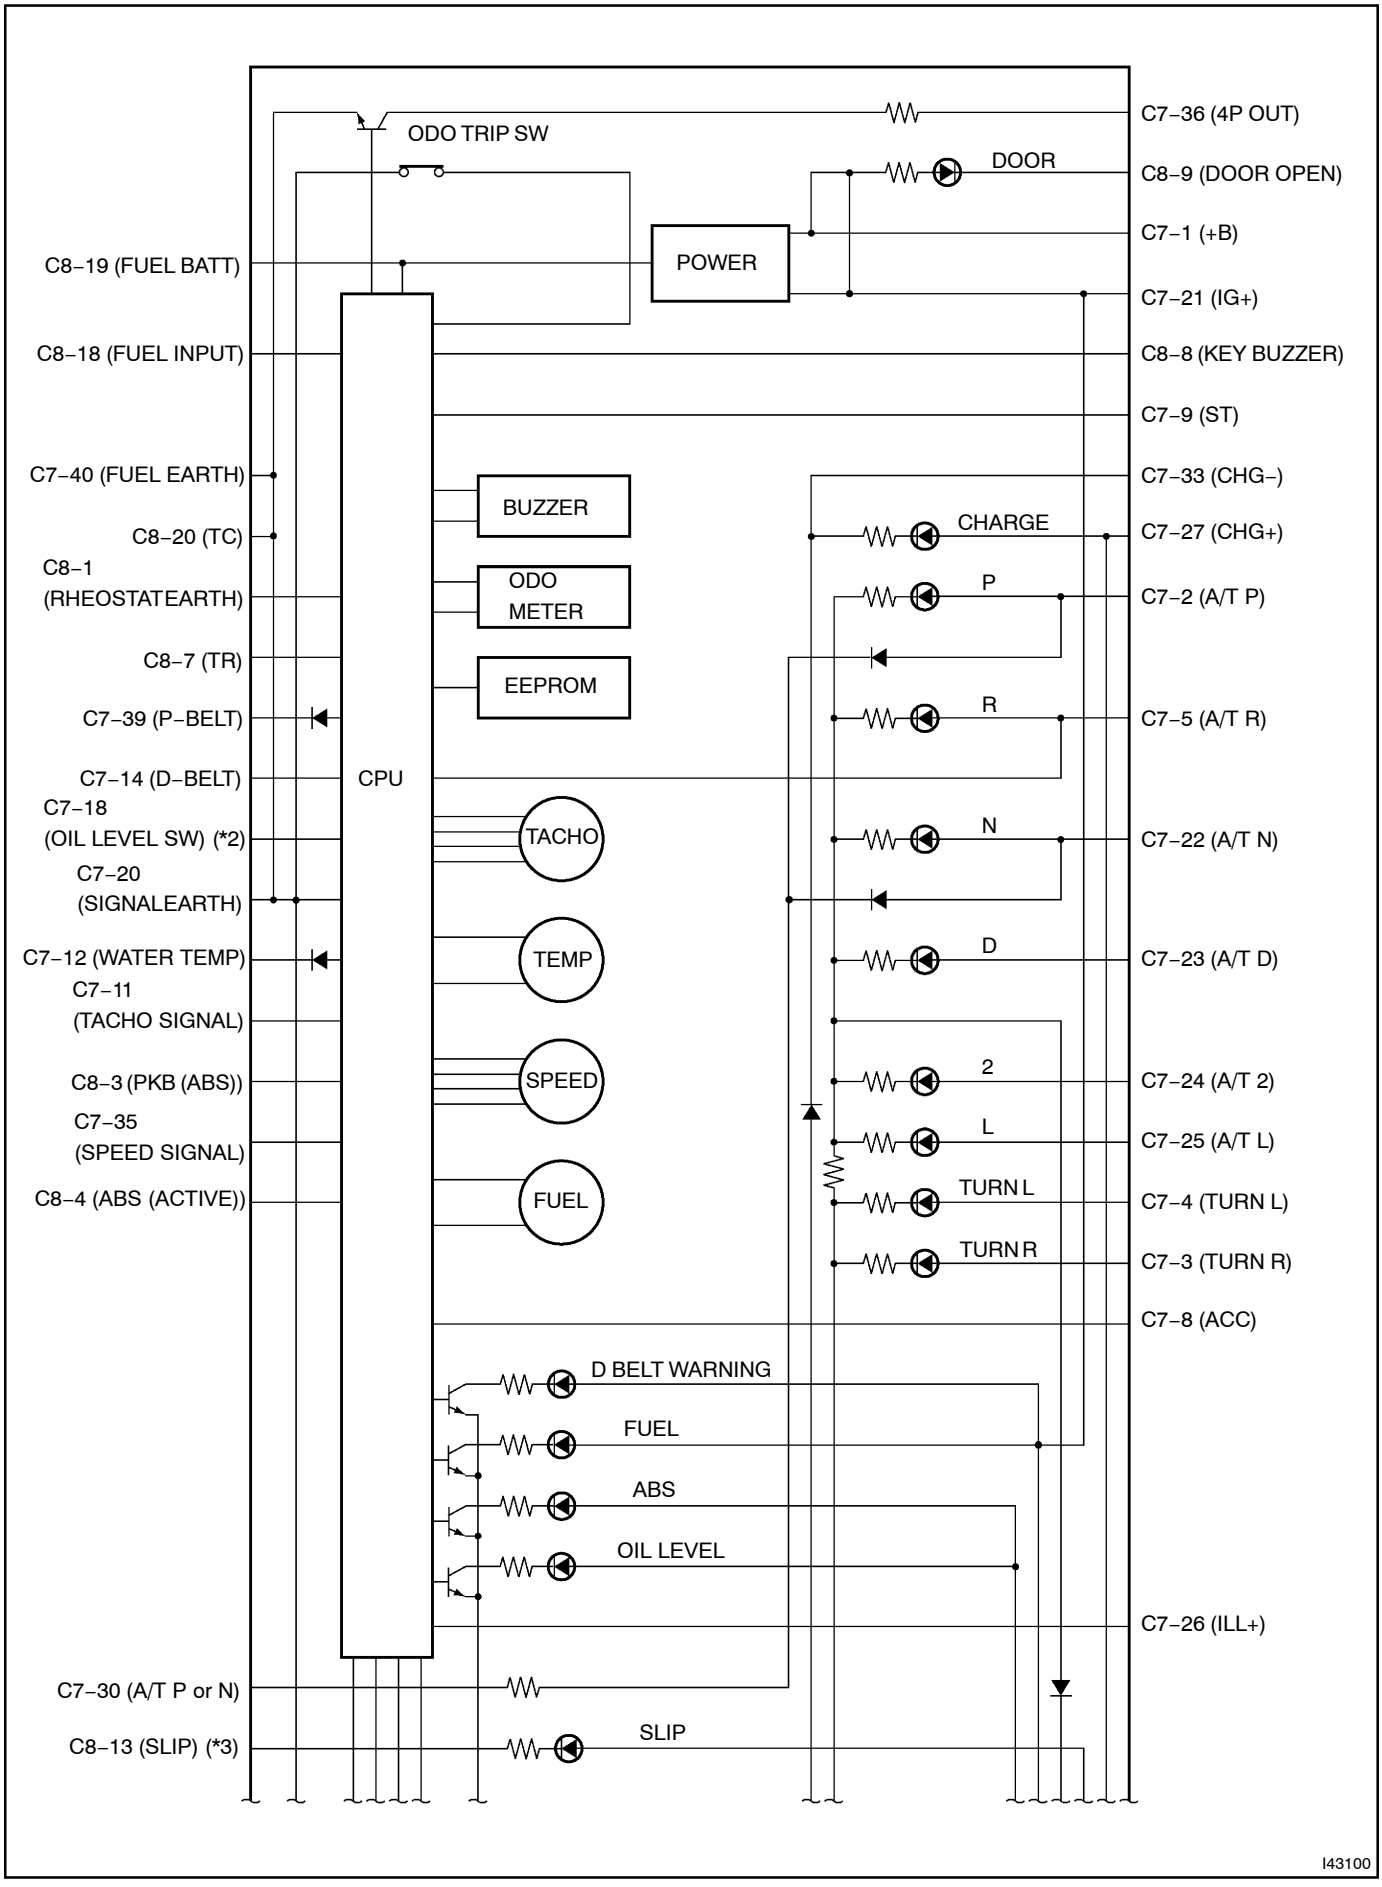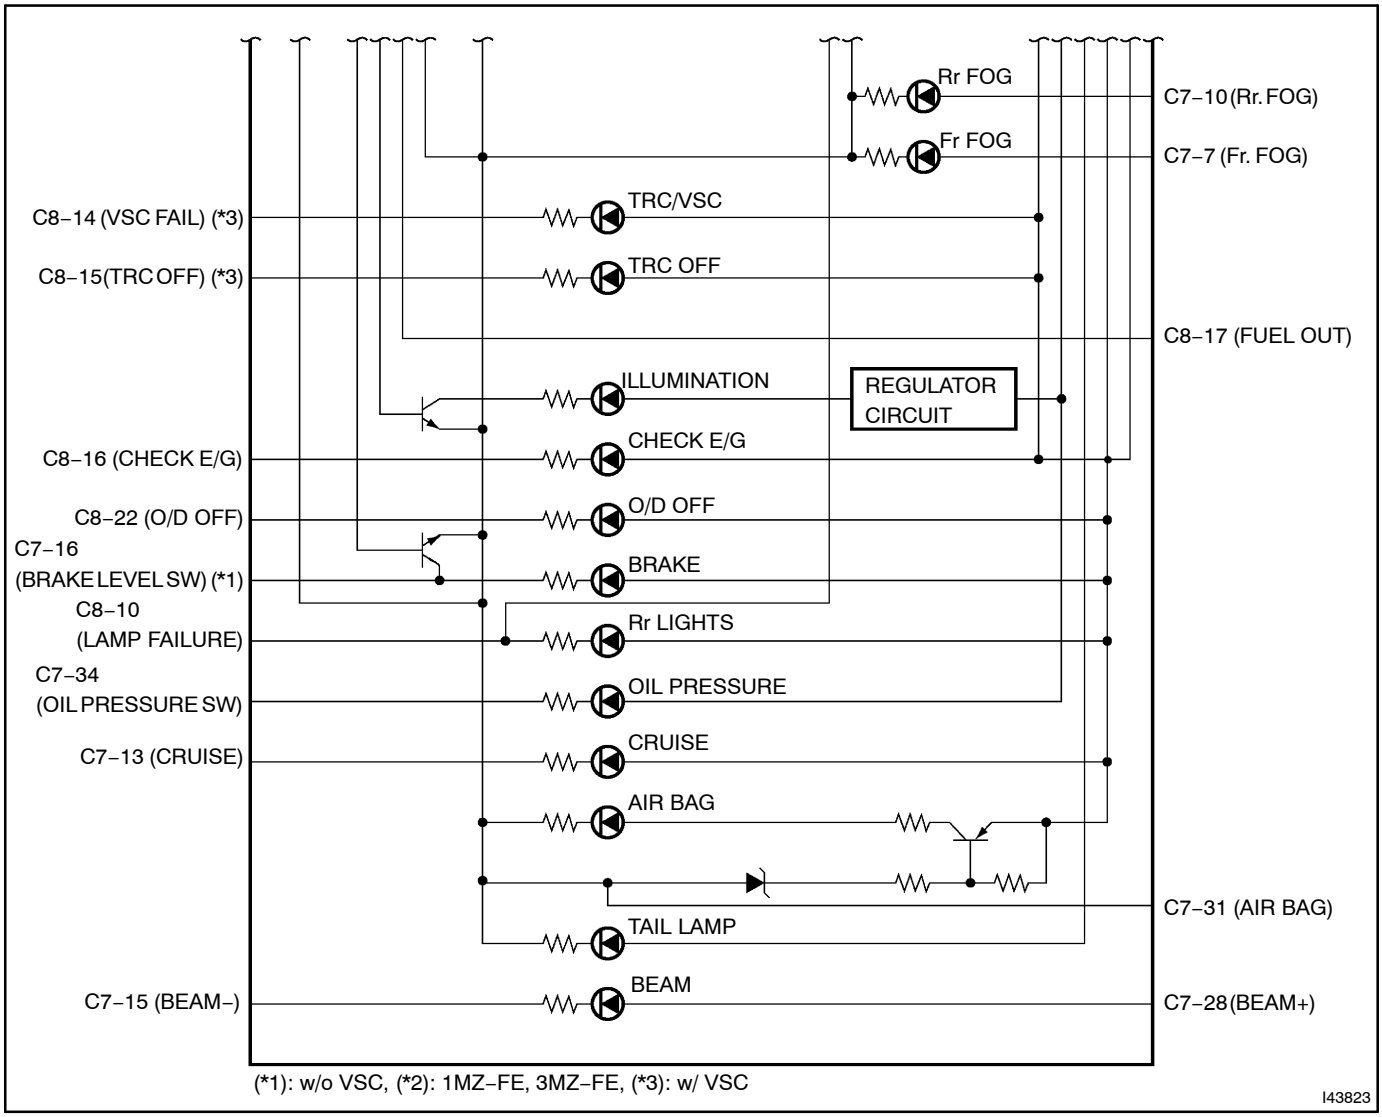


ODO TRIP SW
DOOR
POWER
C8–19 (FUEL BATT)
C8–18 (FUEL INPUT)
C7–40 (FUEL EARTH)
C8–20 (TC)
C8–1
(RHEOSTAT EARTH)
C8–7 (TR)
C7–39 (P–BELT)
C7–14 (D–BELT)
C7–18
(OIL LEVEL SW) (*2)
C7–20
(SIGNAL EARTH)
C7–12 (WATER TEMP)
C7–11
(TACHO SIGNAL)
C8–3 (PKB (ABS))
C7–35
(SPEED SIGNAL)
C8–4 (ABS (ACTIVE))
C7–30 (A/T P or N)
C8–13 (SLIP) (*3)
BUZZER
ODO
METER
EEPROM
CPU
TACHO
TEMP
SPEED
FUEL
CHARGE
P
R
N
D
2
L
TURN L
TURN R
D BELT WARNING
FUEL
ABS
OIL LEVEL
SLIP
C7–36 (4P OUT)
C8–9 (DOOR OPEN)
C7–1 (+B)
C7–21 (IG+)
C8–8 (KEY BUZZER)
C7–9 (ST)
C7–33 (CHG–)
C7–27 (CHG+)
C7–2 (A/T P)
C7–5 (A/T R)
C7–22 (A/T N)
C7–23 (A/T D)
C7–24 (A/T 2)
C7–25 (A/T L)
C7–4 (TURN L)
C7–3 (TURN R)
C7–8 (ACC)
C7–26 (ILL+)
I43100


Rr FOG
C7–10 (Rr. FOG)
Fr FOG
C7–7 (Fr. FOG)
C8–14 (VSC FAIL) (*3)
TRC/VSC
C8–15 (TRC OFF) (*3)
TRC OFF
C8–17 (FUEL OUT)
ILLUMINATION
REGULATOR CIRCUIT
C8–16 (CHECK E/G)
CHECK E/G
C8–22 (O/D OFF)
O/D OFF
C7–16 (BRAKE LEVEL SW) (*1)
BRAKE
C8–10 (LAMP FAILURE)
Rr LIGHTS
C7–34 (OIL PRESSURE SW)
OIL PRESSURE
C7–13 (CRUISE)
CRUISE
AIR BAG
C7–31 (AIR BAG)
TAIL LAMP
C7–15 (BEAM–)
BEAM
C7–28 (BEAM+)
(*1): w/o VSC, (*2): 1MZ–FE, 3MZ–FE, (*3): w/ VSC
I43823

Terminal No.		Wire harness side
C7	1	ECU–B Fuse
	2	Park/Neutral Position Switch (P)
	3	Turn Singnal Flasher (R)
	4	Turn Singnal Flasher (L)
	5	Park/Neutral Position Switch (R)
	7	Front Fog Lights
	8	ECU–ACC Fuse
	9	ST Fuse
	10	Rear Fog Lights
	11	ECM (Tacho Signal)
	12	ECM (Water Temp)
	13	ECM (Cruise Control)
	14	Front Seat Inner Belt Assy (Driver Side)
	15	Ground
	16	Brake Fluid Level Warning Switch (*1)
	18	Oil Level Switch (*2)
	20	Ground (Signal Ground)
	21	GAUGE Fuse
	22	Park/Neutral Position Switch (N)
	23	Park/Neutral Position Switch (D)
	24	Park/Neutral Position Switch (2)
	25	Park/Neutral Position Switch (L)
	26	PANEL Fuse
	27	IG2 Fuse
	28	Head Fuse
	30	ECM
	31	Airbag Sensor Assy Centor
	33	Generator
	34	Oil Pressure Switch
	35	ECM (Speed Signal)
	36	ECM (4P OUT)
	39	Front Seat Inner Belt Assy (Passenger Side)
	40	Ground (Fuel Ground)
C8	1	Ground (Rheostat Ground)
	3	Brake Actuator Assy (ABS) (*1), ABS & Traction Actuator Assy (VSC) (*3)
	4	Brake Actuator Assy (ABS) (*1), ABS & Traction Actuator Assy (VSC) (*3)
	7	Light Control Rheostat
	8	Body ECU (Key Buzzer)
	9	Body ECU (Door Open)
	10	Lamp Failure Sensor
	13	ABS & Traction Actuator Assy (Slip) (*3)
	14	ABS & Traction Actuator Assy (VSC) (*3)
	15	ABS & Traction Actuator Assy (TRC OFF) (*3)
	16	ECM (Check Engine)
	17	Clock Assy (Fuel Output)
	18	Fuel Sender Gauge Assy (FR)
	19	Fuel Sender Gauge Assy (FV)
	20	Light Control Rheostat
	22	O/D Off Switch

(*1): w/o VSC
(*2): 1MZ–FE, 3MZ–FE
(*3): w/ VSC