600YB–01

REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. PRECAUTION (SEE PAGE 60–1)

2. DISCONNECT BATTERY NEGATIVE TERMINAL

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

4. REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 60–19)

5. REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 60–19)

6. REMOVE HORN BUTTON ASSY (SEE PAGE 60–19)

7. REMOVE STEERING WHEEL ASSY (SEE PUB. NO. RM915E, PAGE 50–6)

SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)


8. REMOVE STEERING COLUMN COVER (SEE PUB. NO. RM915E, PAGE 50–6)

9. REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 71–7)

10. REMOVE INSTRUMENT PANEL UNDER COVER SUB–ASSY NO.1 (SEE PAGE 71–7)

11. REMOVE COWL SIDE TRIM SUB–ASSY LH (SEE PAGE 71–7)


12. REMOVE INSTRUMENT PANEL SUB–ASSY LOWER (SEE PAGE 71–7)

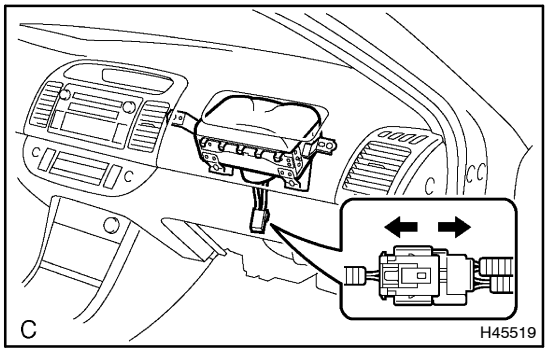

13. DISCONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR

(a) Disconnect the front passenger airbag connectors.

14. REMOVE INSTRUMENT PANEL SAFETY PAD SUB–ASSY W/FRONT PASSENGER AIRBAG ASSY (SEE PAGE 71–7)

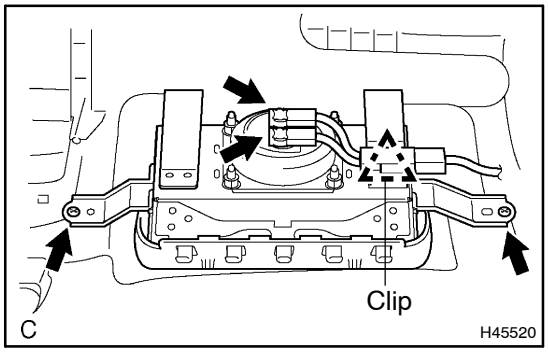


15. REMOVE INSTRUMENT PANEL WIRE NO.2

(a) Remove the clip.

(b) Disconnect the connectors from the front passenger airbag assy.

16. REMOVE FRONT PASSENGER AIRBAG ASSY

(a) Remove the 2 screws.

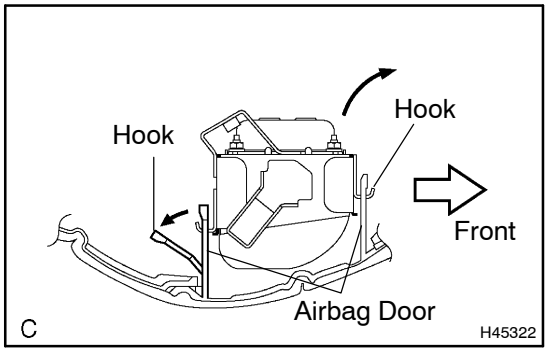


(b) Release the rear side airbag door from the hook by slightly deflecting it and roll the front passenger airbag assy forward.

(c) Release the front side airbag door from the other hook and remove the instr pnl pass l/door airbag assy.

17. INSPECT FRONT PASSENGER AIRBAG ASSY (SEE PAGE 60–13)

18. INSTALL FRONT PASSENGER AIRBAG ASSY

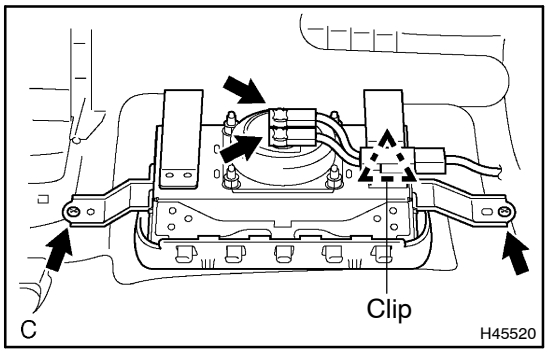

19. INSTALL INSTRUMENT PANEL WIRE NO.2

(a) Install the clip.

(b) Connect the 2 connectors to the front passenger airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

20. INSTALL INSTRUMENT PANEL SAFETY PAD SUB–ASSY W/FRONT PASSENGER AIRBAG ASSY (SEE PAGE 71–7)

21. INSTALL SPIRAL CABLE SUB–ASSY (SEE PAGE 60–28)

22. ADJUST SPIRAL CABLE SUB–ASSY (SEE PAGE 60–28)

23. INSTALL STEERING WHEEL ASSY (SEE PUB. NO. RM915E, PAGE 50–6)

24. ADJUST STEERING WHEEL CENTER POINT

25. INSTALL HORN BUTTON ASSY (SEE PAGE 60–19)

26. CONNECT BATTERY NEGATIVE TERMINAL

27. INSPECT HORN BUTTON ASSY (SEE PUB. NO. RM915E, PAGE 69–3)

28. INSPECT SRS WARNING LIGHT (SEE PAGE 05–10)