600A1–06

REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. PRECAUTION (SEE PAGE 60–1)

2. DISCONNECT BATTERY NEGATIVE TERMINAL

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

3. REMOVE SHIFT LEVER KNOB SUB–ASSY (MANUAL TRANSAXLE) (SEE PAGE 71–7)

4. REMOVE CONSOLE PANEL UPPER REAR (SEE PAGE 71–7)

5. REMOVE CONSOLE BOX CARPET (SEE PAGE 71–7)

6. REMOVE RR CONSOLE BOX (SEE PAGE 71–7)


7. REMOVE CONSOLE PANEL SUB–ASSY (SEE PAGE 71–7)

8. REMOVE CONSOLE BOX FRONT (SEE PAGE 71–7)

9. REMOVE AIR DUCT REAR NO.1 (SEE PUB. NO. RM915E, PAGE 55–21)

10. REMOVE AIR DUCT REAR NO.2 (SEE PUB. NO. RM915E, PAGE 55–21)

11. REMOVE CONSOLE BOX DUCT NO.1 (A/T TRANSAXLE) (SEE PUB. NO. RM915E, PAGE 55–21)

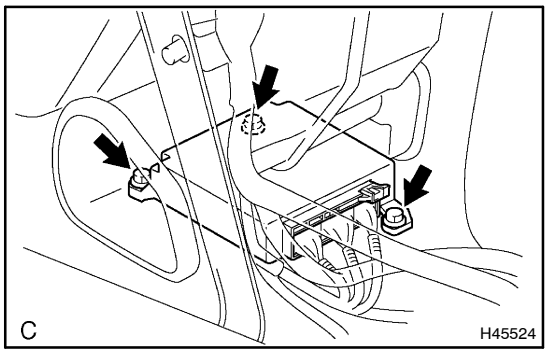

12. REMOVE AIR BAG SENSOR ASSY CENTER

(a) Disconnect the holder (with connectors) from the airbag sensor assy center.

(b) Remove the 3 bolts and the airbag sensor assy center.

13. INSPECT AIR BAG SENSOR ASSY CENTER (SEE PAGE 60–13)

14. INSTALL AIR BAG SENSOR ASSY CENTER

(a) Check that the ignition switch is off.

(b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

(c) Temporarily install the airbag sensor assy center with the 3 bolts.

NOTICE:

- **If the airbag sensor assy center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the airbag sensor assy center, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

(d) Tighten the 3 bolts to the specified torque.

Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)

(e) Check that there is no looseness in the installation parts of the airbag sensor assy center.

(f) Connect the holder (with connectors) to the airbag sensor assy center.

(g) Check that the water–proof sheet is properly set.

15. CONNECT BATTERY NEGATIVE TERMINAL

16. INSPECT SRS WARNING LIGHT (SEE PAGE 05–10)