
SEAT POSITION AIRBAG SENSOR

COMPONENTS

600YD–01


Power Seat:

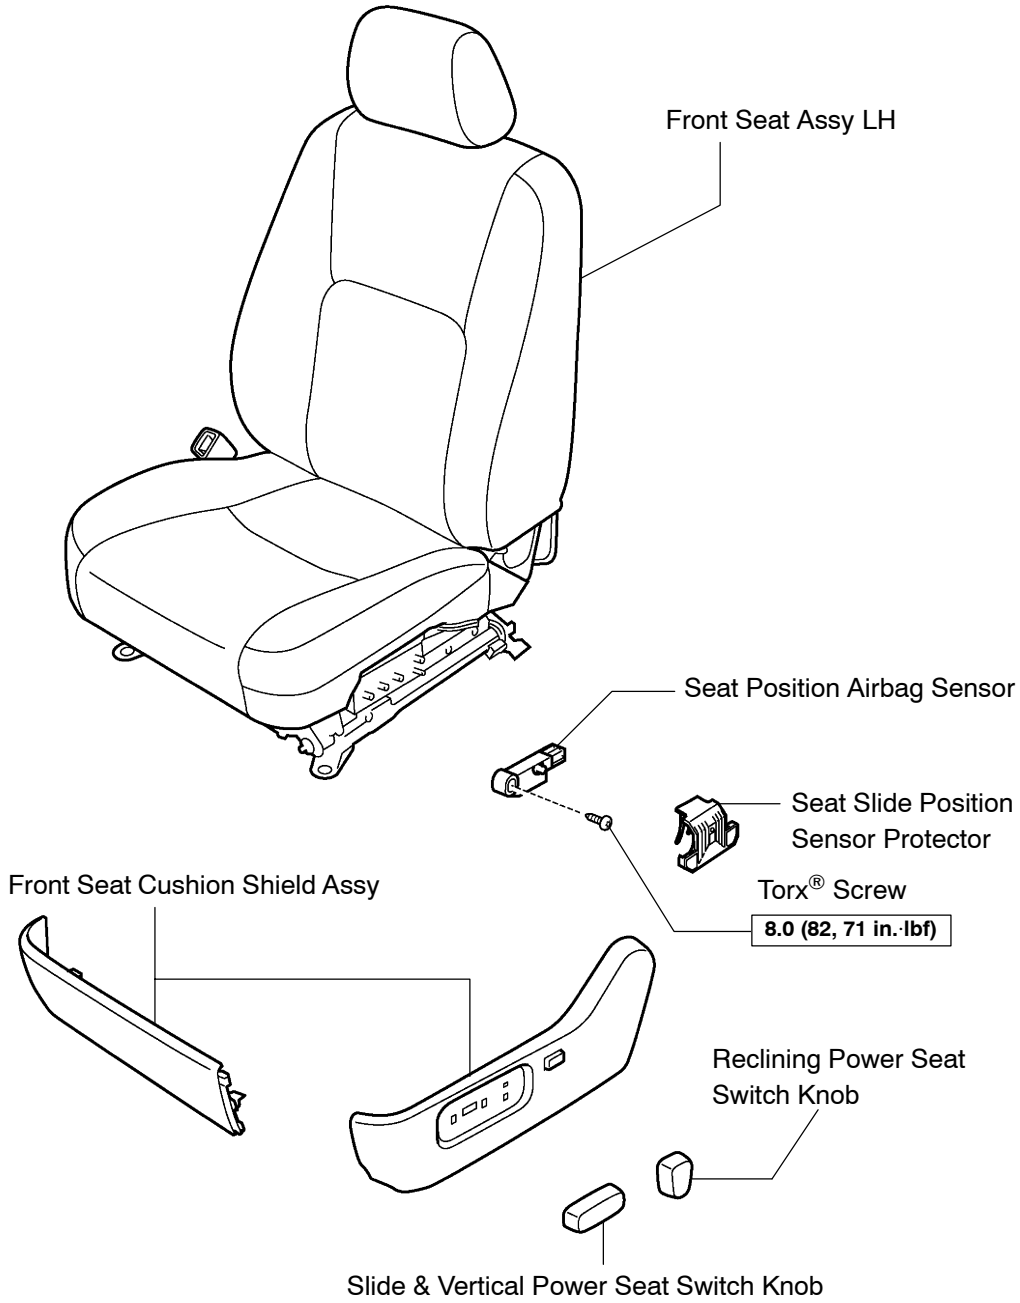

C N·m (kgf·cm, ft·lbf) : Specified torque

H45525

Manual Seat:

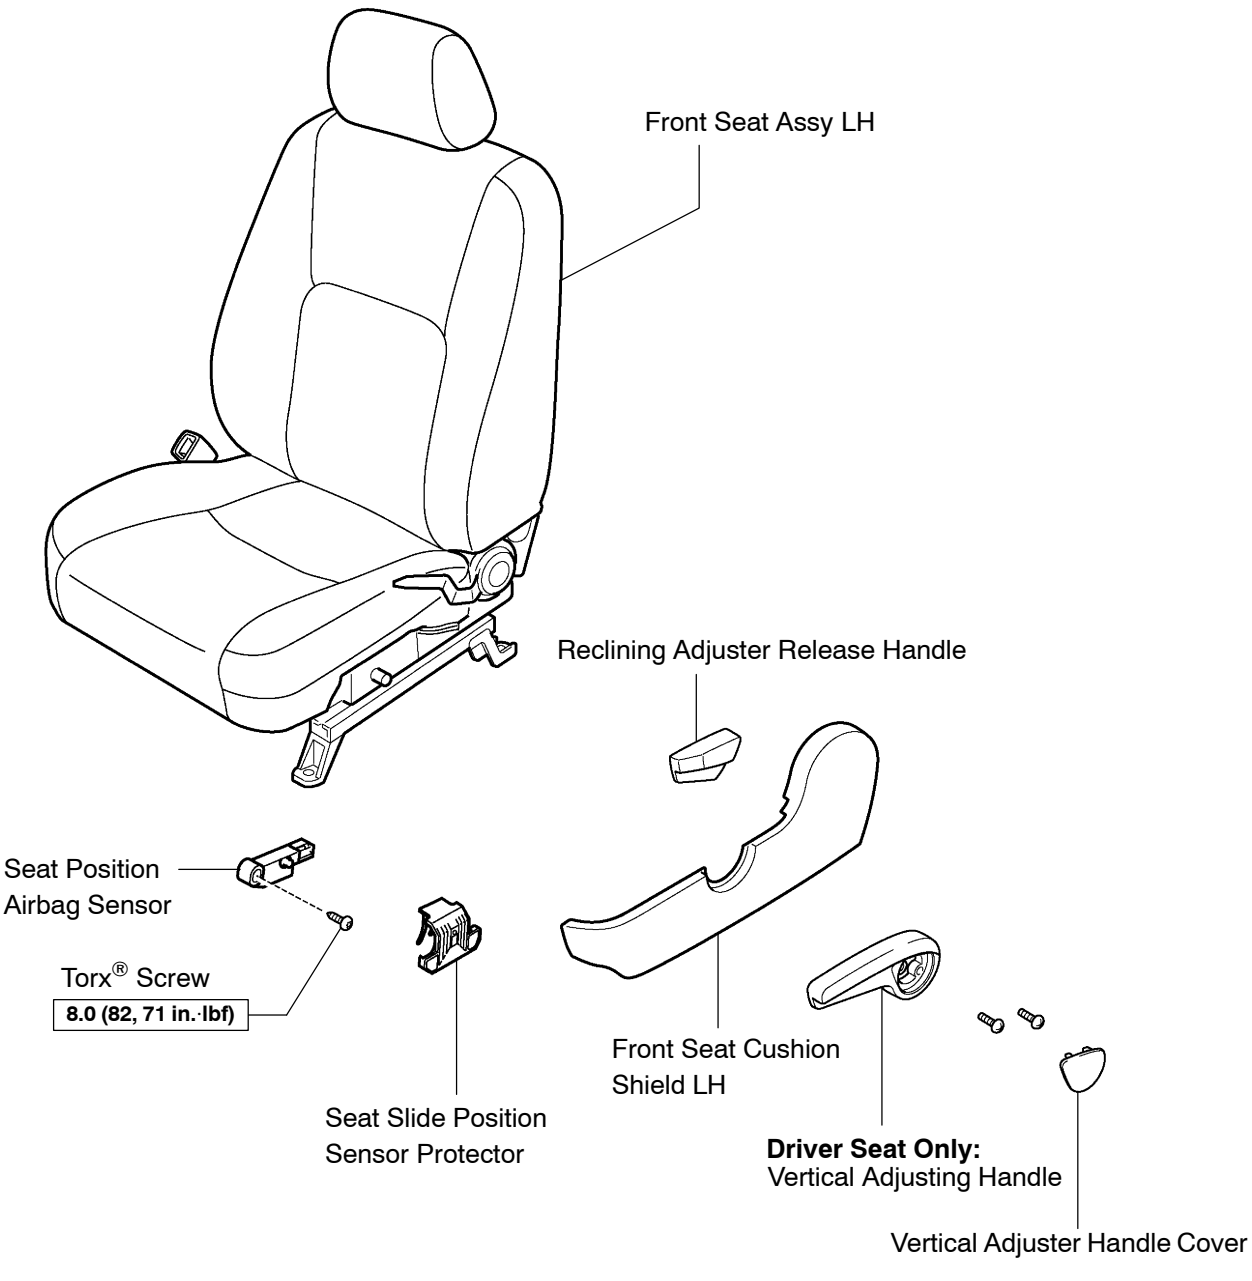
Front Seat Assy LH
Reclining Adjuster Release Handle
Seat Position
Airbag Sensor
Torx® Screw
8.0 (82, 71 in.·lbf)
Seat Slide Position
Sensor Protector
Front Seat Cushion
Shield LH
Driver Seat Only:
Vertical Adjusting Handle
Vertical Adjuster Handle Cover
C
N·m (kgf·cm, ft·lbf)
: Specified torque
H45541