
651AV–01

OVERHAUL

HINT:

- COMPONENTS: SEE PAGE 65–1.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.


1. REMOVE FRONT BUMPER ASSY (SEE PAGE 76–2)

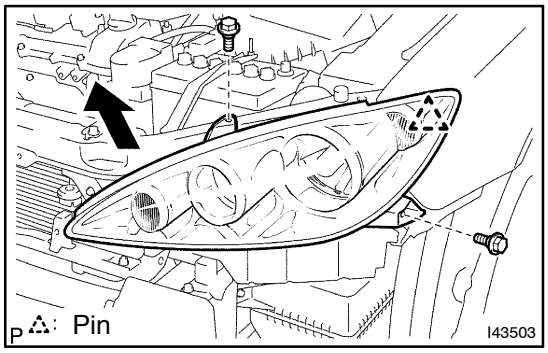

2. REMOVE HEADLAMP ASSY LH


(a) Remove the 2 bolts and disengage the pin.

(b) Pull the headlamp assy LH in the direction indicated by the arrow and remove the headlamp assy LH.

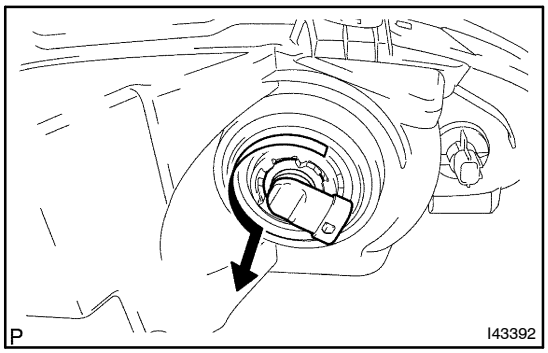


3. REMOVE HEADLAMP, NO.2 BULB

(a) Turn in the direction indicated by the arrow and remove the headlamp, No.2 bulb.

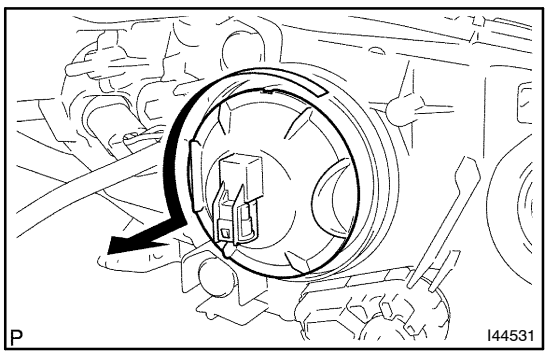


4. REMOVE HEADLAMP COVER NO.1


(a) Turn in the direction indicated by the arrow and remove the headlamp cover No.1.

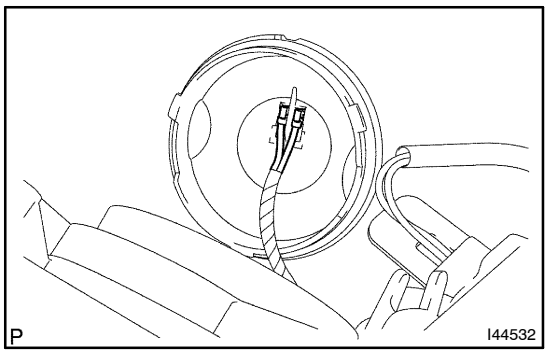

(b) Disconnect the connector and remove the headlamp cover No.1.

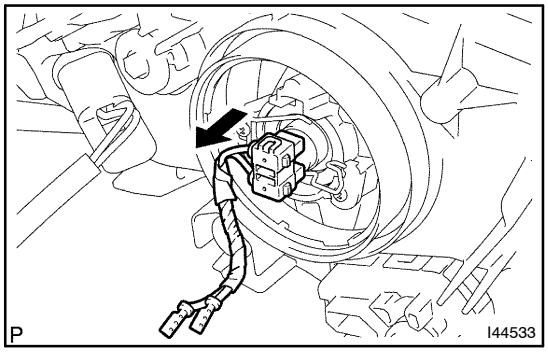


(c) Remove the headlamp cord.

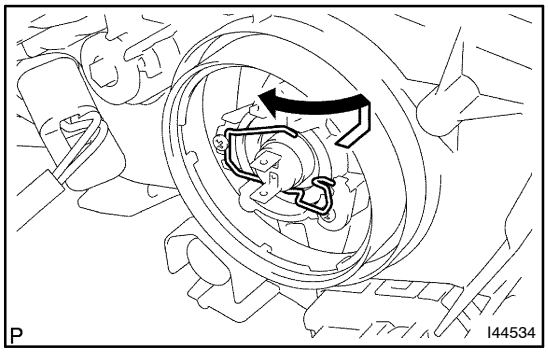

5. REMOVE HEADLAMP, NO.2 BULB


(a) Release the set spring lock as shown in the illustration and remove the headlamp, No.2 bulb.

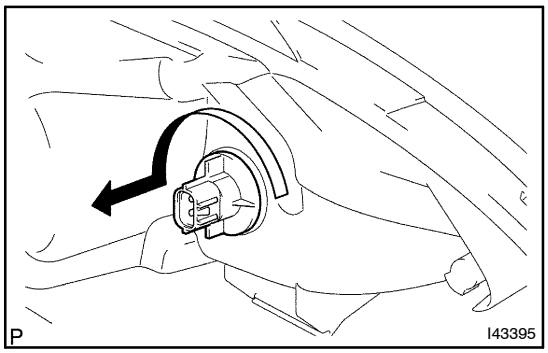

6. REMOVE FRONT TURN SIGNAL LAMP BULB

(a) Turn in the direction indicated by the arrow and remove the front turn signal lamp socket and the front turn signal lamp bulb as a unit.


(b) Remove the front turn signal lamp bulb from the front turn signal lamp socket.

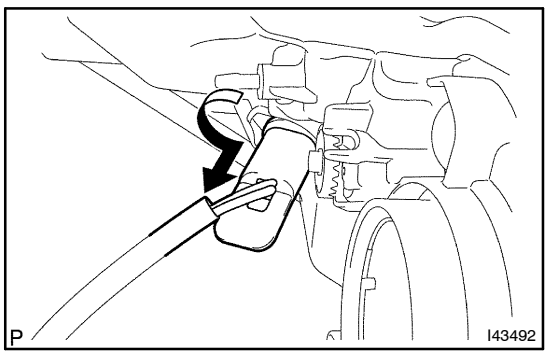

7. REMOVE CLEARANCE LAMP BULB

(a) Turn in the direction indicated by the arrow and remove the clearance lamp socket and the clearance lamp bulb as a unit.

(b) Remove the clearance lamp bulb from the clearance lamp socket.

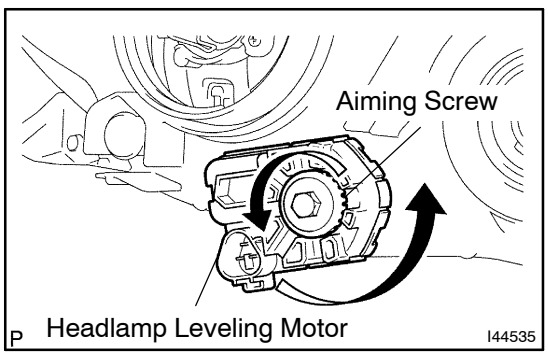

8. REMOVE HEADLAMP LEVELING MOTOR

(a) Turn the headlamp leveling motor as shown in the illustration.

(b) Turn the aiming screw counterclockwise to remove the headlamp leveling motor.

9. VEHICLE PREPARATION FOR HEADLAMP AIM ADJUSTMENT (SEE PAGE 65–5)
10. PREPARATION FOR HEADLAMP AIMING (Using a screen) (SEE PAGE 65–5)
11. HEADLAMP AIMING INSPECTION (SEE PAGE 65–5)
12. HEADLAMP AIMING ADJUSTMENT (SEE PAGE 65–5)
13. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65–12)
14. PREPARATION FOR FOG LAMP AIMING (SEE PAGE 65–12)
15. FOG LAMP AIMING INSPECTION (SEE PAGE 65–12)
16. FOG LAMP AIMING ADJUSTMENT (SEE PAGE 65–12)