FOG LAMP ASSY LH


OVERHAUL

651AW–01

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.


1. REMOVE FRONT BUMPER ASSY (SEE PAGE 76–2)

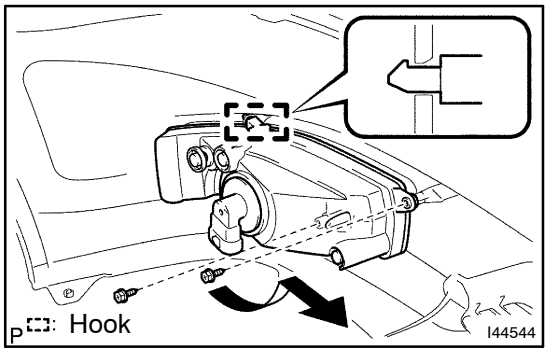

2. REMOVE FOG LAMP ASSY LH

(a) Remove the 2 screws.

(b) Move the fog lamp assy LH in the direction indicated by the arrow, disengage the hook, and remove the fog lamp assy LH.

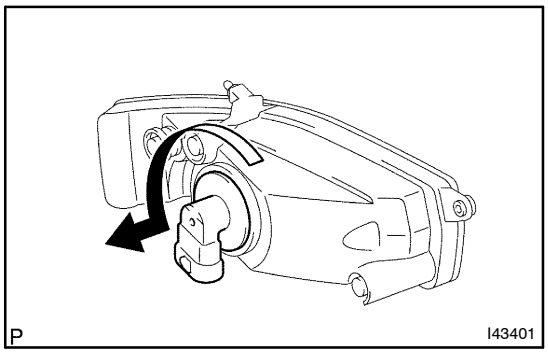

3. REMOVE FOG LAMP BULB

(a) Turn the fog lamp bulb in the direction as shown in the illustration and remove the fog lamp bulb.

4. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65–12)

5. PREPARATION FOR FOG LAMP AIMING (SEE PAGE 65–12)

6. FOG LAMP AIMING INSPECTION (SEE PAGE 65–12)

7. FOG LAMP AIMING ADJUSTMENT (SEE PAGE 65–12)