REAR COMBINATION LAMP ASSY LH

651AY–01


OVERHAUL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1 (SEE PUB. NO. RM915E, PAGE 76–5)


2. REMOVE REAR FLOOR FINISH PLATE (SEE PUB. NO. RM915E, PAGE 76–5)

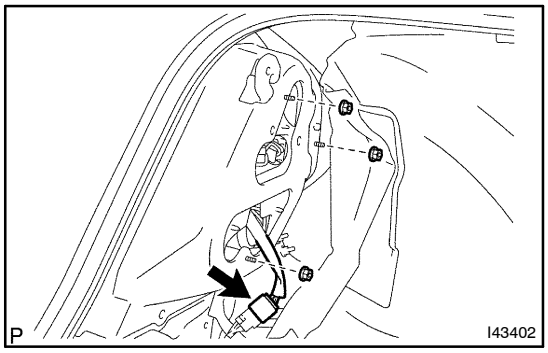

3. REMOVE REAR COMBINATION LAMP ASSY LH


(a) Disconnect the connector.

(b) Remove the 3 nuts and the rear combination lamp assy LH.

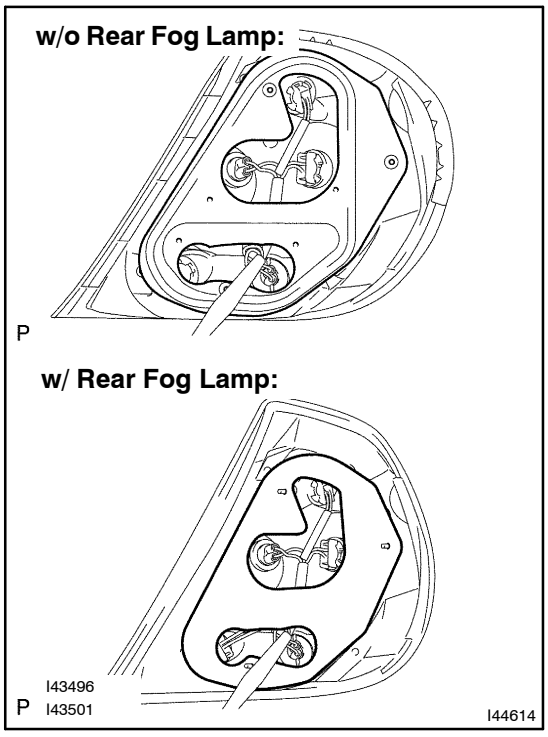

4. REMOVE REAR COMBINATION LAMP GASKET RH


(a) Remove the rear combination lamp gasket RH.

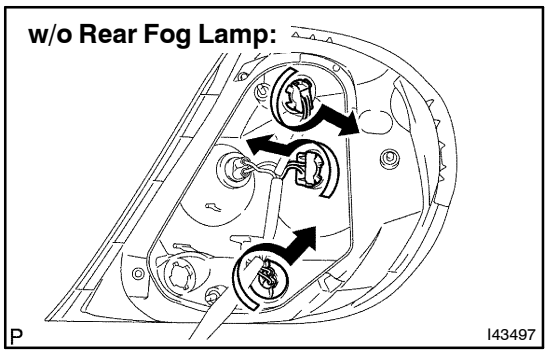

5. REMOVE REAR COMBINATION LAMP BULB


(a) Turn in the direction indicated by the arrow and remove the 3 rear combination lamp socket & wires and the 3 rear combination lamp bulbs as a unit.

(b) Remove the 3 rear combination lamp bulbs from the 3 rear combination lamp socket & wires.

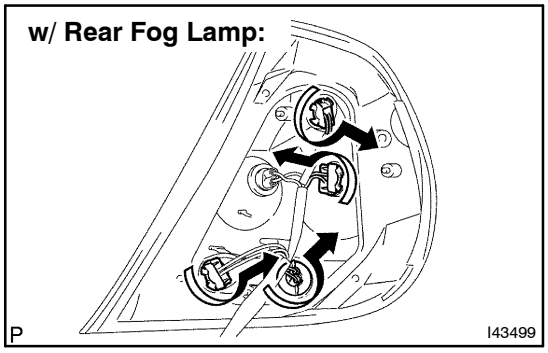

(c) Turn in the direction indicated by the arrow and remove the 4 rear combination lamp socket & wires and the 4 rear combination lamp bulbs as a unit.


(d) Remove the 4 rear combination lamp bulbs from the 4 rear combination lamp socket & wires.

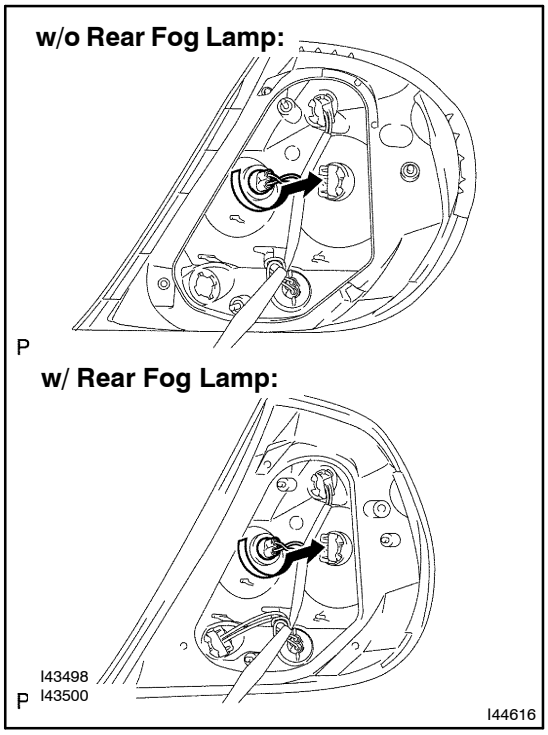

6. REMOVE REAR COMBINATION LAMP BULB

(a) Turn in the direction indicated by the arrow and remove the rear combination lamp socket & wire and the rear combination lamp bulb as a unit.

(b) Remove the rear combination lamp bulb from the rear combination lamp socket & wire.

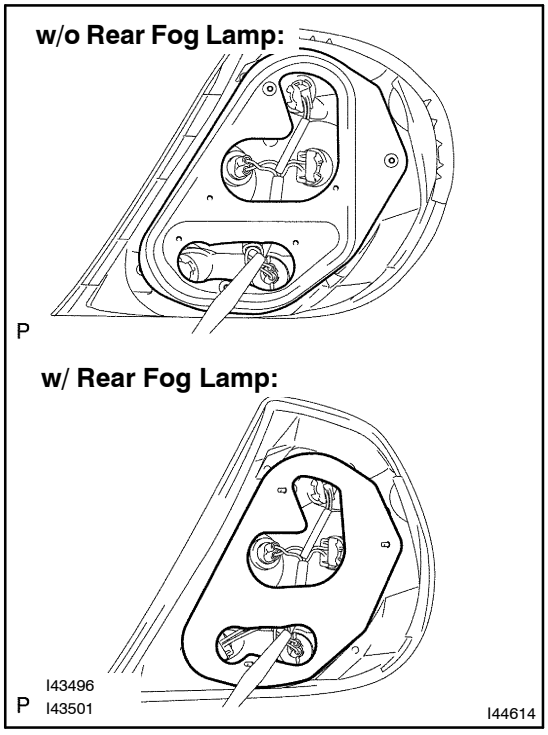

7. INSTALL REAR COMBINATION LAMP GASKET RH

(a) Install a new rear combination lamp gasket RH to the rear combination lamp assy LH.