
761DJ–01

REPLACEMENT


HINT:

- Installation is in the reverse order of removal.
- COMPONENTS: SEE PAGE 76–1.

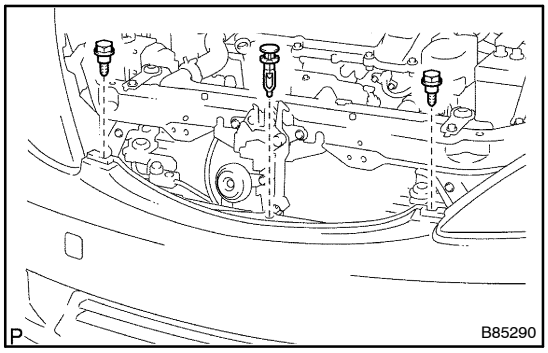

1. REMOVE FRONT BUMPER ASSY


(a) Remove the clip and the 2 bolts.

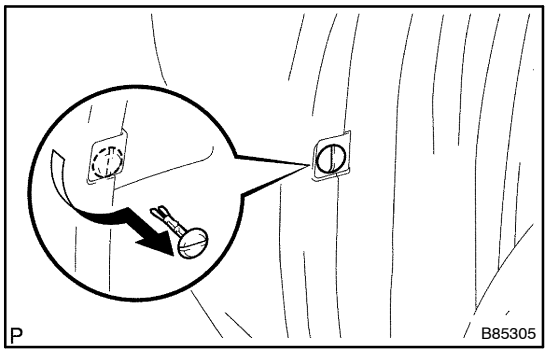


(b) Turn the pin hold clip 90°as shown in the illustration and remove it. (LH side)

HINT:

Remove the RH side by following the same procedure as for the LH side.

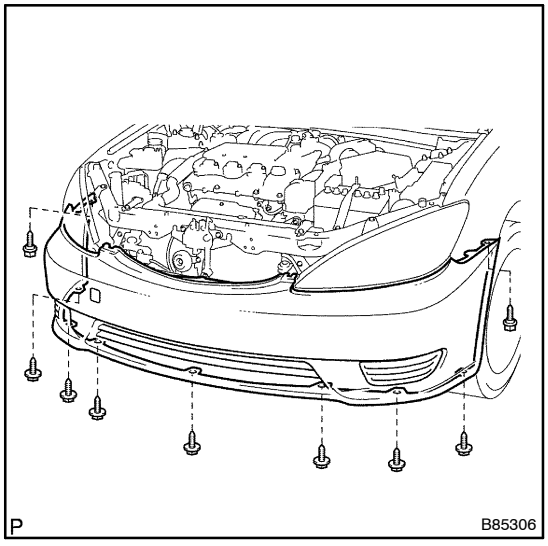

(c) Remove the 9 screws.

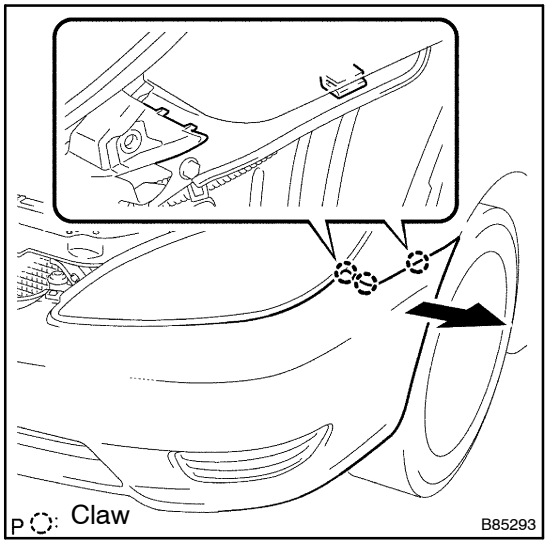


(d) Disengage the 3 claws by pulling the left side of the front bumper cover in the direction shown by the arrow. (LH side)

HINT:


Disengage the RH side by following the same procedure as for the LH side.

(e) Disconnect the fog lamp connector (w/ fog lamp) and remove the front bumper assy.

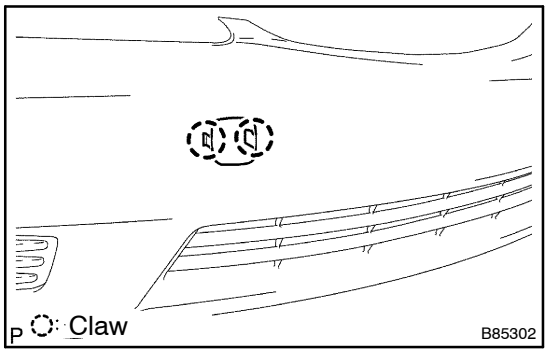


2. REMOVE FRONT BUMPER COVER LOWER

(a) Disengage the 2 claws and remove the front bumper cover lower.

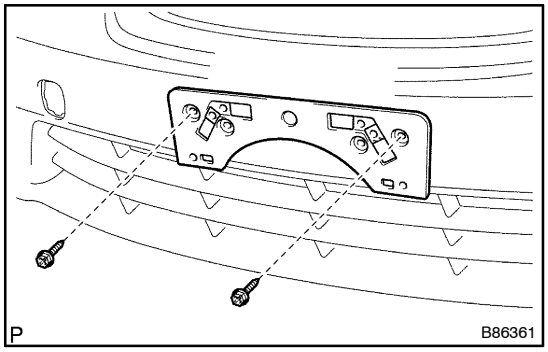

3. REMOVE FRONT BUMPER EXTENSION MOUNTING BRACKET

(a) Remove the 2 screws and the bumper extension mounting bracket.

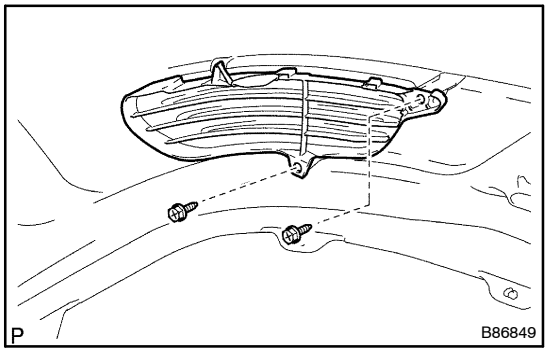


4. REMOVE FRONT BUMPER HOLE COVER LH (W/O FOG LAMP)

(a) Remove the 2 screws and the front bumper hole cover LH.

5. REMOVE FRONT BUMPER HOLE COVER RH (W/O FOG LAMP)


6. REMOVE FOG LAMP ASSY LH (W/ FOG LAMP) (SEE PAGE 65–11)

7. REMOVE FOG LAMP ASSY RH (W/ FOG LAMP) (SEE PAGE 65–11)

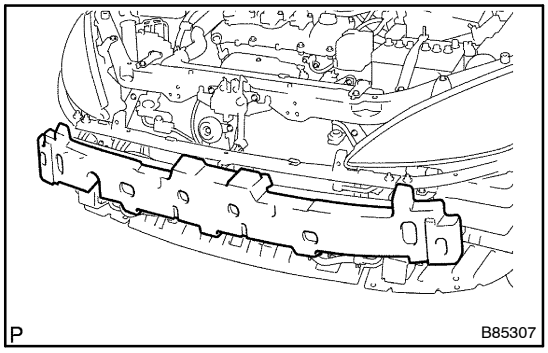


8. REMOVE FRONT BUMPER ENERGY ABSORBER

(a) Remove the front bumper energy absorber.

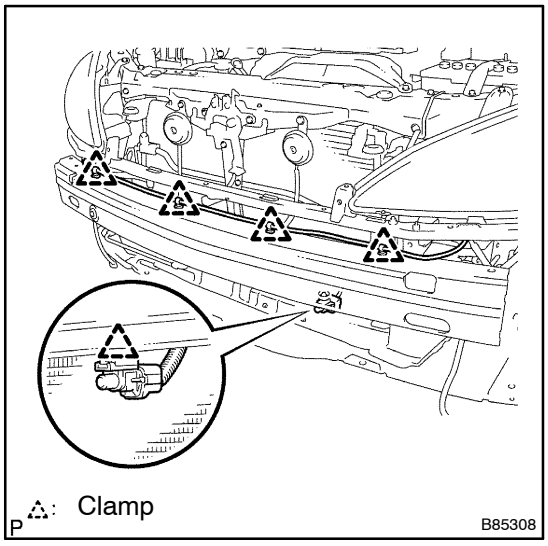


9. REMOVE FRONT BUMPER REINFORCEMENT SUB–ASSY

(a) Disengage the 5 clamps.

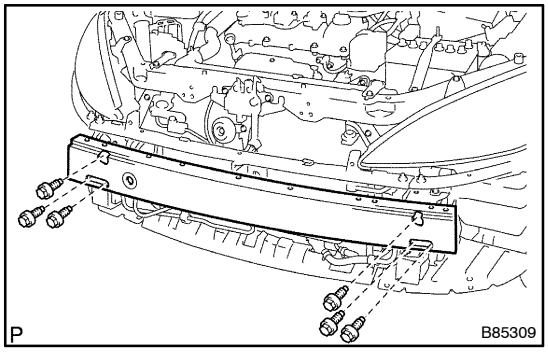


(b) Remove the 6 bolts and the front bumper reinforcement sub–assy.

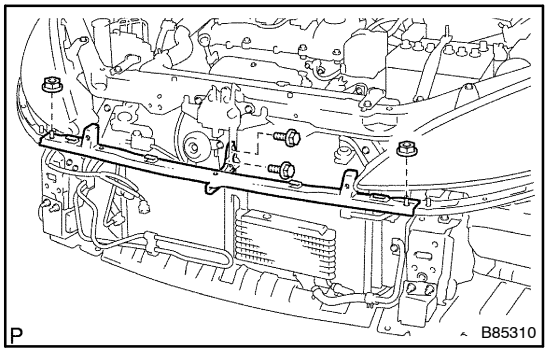

10. REMOVE FRONT BUMPER REINFORCEMENT SUB–ASSY UPPER

(a) Remove the 2 bolts and the 2 nuts.

(b) Remove the front bumper reinforcement sub–assy upper.

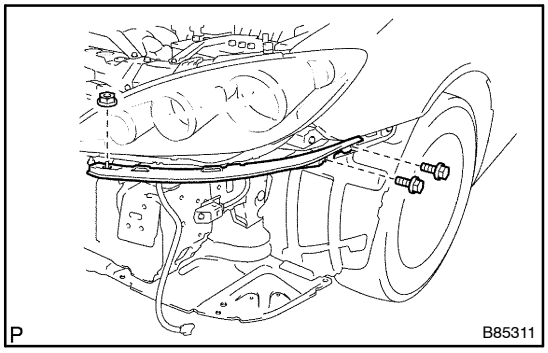


11. REMOVE FRONT BUMBER REINFORCEMENT EXTENSION LH

(a) Remove the 2 bolts and the nut.

(b) Remove the front bumper reinforcement extension LH.

12. REMOVE FRONT BUMBER REINFORCEMENT EXTENSION RH

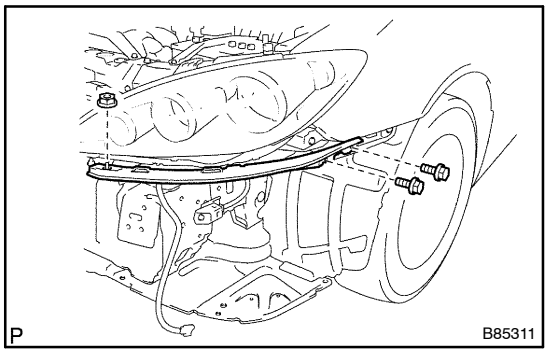

13. INSTALL FRONT BUMBER REINFORCEMENT EXTENSION LH


(a) Install the front bumper reinforcement extension LH with the 2 bolts and nut.

Torque: 8.5 N·m (87 kgf·cm, 75 in.·lbf)

14. INSTALL FRONT BUMBER REINFORCEMENT EXTENSION RH

(a) Install the front bumper reinforcement extension RH with the 2 bolts and nut.


Torque: 8.5 N·m (87 kgf·cm, 75 in.·lbf)

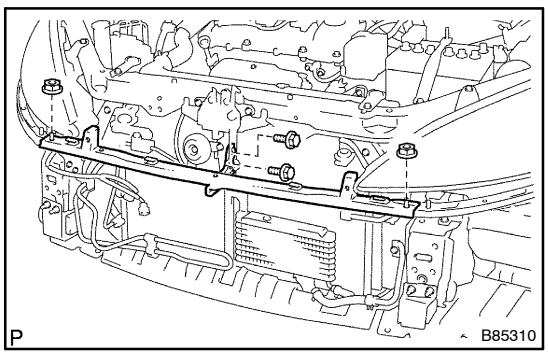

15. INSTALL FRONT BUMPER REINFORCEMENT SUB–ASSY UPPER

(a) Install the front bumper reinforcement sub–assy upper with the 2 bolts and 2 nuts.

Torque: 8.5 N·m (87 kgf·cm, 75 in.·lbf)

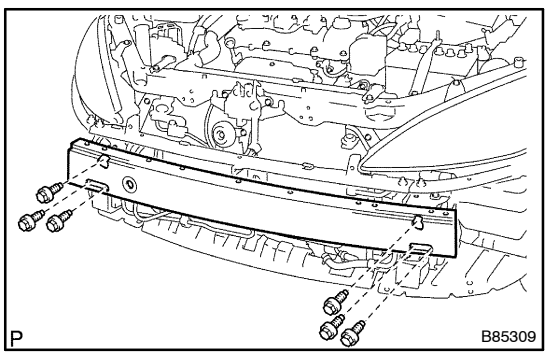

16. INSTALL FRONT BUMPER REINFORCEMENT SUB–ASSY

(a) Install the front bumper reinforcement sub–assy with the 6 bolts.

Torque: 34 N·m (347 kgf·cm, 25 ft·lbf)

17. FOG LAMP AIMING ADJUSTMENT (W/ FOG LAMP) (SEE PAGE 65–12)