



















AUTOMATIC TRANSMISSION / TRANS


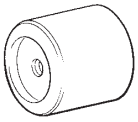









0209F–01






PREPARATION







SST

	09308–00010	Oil Seal Puller	OIL PUMP ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	09316–60011	Transmission & Transfer Bearing Replacer	UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09316–00011)	Replacer Pipe	UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	09350–32014	TOYOTA Automatic Transmission Tool Set	OIL PUMP ASSY(U241E) FORWARD CLUTCH ASSY(U241E) UNDERDRIVE CLUTCH ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09351–32070)	No.2 Piston Spring Compressor	FORWARD CLUTCH ASSY(U241E) UNDERDRIVE CLUTCH ASSY(U241E)
	(09351–32140)	Oil Seal Replacer	OIL PUMP ASSY(U241E)
	(09351–32150)	Oil Seal Replacer	FRONNT DIFFERENTIAL ASSY(U241E)
	09387–00020	Direct Clutch Wrench	AUTOMATIC TRANSAXLE ASSY(U241E) DIRECT CLUTCH ASSY(U241E)
	09387–00030	Counter Drive Gear Holding Tool	AUTOMATIC TRANSAXLE ASSY(U241E)
	09387–00040	Bearing Puller Assembly	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09387–01010)	Claw No.1	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09387–01030)	Pin	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)





	(09387–01040)	Bearing Puller Body	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09387–02010)	Oil Seal Replacer	FRONNT DIFFERENTIAL ASSY(U241E)
	(09387–02020)	One–way Clutch Test Tool Set	FRONNT DIFFERENTIAL ASSY(U241E)
	09387–00050	Under Drive Gear Puller	UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	09387–00060	Second Brake Wrench	SECOND BRAKE PISTON ASSY(U241E)
	09387–00070	First & Reverse Brake Wrench	AUTOMATIC TRANSAXLE ASSY(U241E)
	09387–00080	Counter Drive Gear Nut Wrench	AUTOMATIC TRANSAXLE ASSY(U241E)
	09506–35010	Differential Drive Pinion Rear Bearing Replacer	UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	09514–35011	Rear Wheel Bearing Puller	AUTOMATIC TRANSAXLE ASSY(U241E)
	09550–60010	Differential Side Bearing Replacer	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09951–00320)	Replacer 32	AUTOMATIC TRANSAXLE ASSY(U241E) UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	09564–16020	Drive Pinion Lock Nut Wrench	UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	09564–32011	Differential Preload Adaptor	FRONNT DIFFERENTIAL ASSY(U241E)



	09608–06041	Front Hub Inner Bearing Cone Replacer	FRONNT DIFFERENTIAL ASSY(U241E)
	09649–17010	Steering Knuckle Tool	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	09930–00010	Drive Shaft Nut Chisel	UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	(09931–00010)	Handle	UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	(09931–00020)	Nut Chisel	UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	09950–00020	Bearing Remover	UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	09950–00030	Bearing Remover Attachment	UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	09950–40011	Puller B Set	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09951–04010)	Hanger 150	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09951–04020)	Hanger 200	FRONNT DIFFERENTIAL ASSY(U241E)
	(09952–04010)	Slide Arm	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09953–04020)	Center Bolt 150	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09954–04010)	Arm 25	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)

	(09955–04011) Claw No.1	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09955–04061) Claw No.6	FRONNT DIFFERENTIAL ASSY(U241E)
	(09957–04010) Attachment	FRONNT DIFFERENTIAL ASSY(U241E)
	(09958–04011) Holder	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	09950–60010 Replacer Set	AUTOMATIC TRANSAXLE ASSY(U241E) UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09951–00230) Replacer 23	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09951–00250) Replacer 25	UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	(09951–00320) Replacer 32	AUTOMATIC TRANSAXLE ASSY(U241E) UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	(09951–00340) Replacer 34	UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09951–00350) Replacer 35	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09951–00400) Replacer 40	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09951–00450) Replacer 45	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09951–00600) Replacer 60	AUTOMATIC TRANSAXLE ASSY(U241E)

	09950–60020	Replacer Set No.2	AUTOMATIC TRANSAXLE ASSY(U241E) UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09951–00680)	Replacer 68	FRONNT DIFFERENTIAL ASSY(U241E)
	(09951–00710)	Replacer 71	FRONNT DIFFERENTIAL ASSY(U241E)
	(09951–00810)	Replacer 81	AUTOMATIC TRANSAXLE ASSY(U241E)
	(09951–00890)	Replacer 89	AUTOMATIC TRANSAXLE ASSY(U241E) UNDERDRIVE PLANETARY GEAR ASSY(U241E)
	09950–70010	Handle Set	AUTOMATIC TRANSAXLE ASSY(U241E) UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09951–07100)	Handle 100	AUTOMATIC TRANSAXLE ASSY(U241E) UNDERDRIVE PLANETARY GEAR ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)
	(09951–07150)	Handle 150	AUTOMATIC TRANSAXLE ASSY(U241E) FRONNT DIFFERENTIAL ASSY(U241E)

Recomended Tools

	09031–00030	Pin Punch .	AUTOMATIC TRANSAXLE ASSY(U241E)
	09031–00040	Pin Punch .	FRONNT DIFFERENTIAL ASSY(U241E)
	09042–00010	Torx Socket T30	AUTOMATIC TRANSAXLE ASSY(U241E) OIL PUMP ASSY(U241E)
	09904–00010	Expander Set	AUTOMATIC TRANSAXLE ASSY(U241E)

	09905–00012	Snap Ring No.1 Expander .	AUTOMATIC TRANSAXLE ASSY(U241E) FORWARD CLUTCH ASSY(U241E) DIRECT CLUTCH ASSY(U241E) UNDERDRIVE CLUTCH ASSY(U241E)
	09905–00013	Snap Ring Pliers .	UNDERDRIVE PLANETARY GEAR ASSY(U241E)

Equipment

Dial indicator with magnetic base	
Feeler gauge	
Vernier calipers	
Torque wrench	
Plastic hammer	
Straight edge	

Lubicant

Item	Capacity	Classification
Automatic transaxle fluid Dry fill Drain and refill	 8.6 liters (9.1 US qts, 7.6 lmp.qts) 3.3 liters (3.5 US qts, 2.9 lmp.qts)	 ATF Type T–IV

SSM (Special Service Mateials)

08826–00090	”Seal Packing 1281,” THREE BOND 1281 or equivalent (FIPG)	
08833–00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	