
980WW–01


8202/WIRING & CLAMP

(0011–) **ENGINE ROOM ILLUST NO. 1 OF 9**

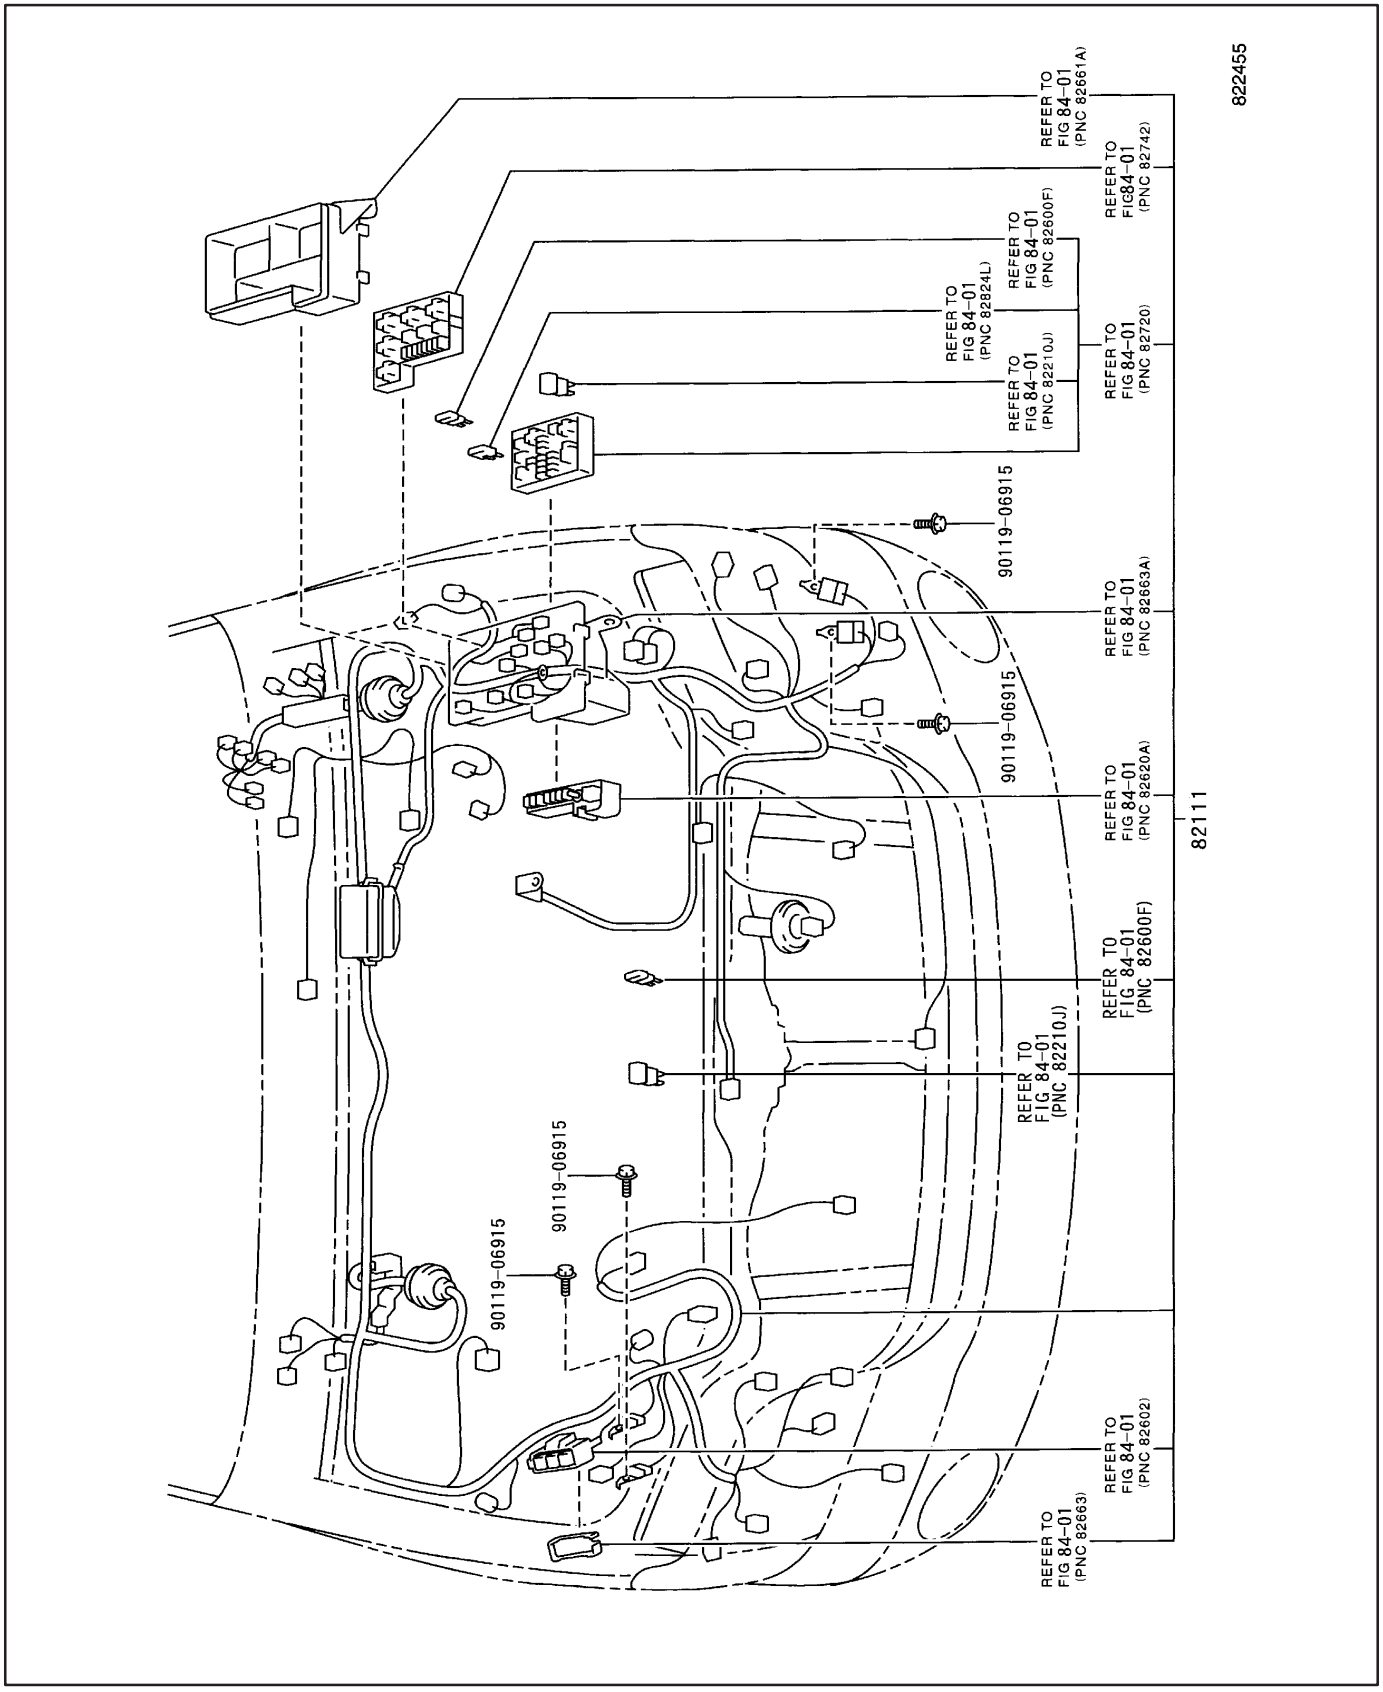


8202/WIRING & CLAMP

(0011–)ACU2# **ENGINE ILLUST NO. 2 OF 9**

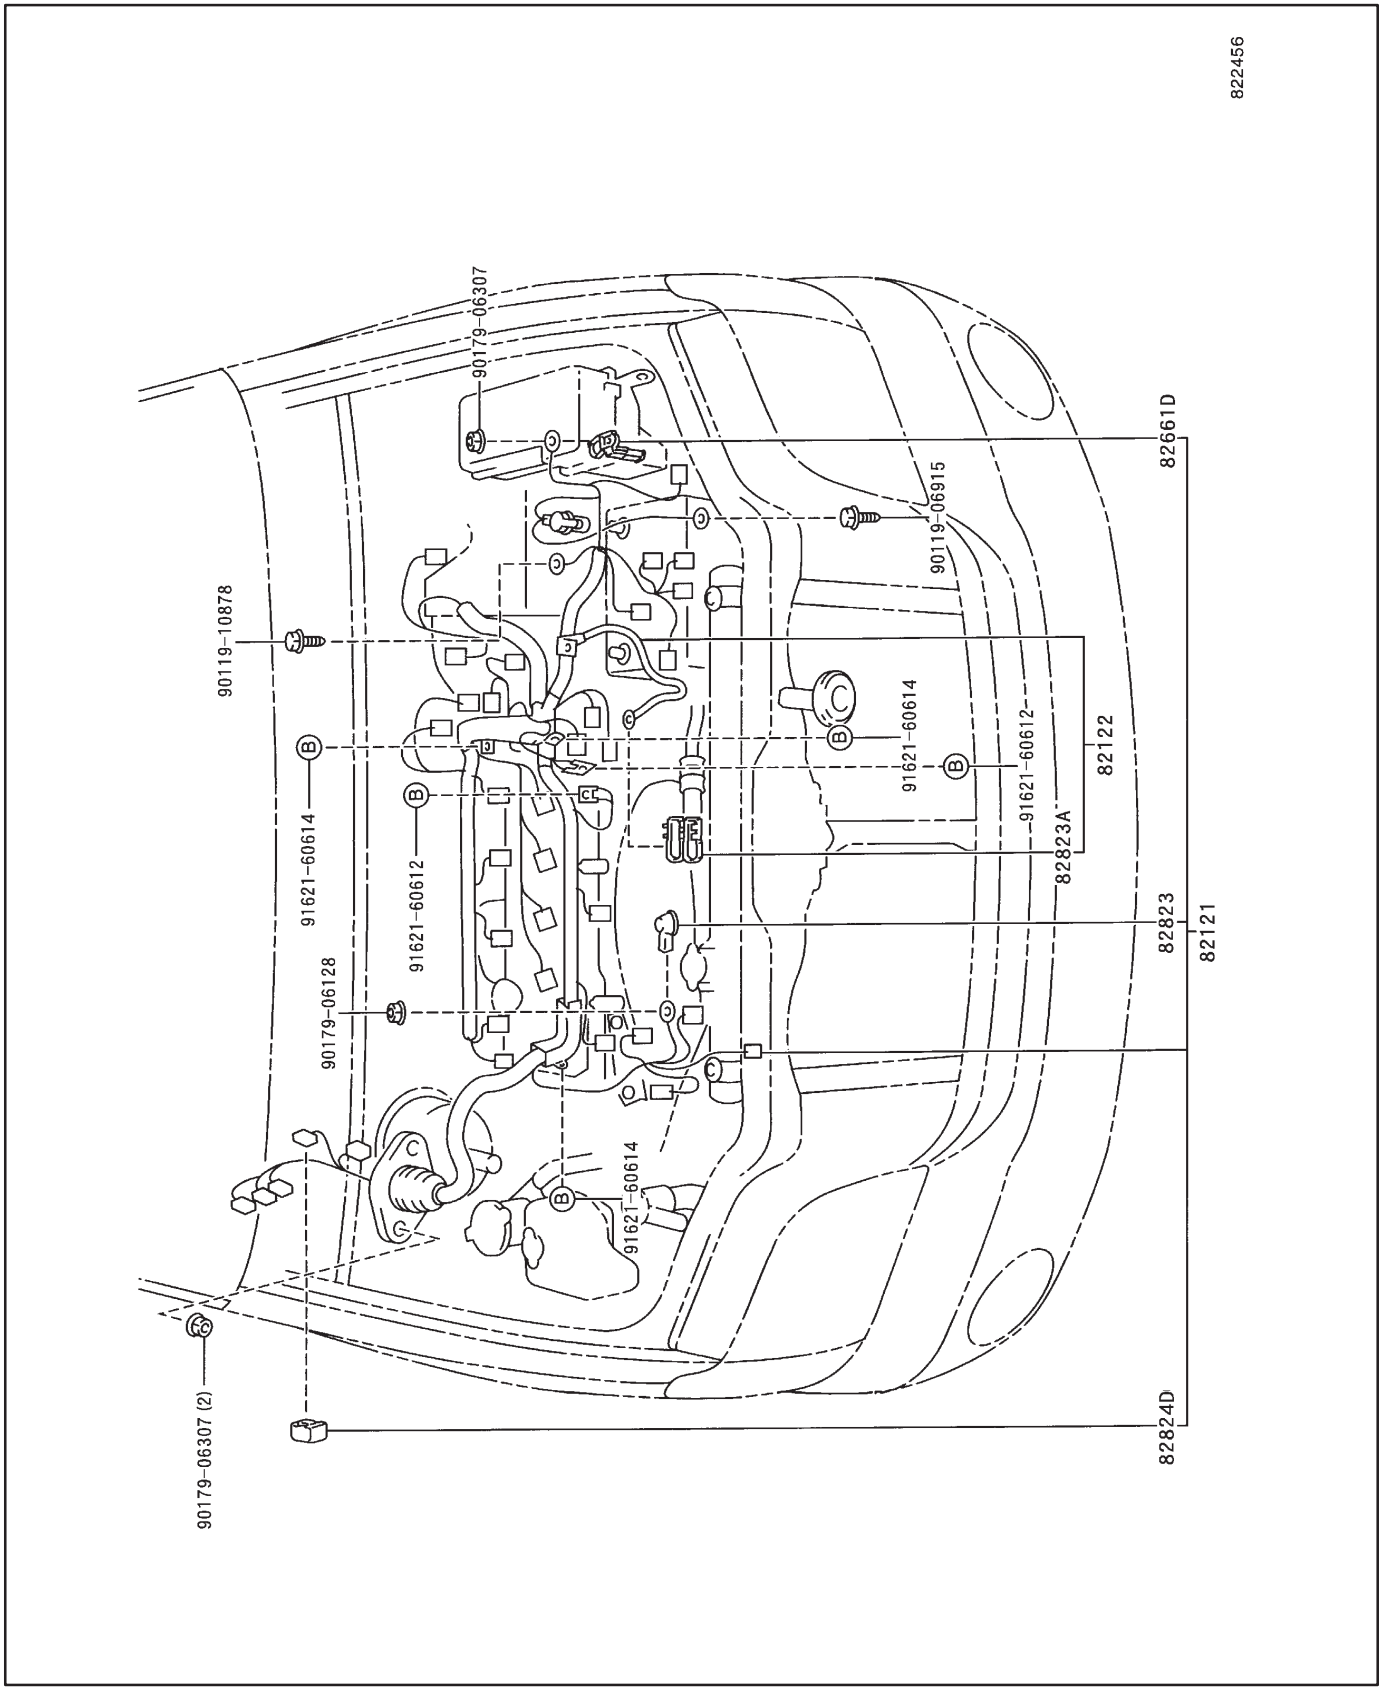


8202/WIRING & CLAMP

(0011–)MCU2# **ENGINE ILLUST NO. 2 OF 9**

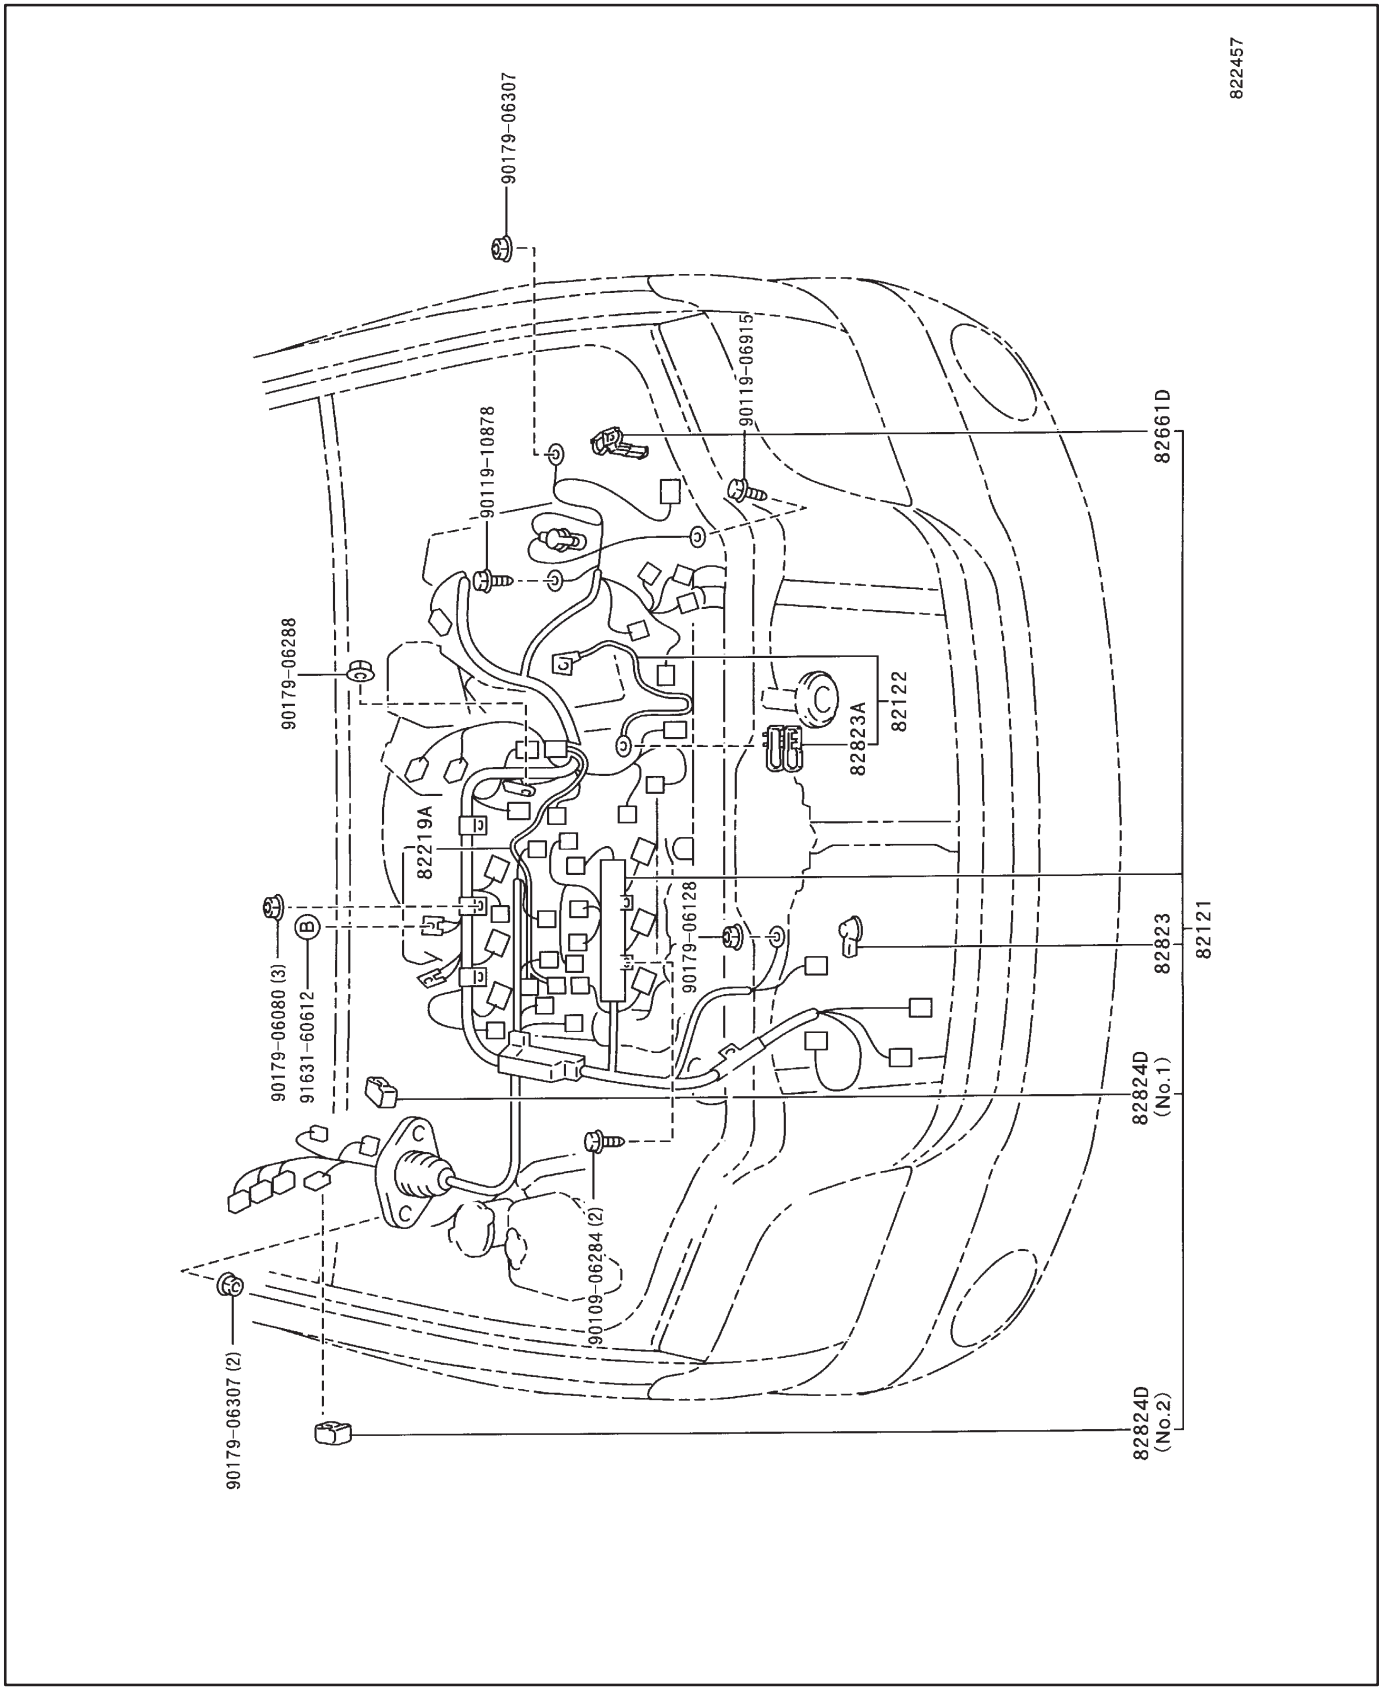


8202/WIRING & CLAMP

(0011–) **COWL ILLUST NO. 3 OF 9**

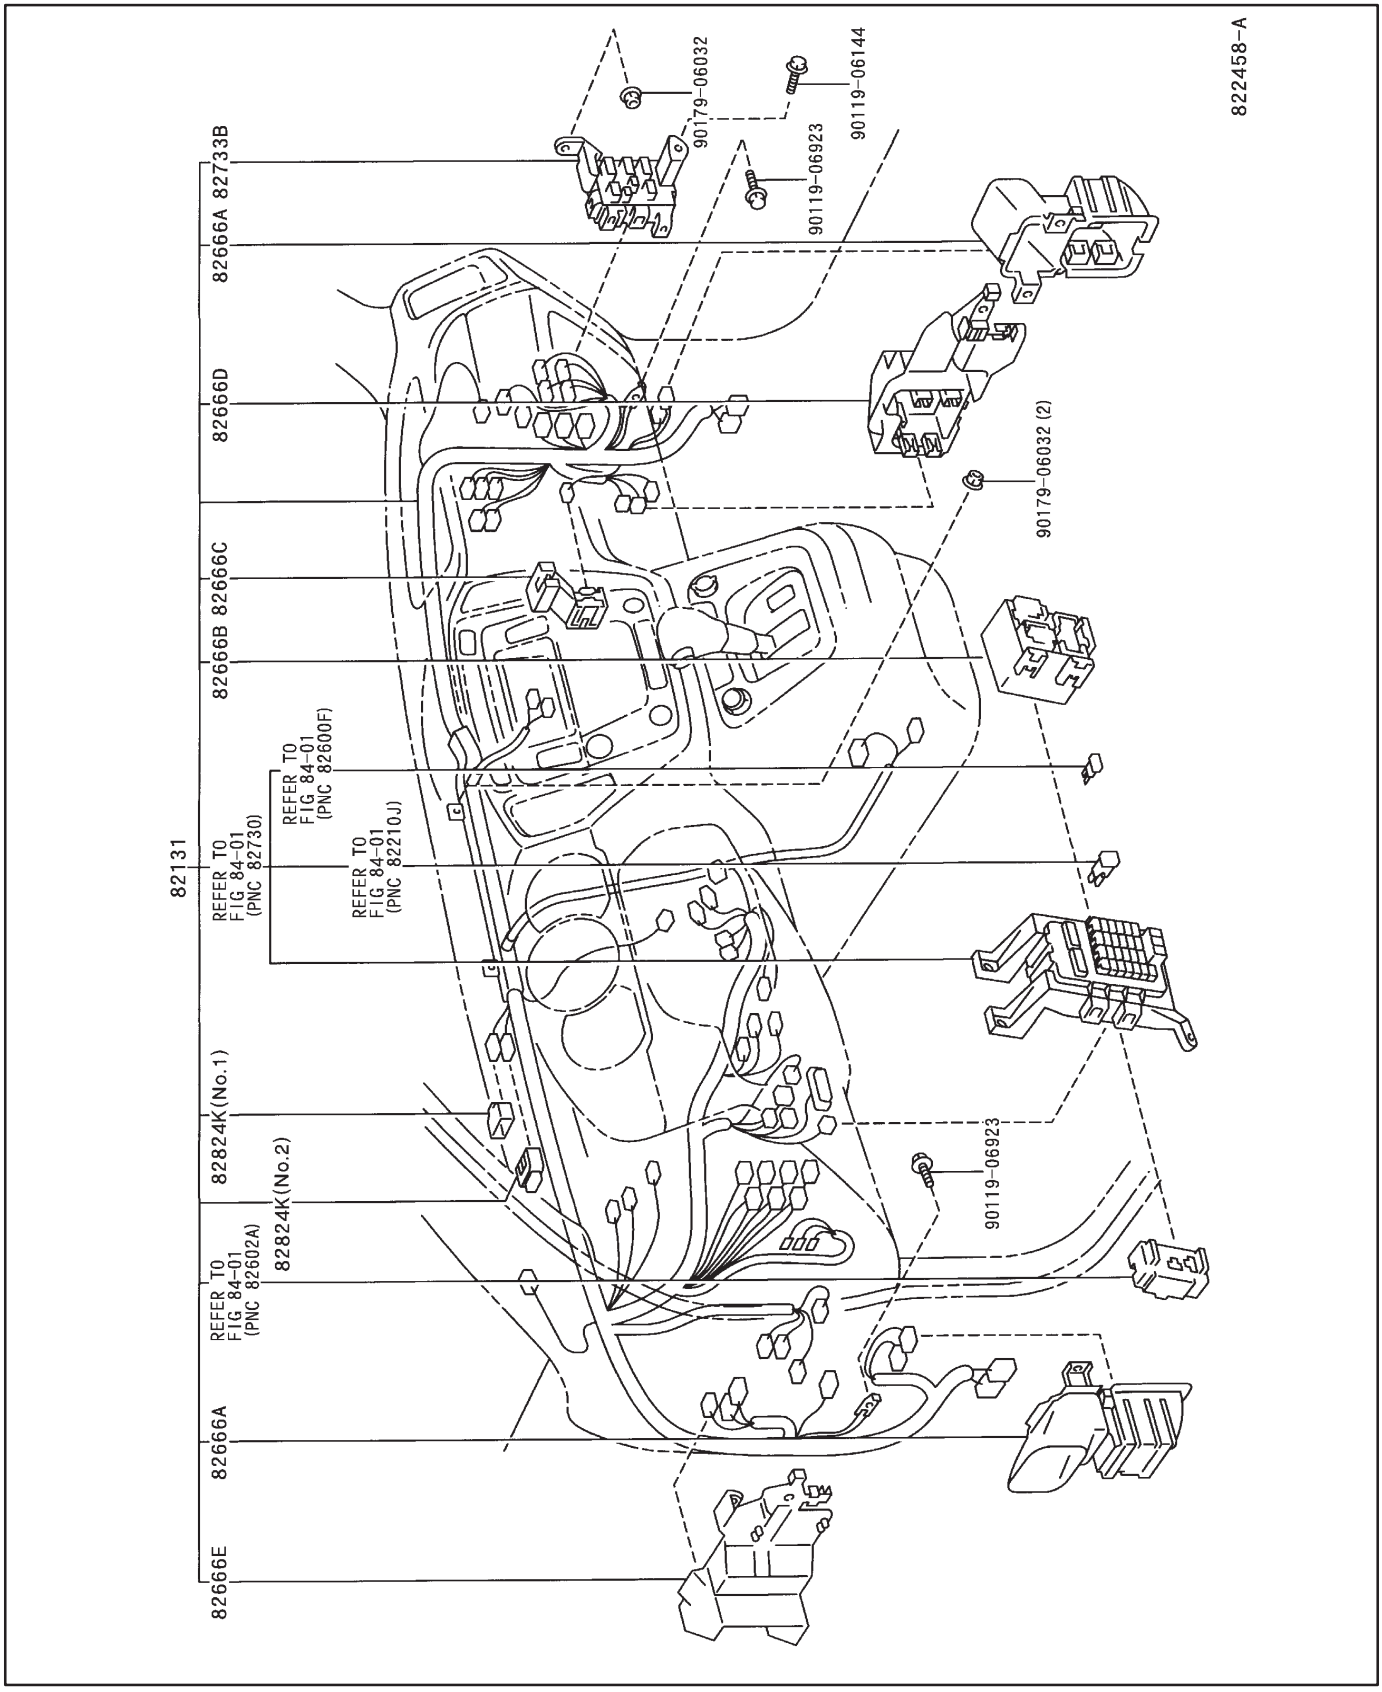


8202/WIRING & CLAMP

(0011–) **INSTRUMENT PANEL ILLUST NO. 4 OF 9**

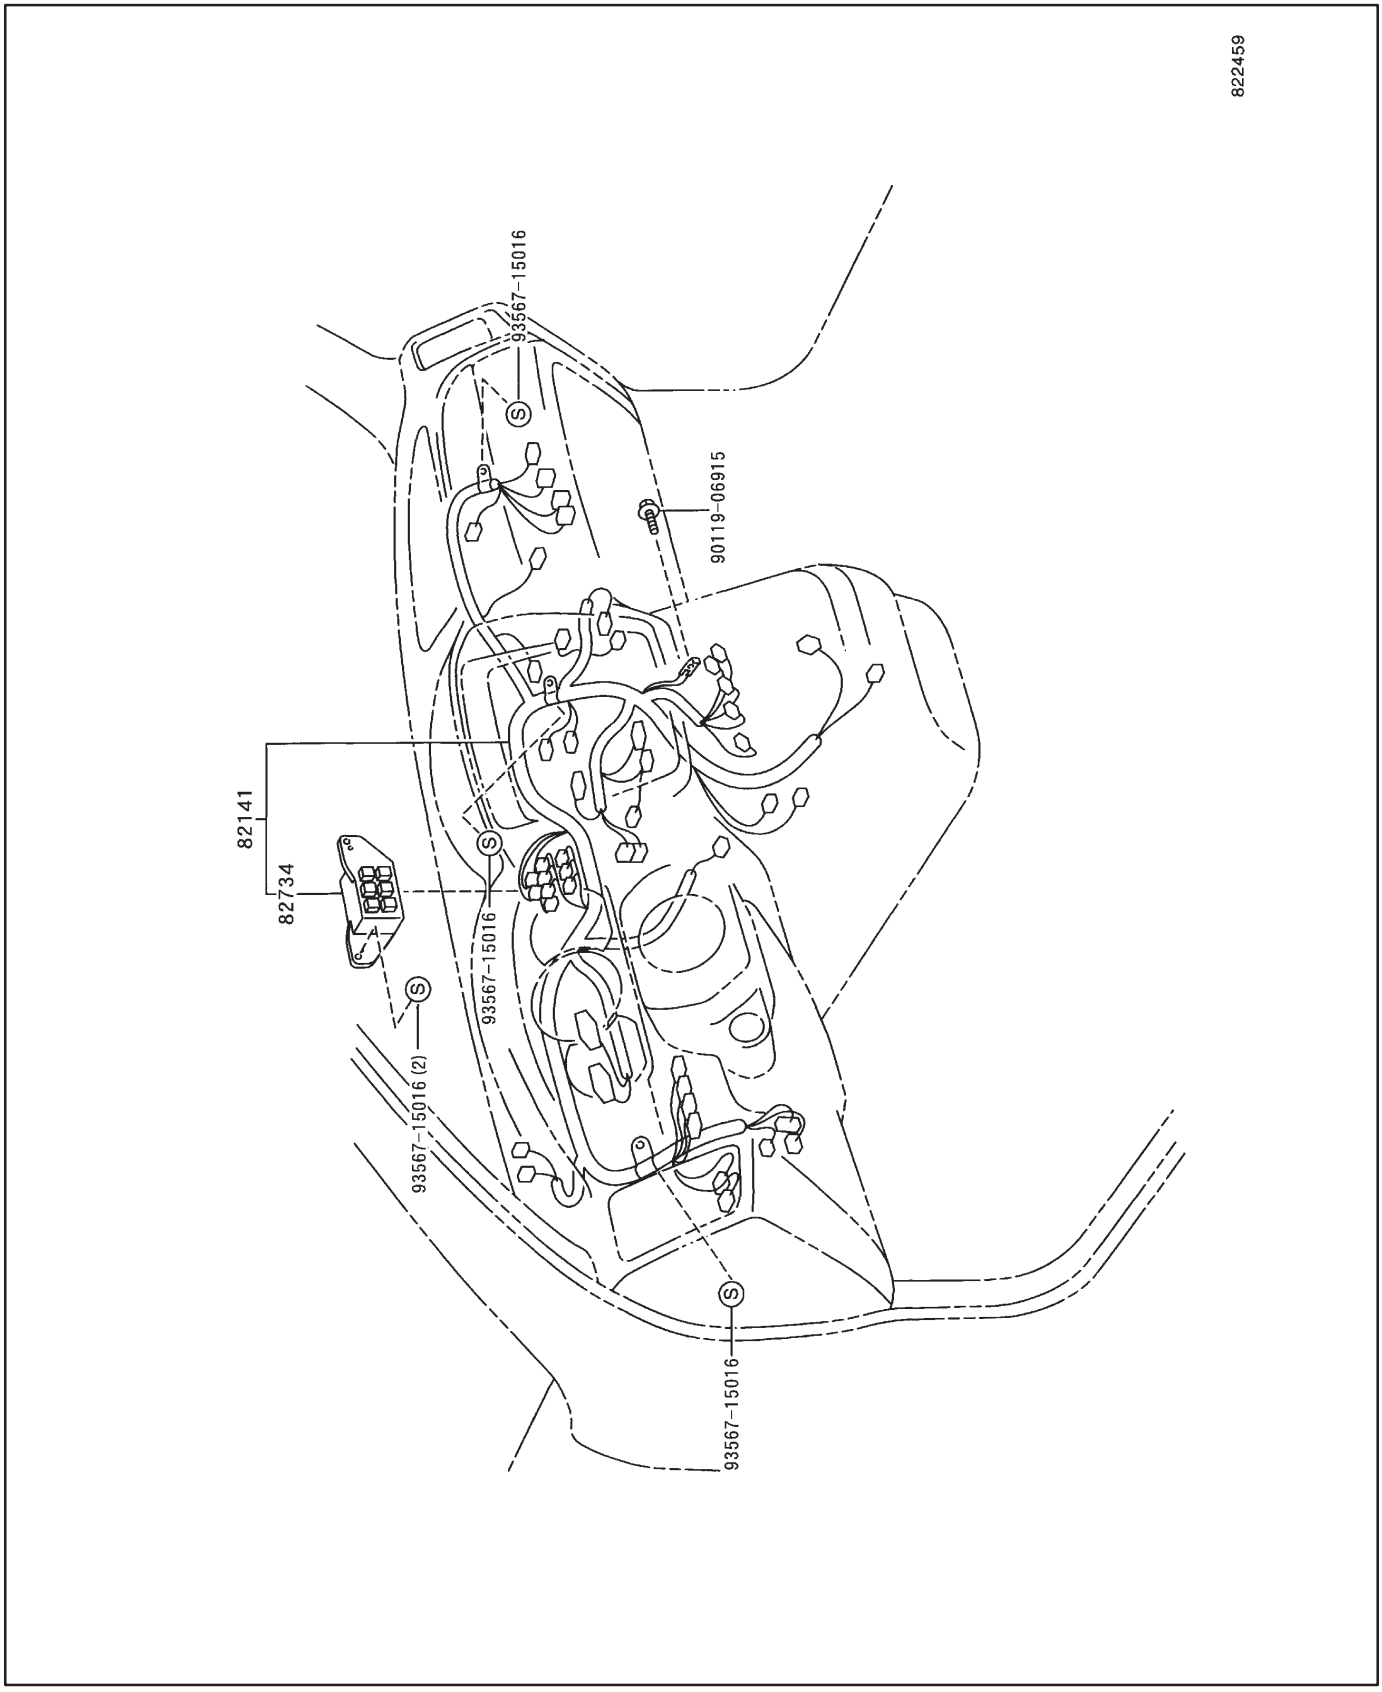


8202/WIRING & CLAMP

(0011–) **FLOOR & ROOF ILLUST NO. 5 OF 9**

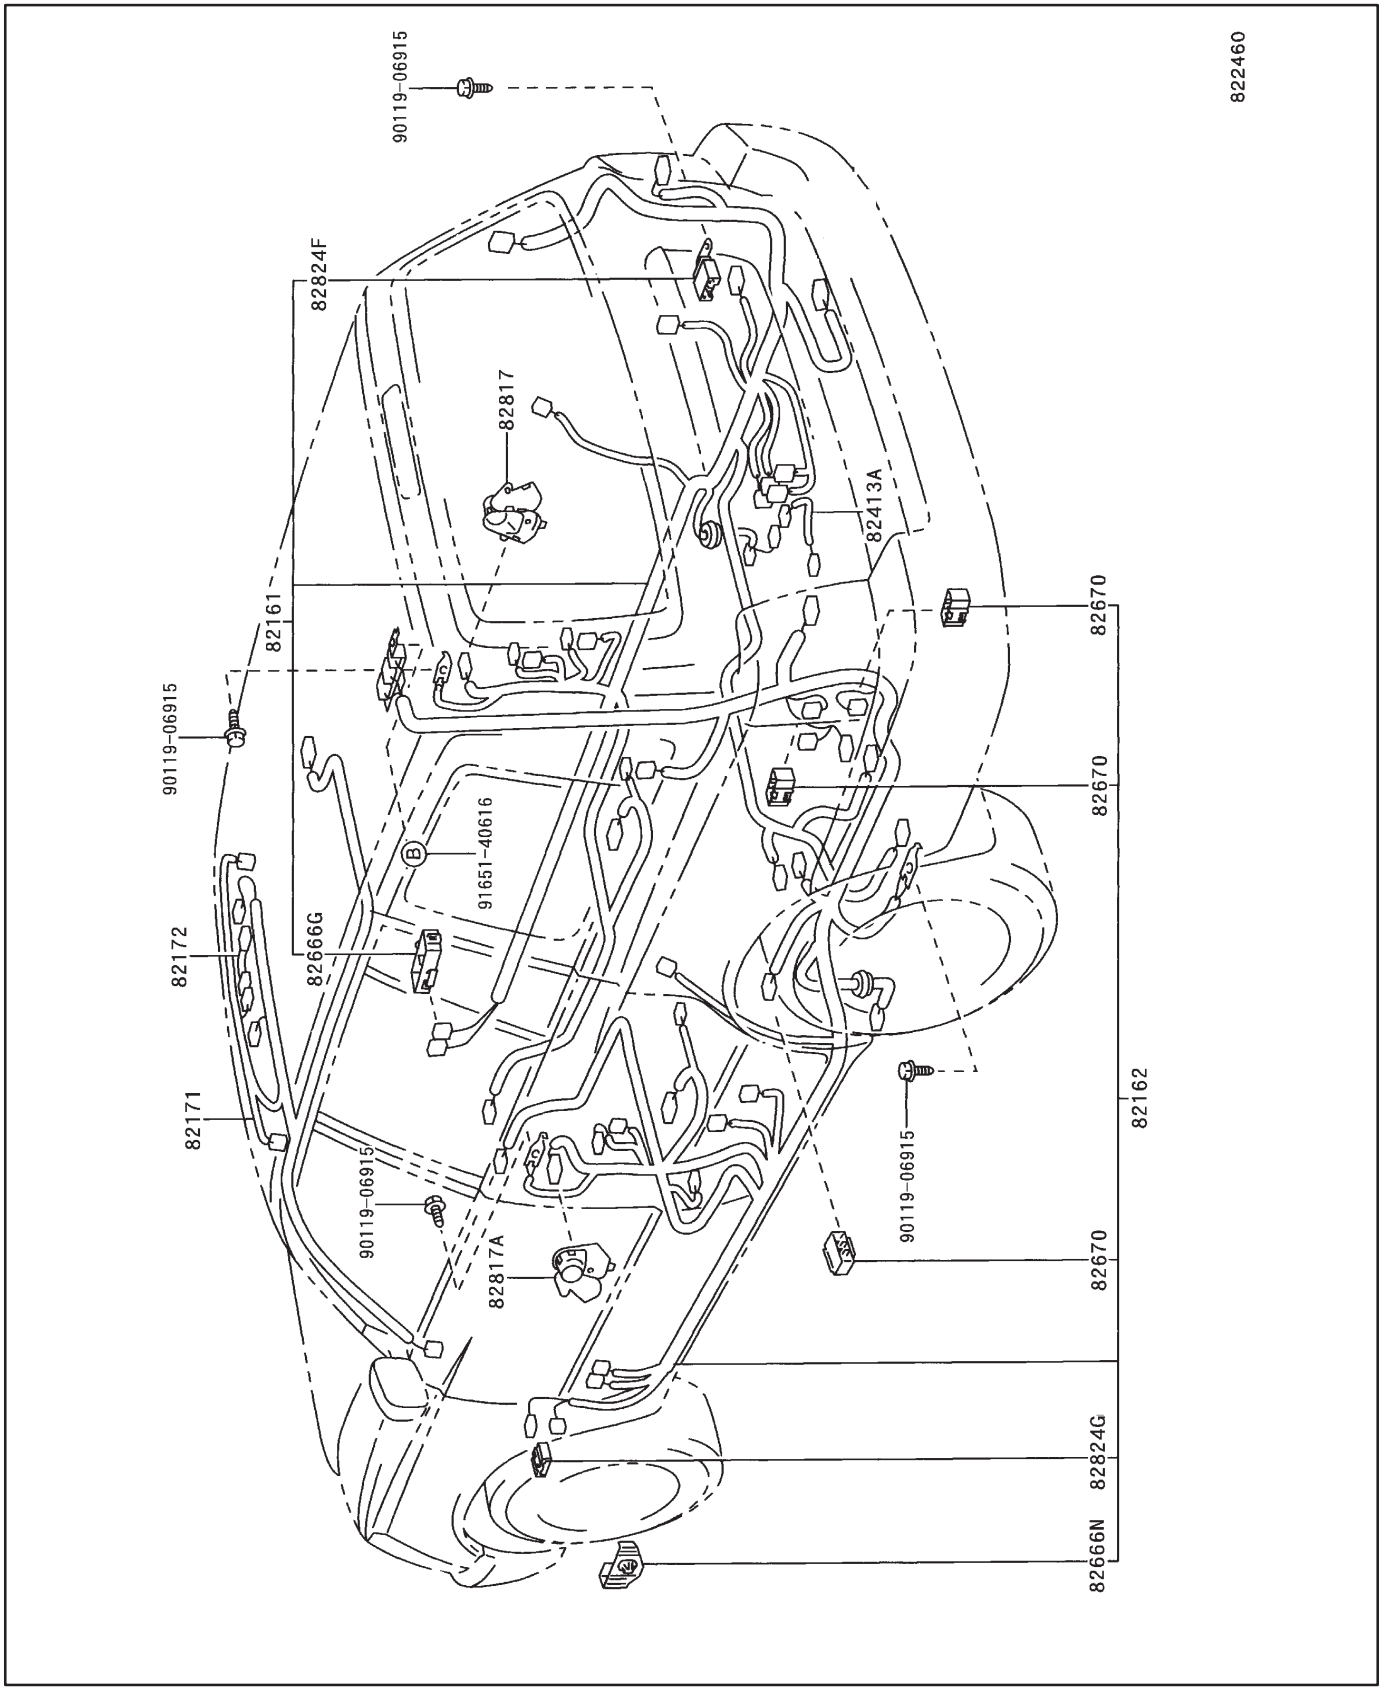


8202/WIRING & CLAMP

(0011–) **DOOR ILLUST NO. 6 OF 9**

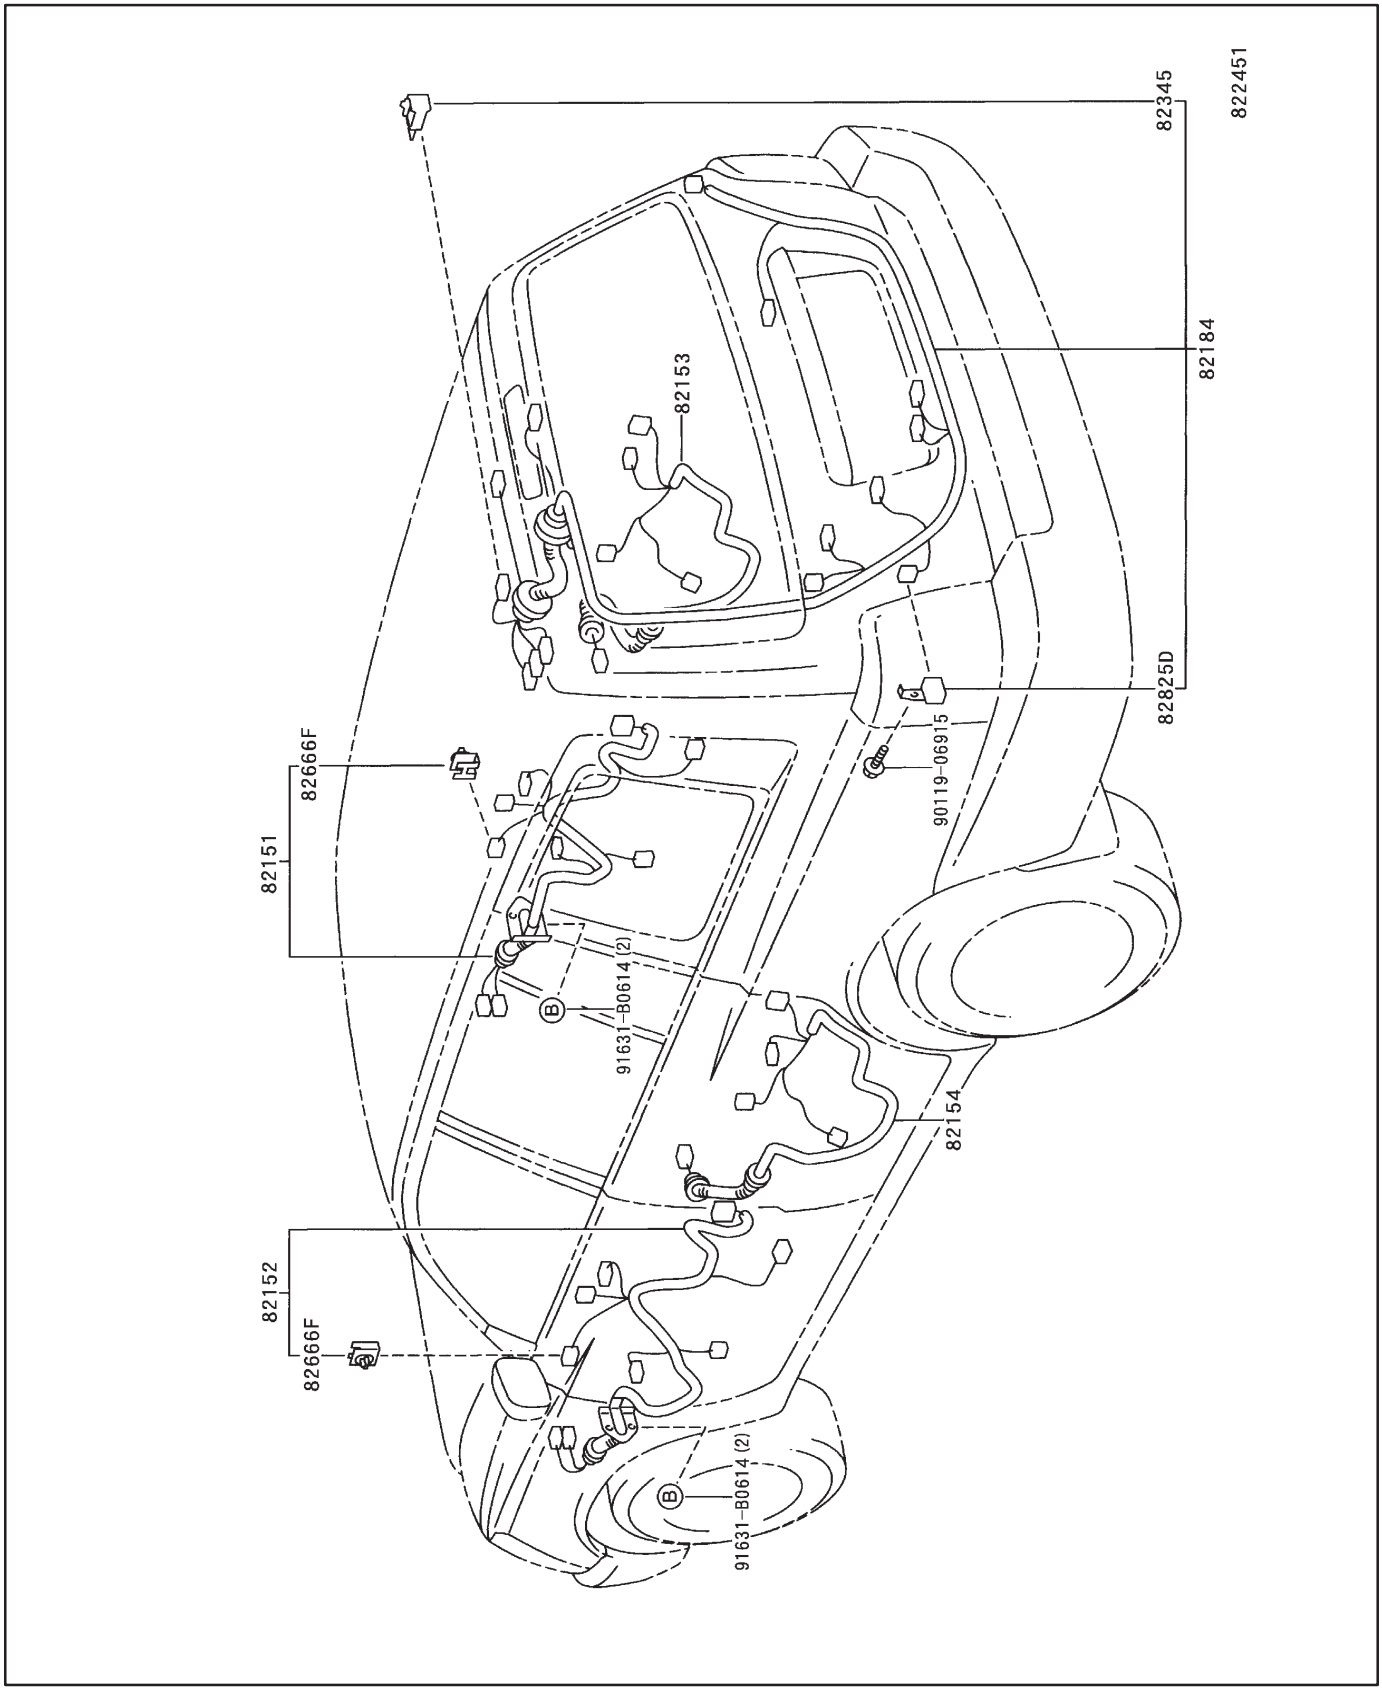


8202/WIRING & CLAMP

(0011–) **SEAT ILLUST NO. 7 OF 9**

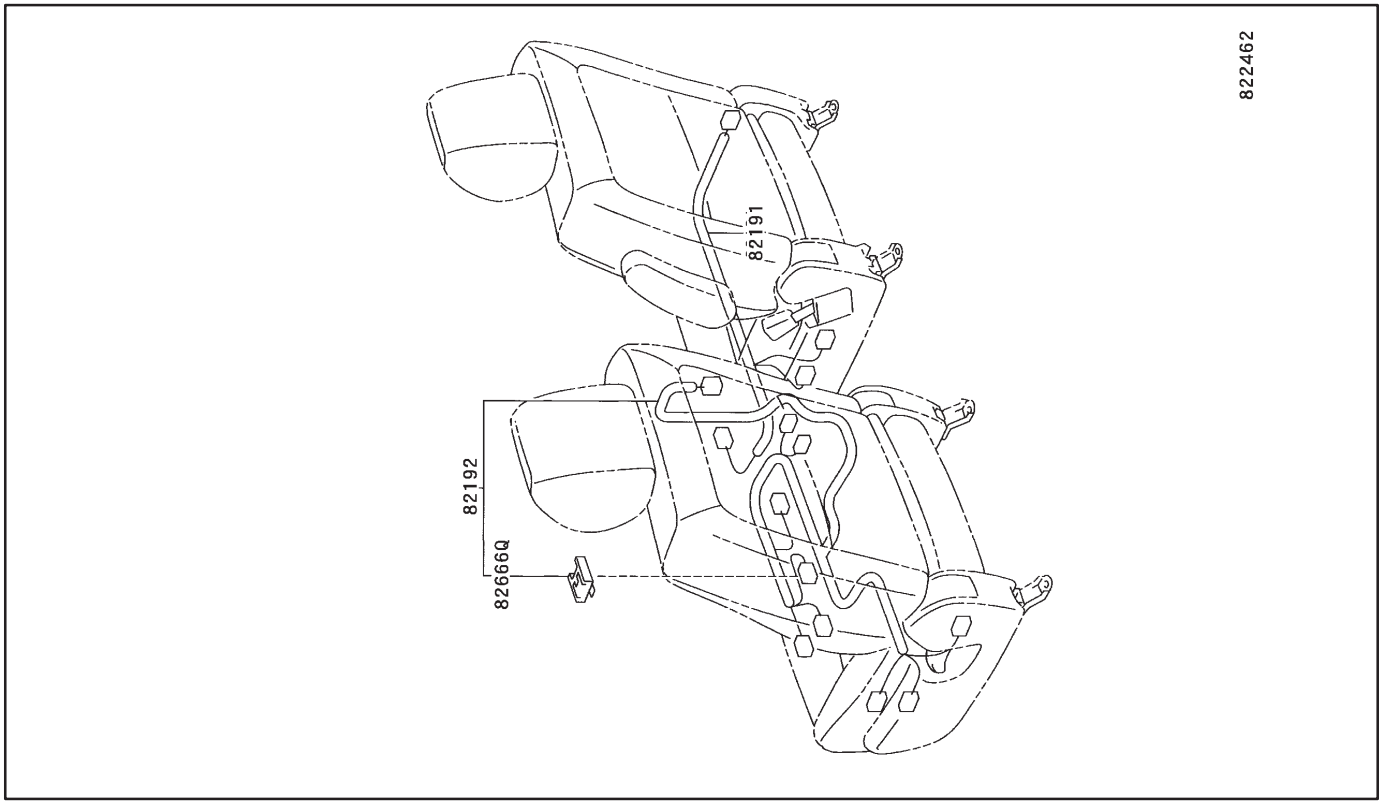

(0011–) **CABLE BOND ILLUST NO. 8 OF 9**

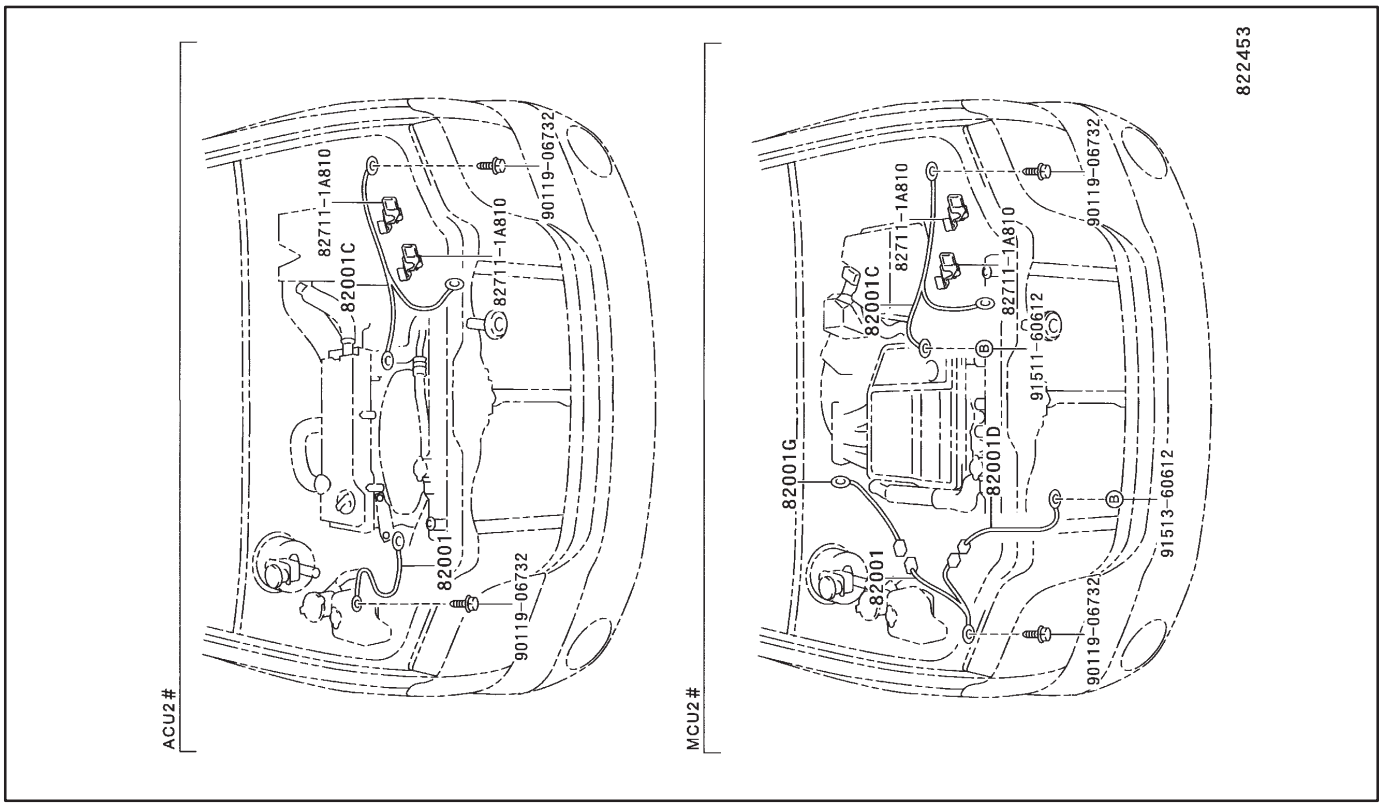

8202/WIRING & CLAMP

(0011–)

CLAMP & BRACKET ILLUST NO. 9 OF 9

