






MANUAL TRANSMISSION/TRANSAXLE




020WL–01

PREPARATION

SST

	09308–00010	Oil Seal Puller	FRONT DIFFERENTIAL OIL SEAL
	09520–01010	Drive Shaft Remover Attachment	FRONT DIFFERENTIAL OIL SEAL
	09520–24010	Differential Side Gear Shaft Puller	FRONT DIFFERENTIAL OIL SEAL
	(09520–32040)	Shocker Set	FRONT DIFFERENTIAL OIL SEAL
	09608–10010	Steering Knuckle Oil Seal Replacer	FRONT DIFFERENTIAL OIL SEAL
	09608–32010	Steering Knuckle Oil Seal Replacer	FRONT DIFFERENTIAL OIL SEAL
	09930–00010	Drive Shaft Nut Chisel	MANUAL TRANSAXLE ASSY
	09950–70010	Handle Set	FRONT DIFFERENTIAL OIL SEAL
	(09951–07200)	Handle 200	FRONT DIFFERENTIAL OIL SEAL

Recomended Tools

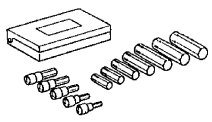	09011–12301	Socket Wrench 30 mm	MANUAL TRANSAXLE ASSY
	09040–00011	Hexagon Wrench Set	MANUAL TRANSAXLE ASSY
	(09043–20060)	Socket Hexagon Wrench 6	MANUAL TRANSAXLE ASSY

Equipment

Dial indicator with magnetic base	
Torque wrench	
Slide calipers	
V–block	
Micrometer	
Dial indicator	
Cylinder gauge	
Feeler gauge	
Precision straight edge	

Lubricant

Item	Capacity	Classification
Manual transaxle oil (w/ Differential oil)	2.5 liters (2.6 US qts, 2.2 lmp. qts)	API GL–4 or GL–5 SAE 75W–90