
TC TERMINAL CIRCUIT

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

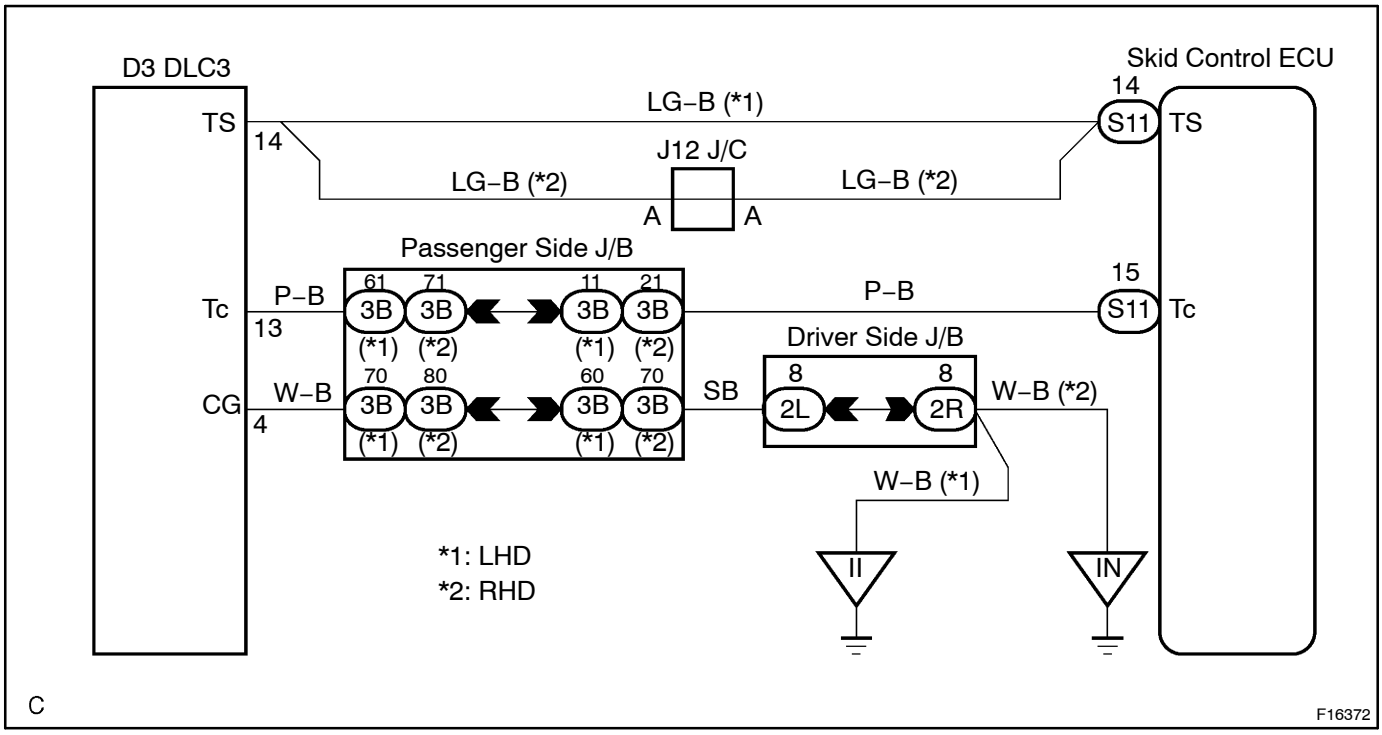

INSPECTION PROCEDURE

1	INSPECT DLC3(TC TERMINAL VOLTAGE)

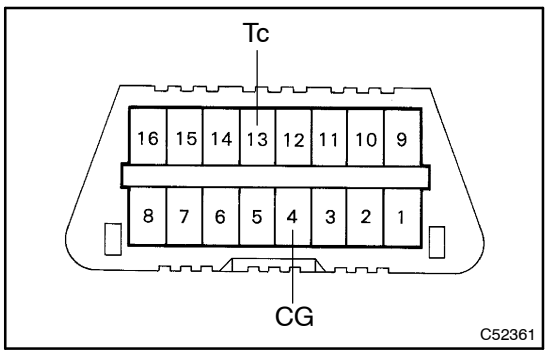

(a) Turn the ignition switch to ON.
(b) Measure voltage between terminals Tc and CG of DLC3.
OK: 10 – 14 V

NG → **Go to step 3**

OK

2	CHECK HARNESS AND CONNECTOR(DLC3 – SKID CONTROL ECU ASSY, DLC3 – BODY GROUND)(See page 01–31)


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY

3	CHECK ABS WARNING LIGHT

SST 09843–18040

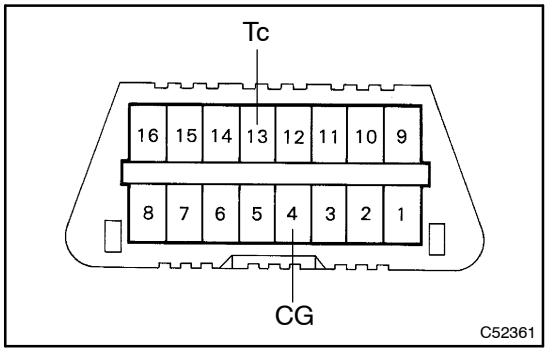

(a) Using SST, connect the terminals Tc and CG of the DLC3.
(b) Check the ABS warning light.
OK: ABS warning light blinking

OK → END

NG

CHECK AND REPLACE SKID CONTROL ECU ASSY