
VSC BUZZER CIRCUIT

CIRCUIT DESCRIPTION

The skid control buzzer sounds during VSC operation.

WIRING DIAGRAM

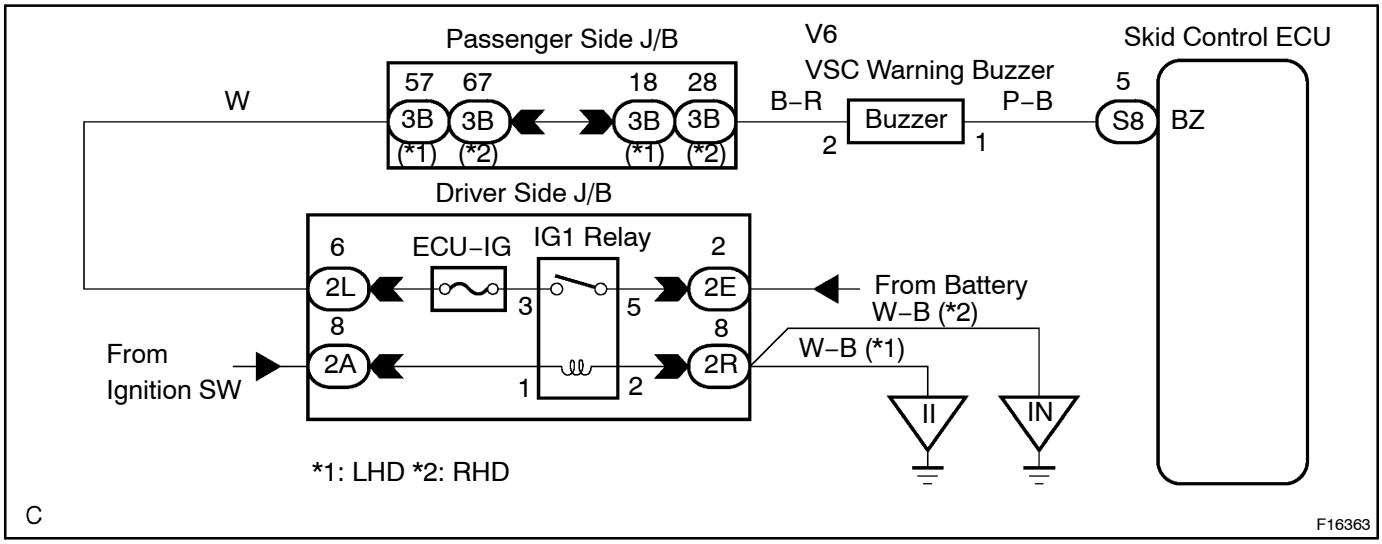

INSPECTION PROCEDURE

HINT:

Start inspection from step 1 in case of using the hand–held tester and start from step 2 in case of not using the hand–held tester.

1	**PERFORM ACTIVE TEST BY HAND–HELD TESTER(SKID CONTROL BUZZER OPERATION)**


(a) Select the item ”VSC/BR WARN BUZ” in the ACTIVE TEST and operate the skid control buzzer on the hand–held tester.

(b) Check that skid control buzzer sounds ”ON” and ”OFF” with the hand–held tester.

OK → **CHECK AND REPLACE SKID CONTROL ECU ASSY**

NG

2	INSPECT SKID CONTROL BUZZER ASSY

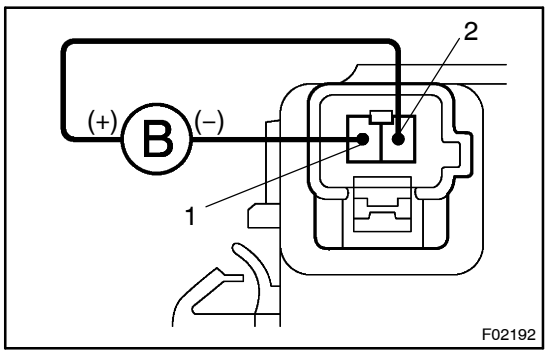

(a) Disconnect the skid control buzzer connector.
(b) Apply battery positive voltage to the terminals 1 and 2 of skid control buzzer connector, check that the skid control buzzer sounds.

NG → REPLACE SKID CONTROL BUZZER ASSY

OK

3	CHECK HARNESS AND CONNECTOR(SKID CONTROL BUZZER – SKID CONTROL ECU ASSY)(See page 01–31)

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY