
TC TERMINAL CIRCUIT

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

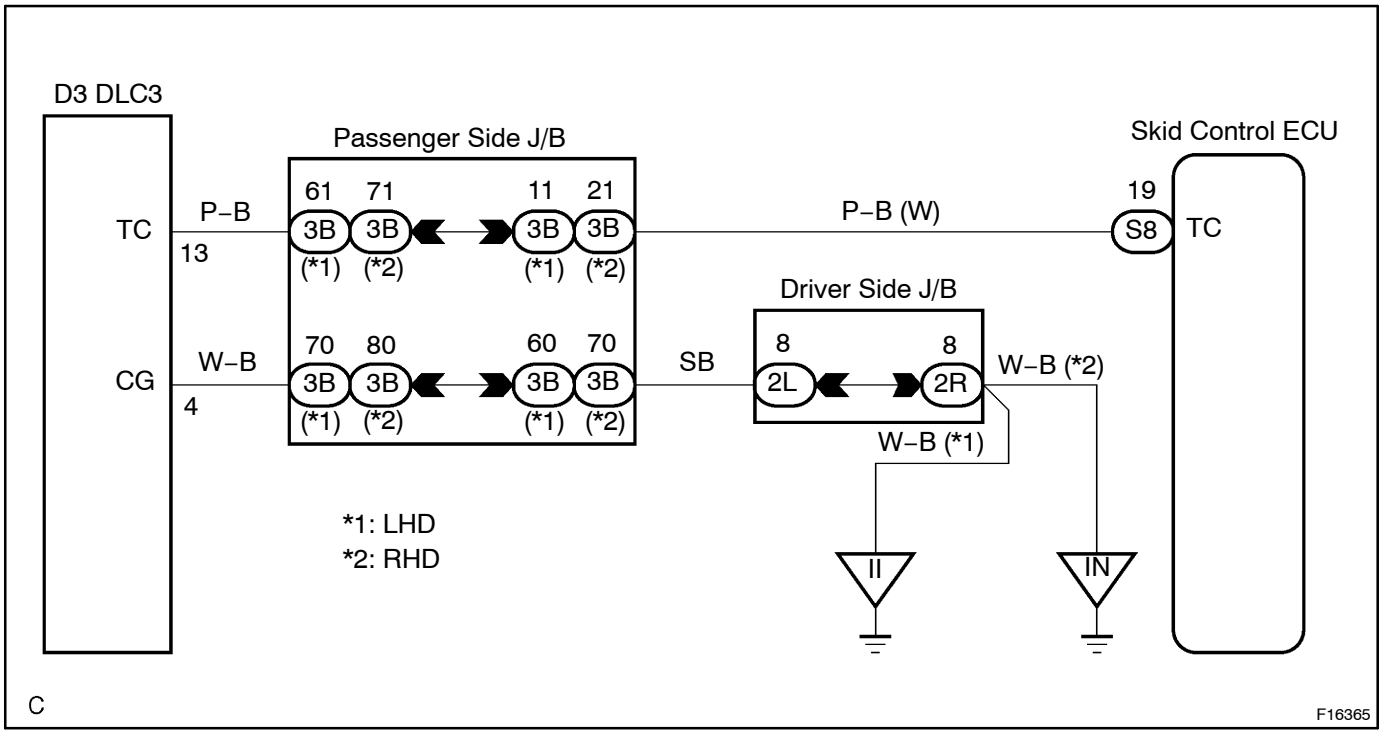

INSPECTION PROCEDURE

1	INSPECT DLC3

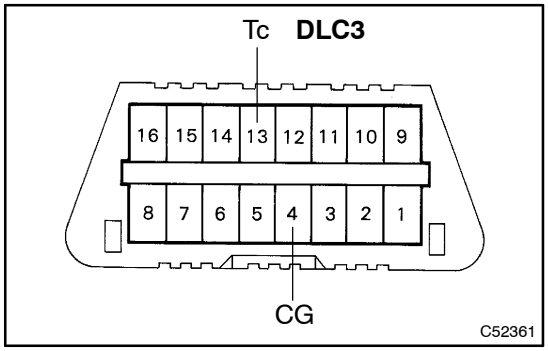

(a) Turn the ignition switch ON.
(b) Measure voltage between terminals Tc and CG of DLC3.
OK: 10 – 14 V

OK	Go to step 3

NG

2	CHECK HARNESS AND CONNECTOR(DLC3 – SKID CONTROL ECU ASSY AND DLC3 – BODY GROUND)(See page 01–31)


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE ABS & TRACTION ACTUATOR ASSY

3	CHECK ABS WARNING LIGHT AND VSC WARNING LIGHT

SST 09843–18040

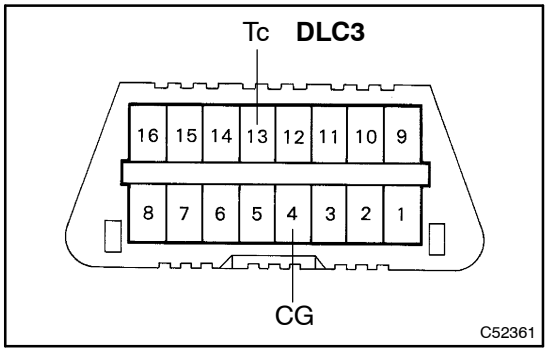

(a) Using SST, connect the terminals Tc and CG of the DLC3.
(b) Check the ABS and VSC warning right.
OK: Warning light blinking

OK → END

NG

CHECK AND REPLACE SKID CONTROL ECU ASSY