
VSC WARNING LIGHT CIRCUIT

CIRCUIT DESCRIPTION

If the ECU stores DTC, the VSC warning light lights on the combination meter.

WIRING DIAGRAM

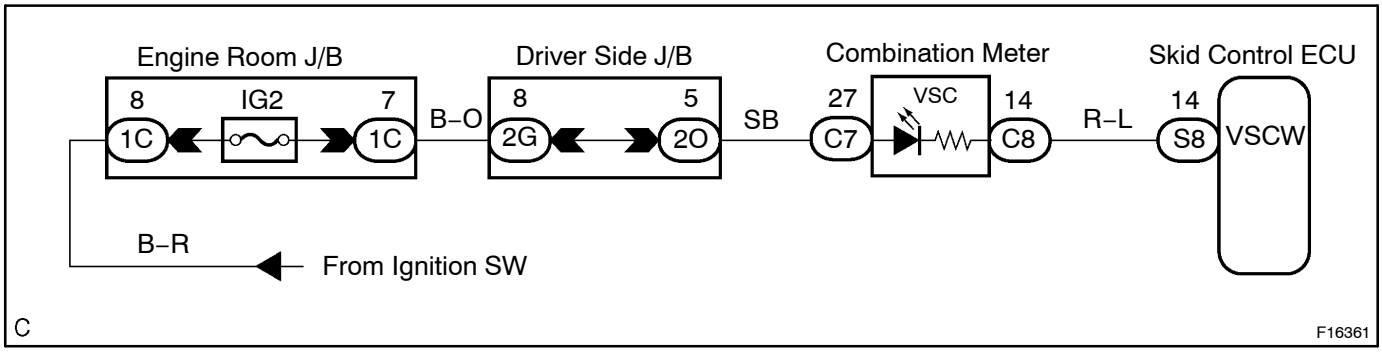

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand–held tester and start from step 2 in case of not using the hand–held tester.

1	**PERFORM ACTIVE TEST BY HAND–HELD TESTER(VSC WARNING LIGHT CIRCUIT)**

(a) Select the item ”VSC WARN LIGHT” in the ACTIVE TEST and operate the VSC warning light on the hand–held tester.

(b) Check that ”ON” and ”OFF” of the VSC warning light can be shown on the combination meter with the hand–held tester.

OK → **CHECK AND REPLACE SKID CONTROL ECU ASSY**

NG

2	**INSPECT VSC WARNING LIGHT**

(a) See combination meter troubleshooting on page 71–1.

NG → **REPAIR OR REPLACE COMBINATION METER ASSY**

OK

3	CHECK HARNESS AND CONNECTOR(SKID CONTORL ECU ASSY – COMBINATION METER)(See page 01–31)

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY