

050TK–02

LOCATION

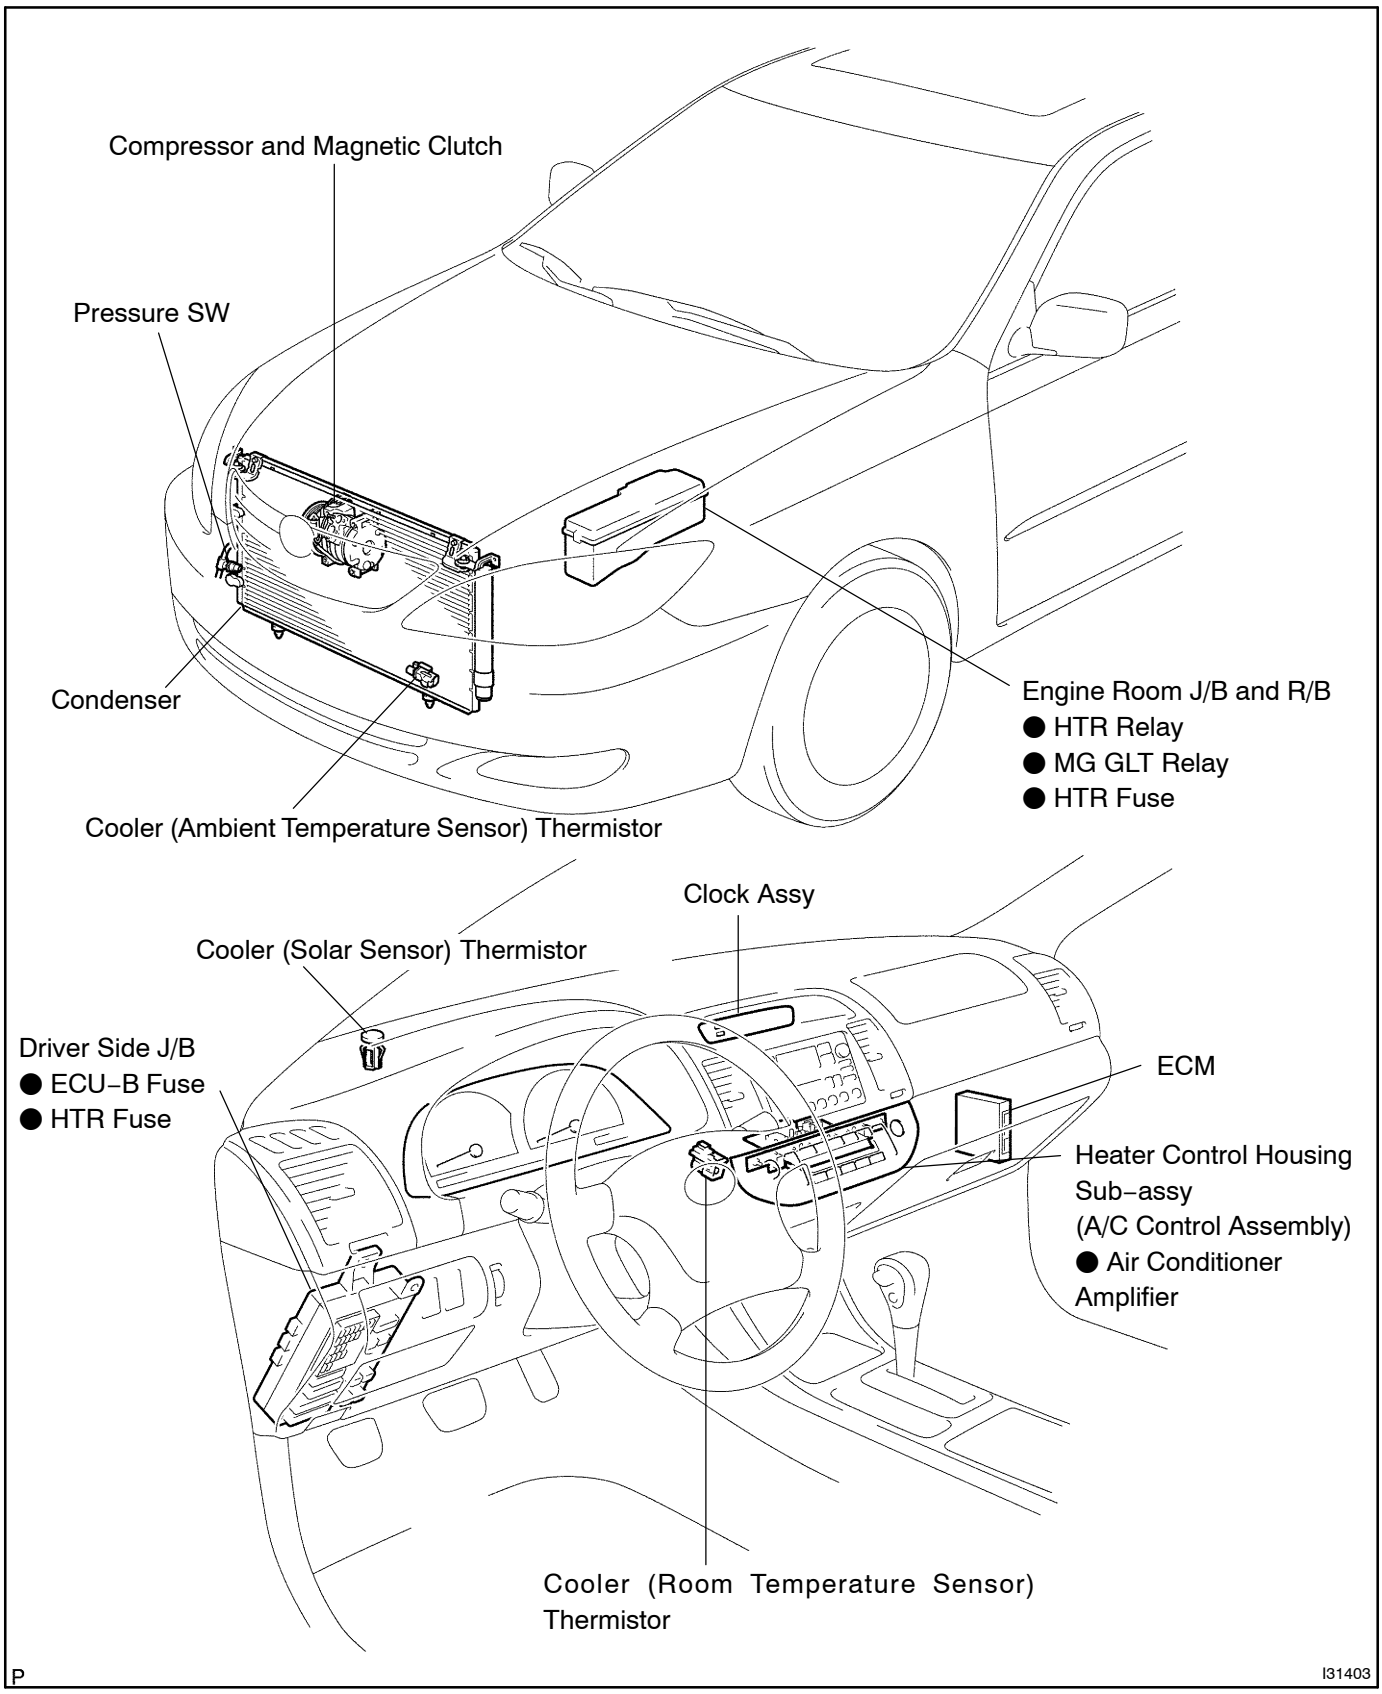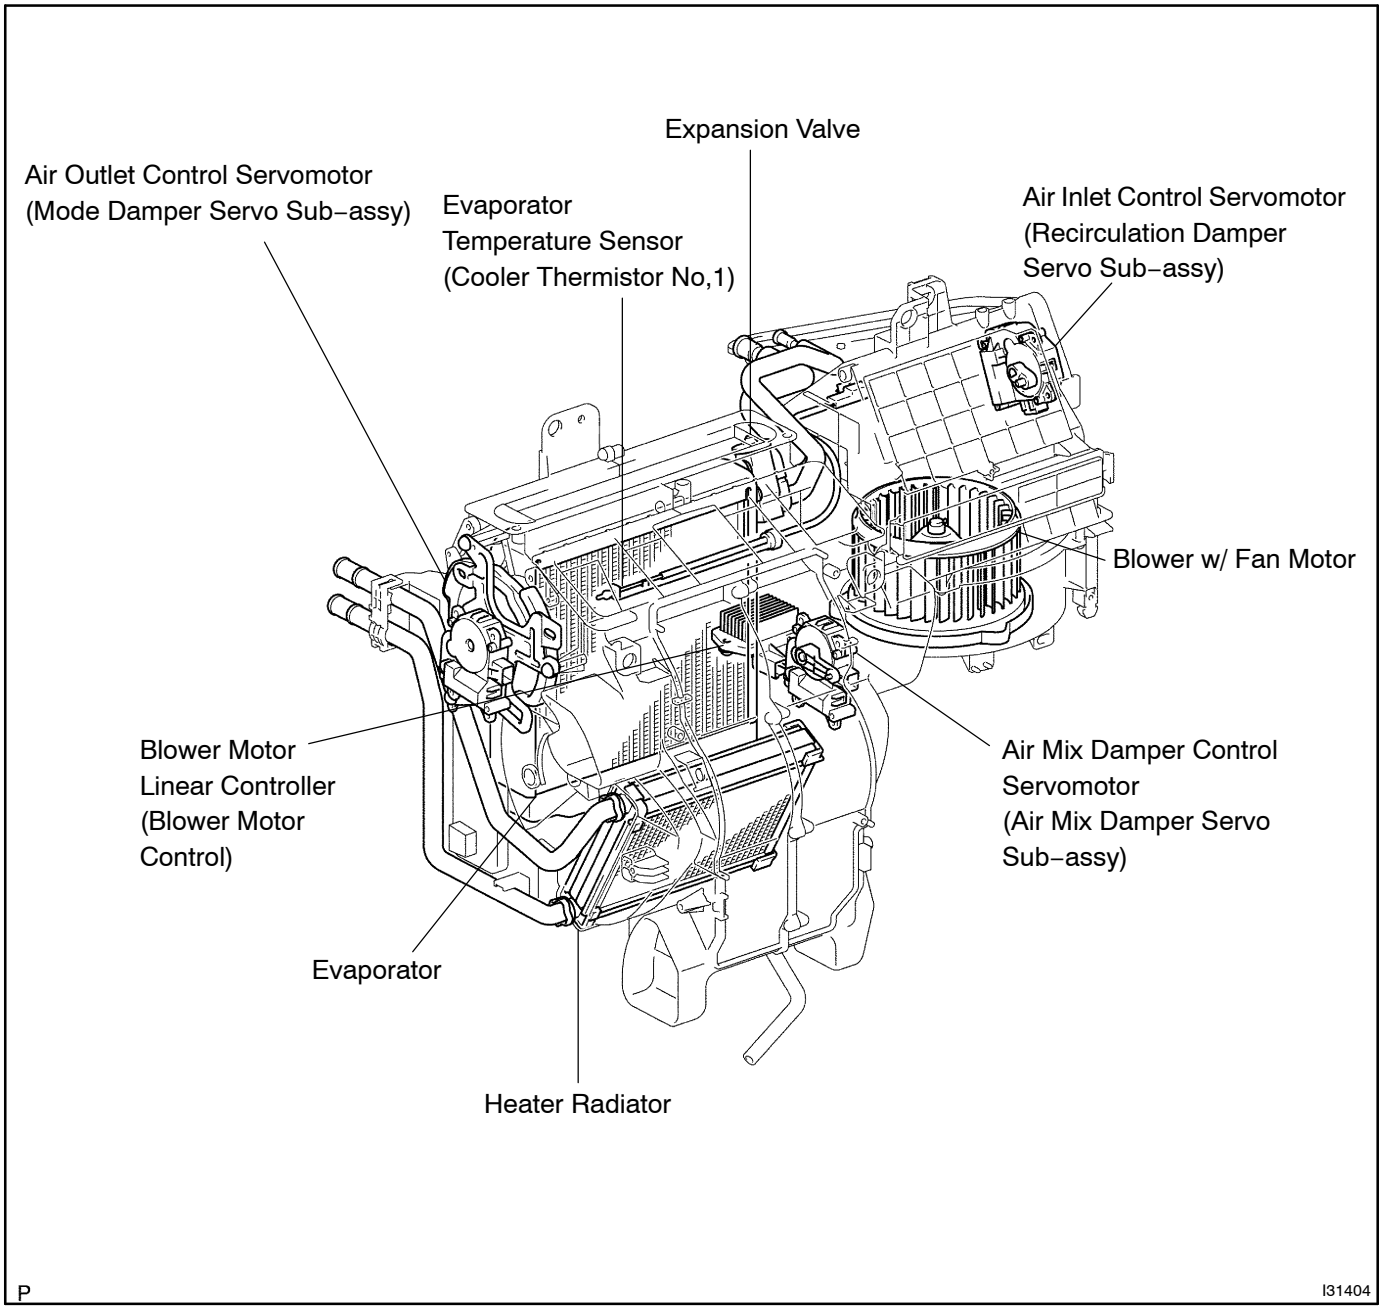


Expansion Valve
Air Outlet Control Servomotor
(Mode Damper Servo Sub–assy)
Evaporator
Temperature Sensor
(Cooler Thermistor No,1)
Air Inlet Control Servomotor
(Recirculation Damper
Servo Sub–assy)
Blower w/ Fan Motor
Blower Motor
Linear Controller
(Blower Motor
Control)
Air Mix Damper Control
Servomotor
(Air Mix Damper Servo
Sub–assy)
Evaporator
Heater Radiator
P
I31404