
BACK–UP POWER SOURCE CIRCUIT

CIRCUIT DESCRIPTION

This is the back–up power source for the air conditioner amplifier. Power is supplied even when the ignition switch is off and is used for diagnostic trouble code memory, etc.

WIRING DIAGRAM

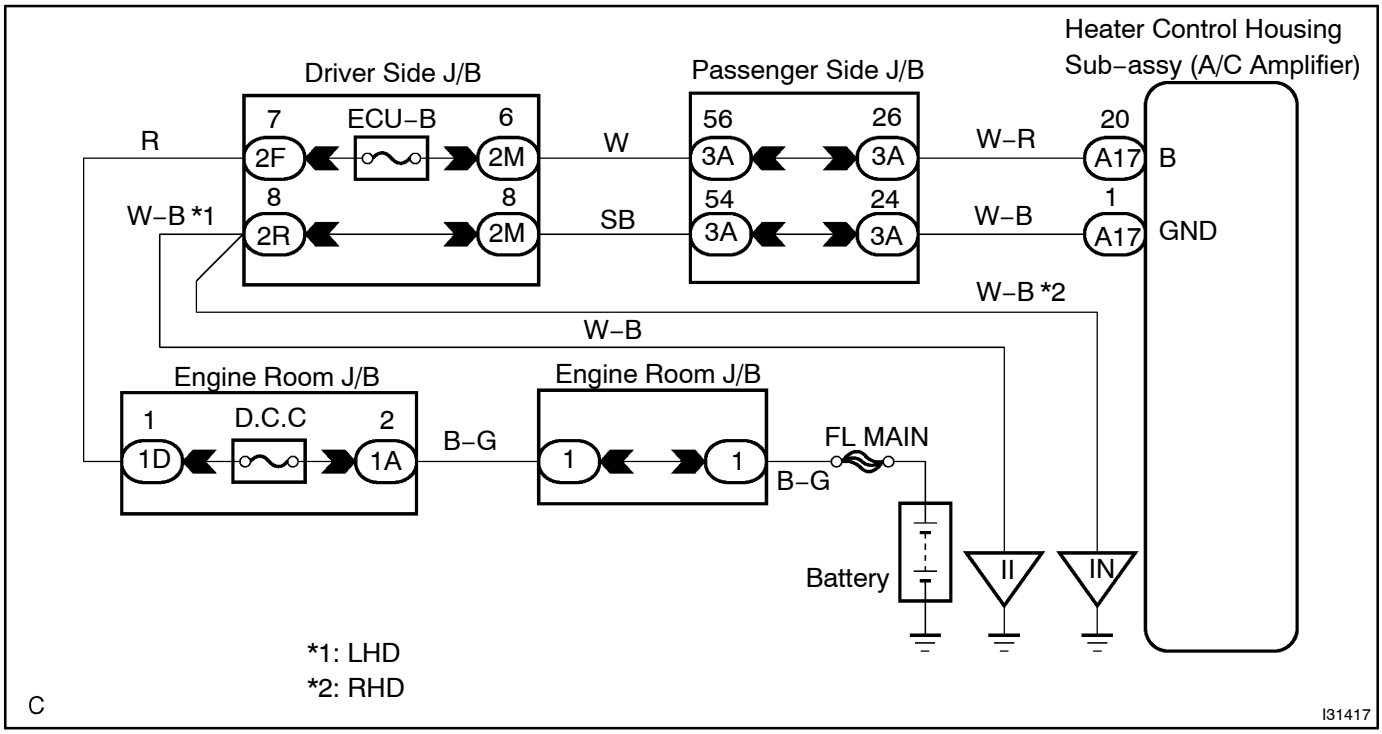

INSPECTION PROCEDURE


1	CHECK FUSE(ECU–B FUSE)

(a) Remove the ECU–B fuse from the engine room J/B.
(b) Check that the continuity exists of ECU–B fuse.

NG → REPLACE FUSE

OK

2	CHECK HARNESS AND CONNECTOR(BETWEEN HEATER CONTROL HOUSING SUB–ASSY AND BATTERY)

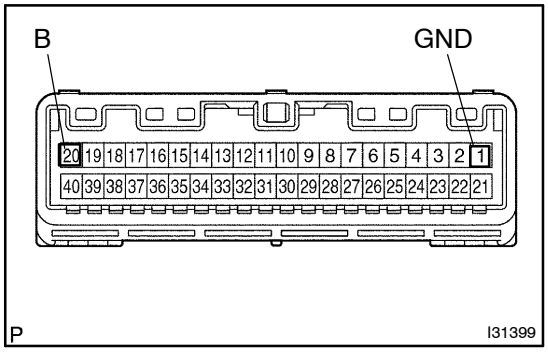

(a) Remove the A/C amplifier with connectors still connected.
(b) Measure voltage between terminals B and GND of A/C amplifier assy.

Voltage: 10 – 14 V

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOM TABLE