
050X3–05

TERMINALS OF ECU

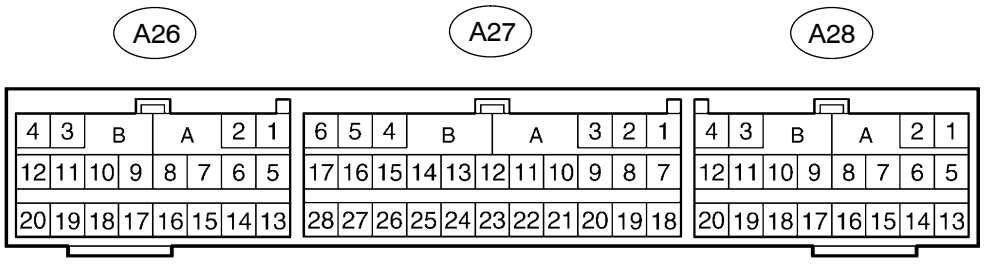

P

H40533

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A27–2	PBEW	Driver Seat Belt Warning
A27–3	LA	SRS Warning Light
A27–5	IG2	Power Source (IGN Fuse)
A27–6	IG1	Power Source (SRS–IG Fuse)
A27–7	P2–	Squib (Passenger, 2 step)
A27–8	P2+	Squib (Passenger, 2 step)
A27–9	+SR	Airbag Front RH Sensor
A27–10	P+	Squib (Passenger)
A27–11	P–	Squib (Passenger)
A27–12	SIL	Diagnosis
A27–13	D–	Squib (Driver)
A27–14	D+	Squib (Driver)
A27–15	+SL	Airbag Sensor Front LH
A27–16	D2+	Squib (Driver, 2nd step)
A27–17	D2–	Squib (Driver, 2nd step)
A27–19	Tc	Diagnosis
A27–20	–SR	Airbag Front RH Sensor
A27–26	–SL	Airbag Sensor Front LH
A27–27	E1	Ground
A27–28	E2	Ground
A26–1	LSP–*1	Seat Position Airbag Sensor
A26–2	LSP+*1	Seat Position Airbag Sensor
A26–5	CSL–	Airbag Sensor Rear (LH)
A26–7	PL–	Squib (Seat Belt Pretensioner, LH)
A26–8	PL+	Squib (Seat Belt Pretensioner, LH)
A26–9	ICL+	Squib (Curtain Shield Airbag Assy, LH)
A26–10	ICL–	Squib (Curtain Shield Airbag Assy, LH)
A26–11	SFL–	Squib (Side, LH)
A26–12	SFL+	Squib (Side, LH)
A26–13	ESCL	Airbag Sensor Rear (LH)
A26–14	VUCL	Airbag Sensor Rear (LH)
A26–15	CSL+	Airbag Sensor Rear (LH)

No.	Symbol	Terminal Name
A26–16	VUPL	Side Airbag Sensor Assy (LH)
A26–18	ESL	Side Airbag Sensor Assy (LH)
A26–19	LBE+*1	Seat Belt Buckle Switch (LH)
A28–3	RSP–*2	Seat Position Airbag Sensor
A28–4	RSP+*2	Seat Position Airbag Sensor
A28–5	SFR+	Squib (Side, RH)
A28–6	SFR–	Squib (Side, RH)
A28–7	ICR–	Squib (Curtain Shield Airbag Assy, RH)
A28–8	ICR+	Squib (Curtain Shield Airbag Assy, RH)
A28–9	PR+	Squib (Seat Belt Pretensioner, RH)
A28–10	PR–	Squib (Seat Belt Pretensioner, RH)
A28–12	CSR–	Airbag Sensor Rear (RH)
A28–14	RBE+*2	Seat Belt Buckle Switch (RH)
A28–15	ESR	Side Airbag Sensor Assy (RH)
A28–17	VUPR	Side Airbag Sensor Assy (RH)
A28–18	CSR+	Airbag Sensor Rear (RH)
A28–19	VUCR	Airbag Sensor Rear (RH)
A28–20	ESCR	Airbag Sensor Rear (RH)

*1: LHD

*2: RHD