

TURNING ON LIGHT SWITCH DOES NOT LIGHT UP NIGHT TIME ILLUMINATION OF RADIO RECEIVER

WIRING DIAGRAM

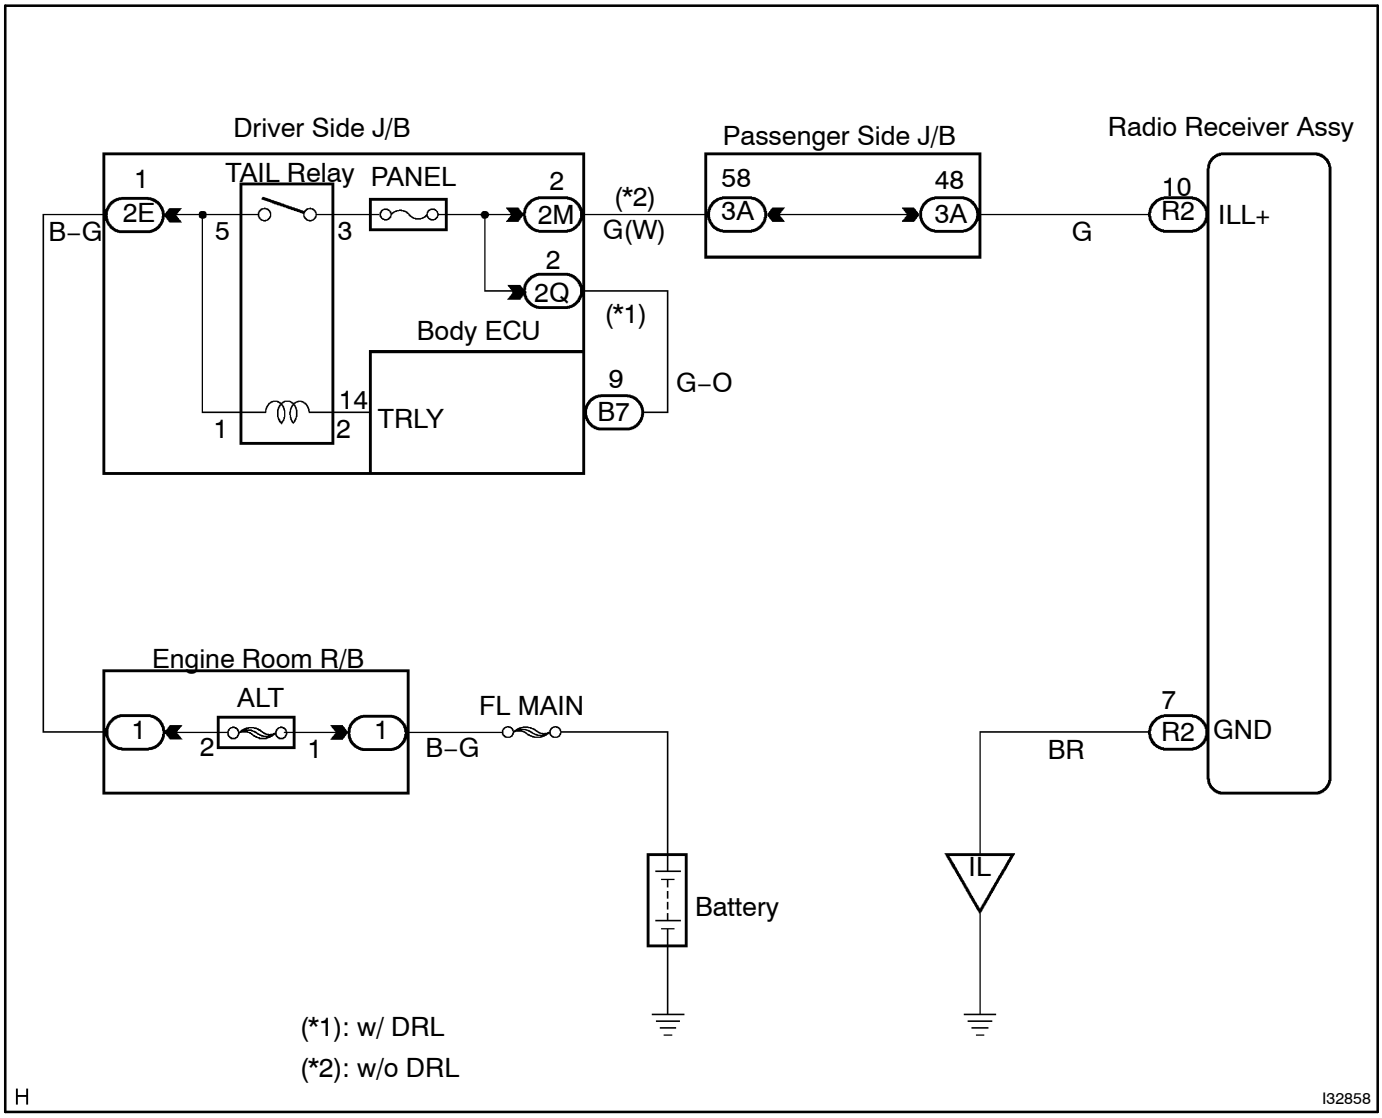

INSPECTION PROCEDURE

1	INSPECT RADIO RECEIVER ASSY(ILL+)

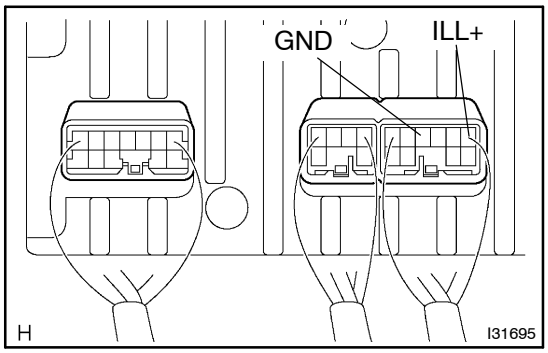

(a) Check that the voltage between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
ILL+ – GND	Light control switch TAIL or HEAD	10 – 14 V

OK → **CHECK AND REPLACE RADIO RECEIVER ASSY**

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR