
ALTHOUGH ”PWR/VOL” SWITCH IS PRESSED, NO SOUND IS HEARD (DISPLAY AND SWITCH OPERATION IS NORMAL)

WIRING DIAGRAM


LHD models:

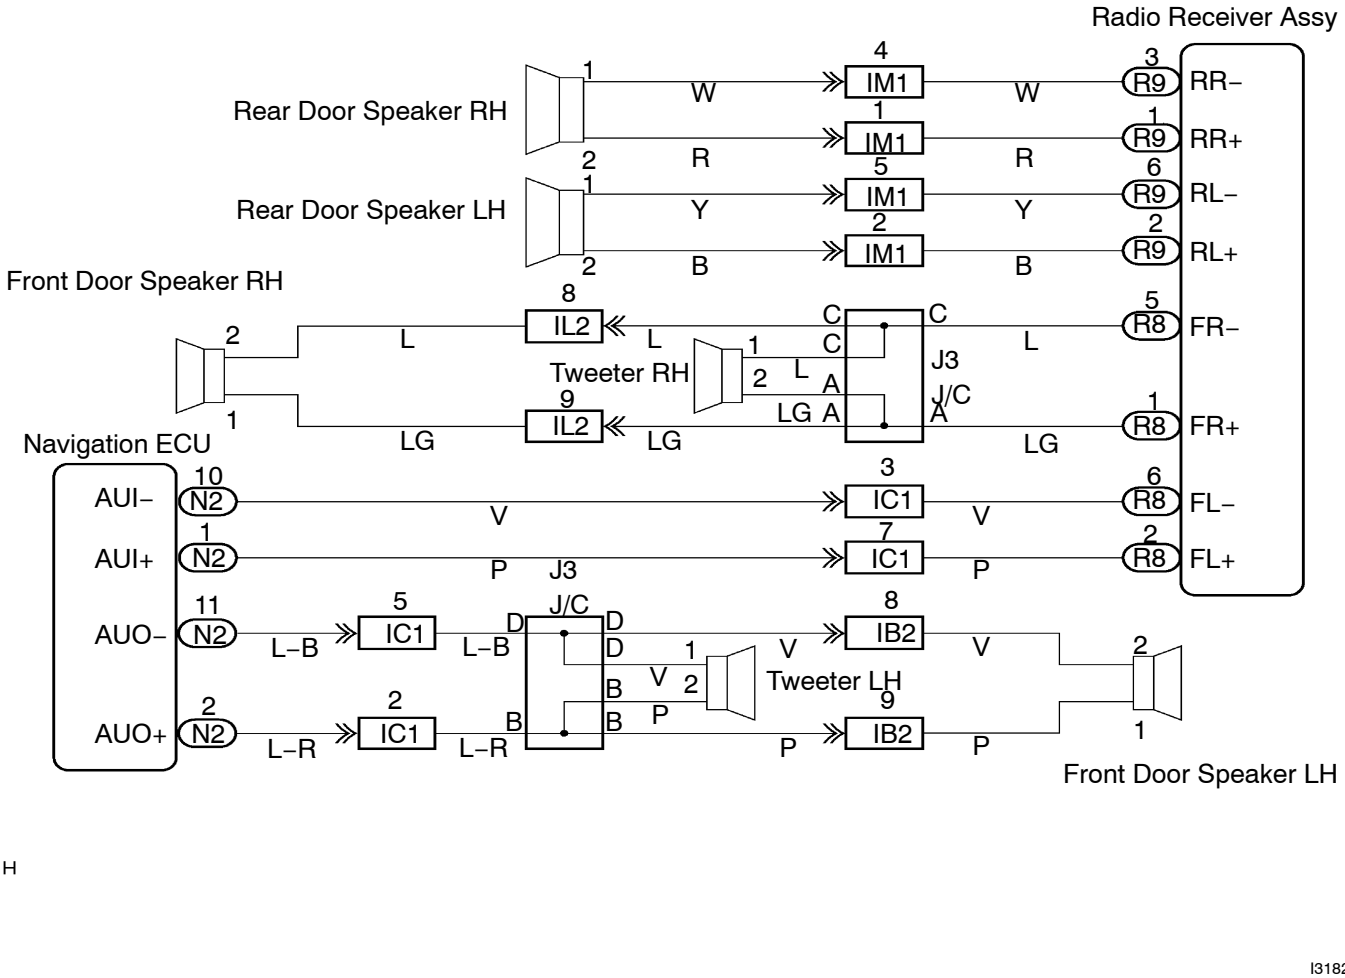

H

I31827

RHD models:

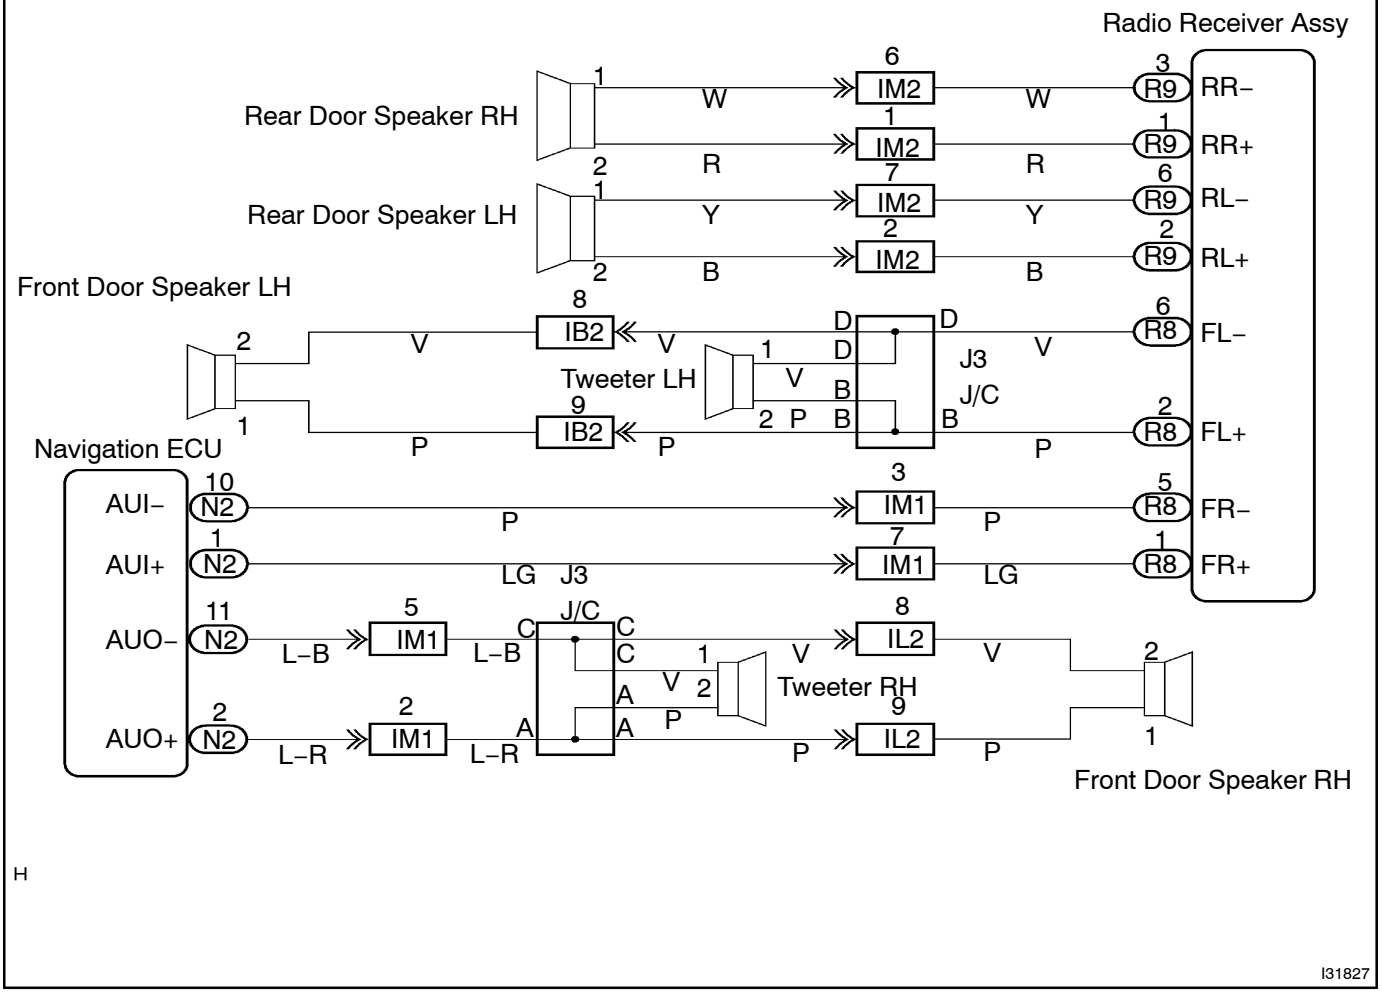


H

I31827

INSPECTION PROCEDURE

1	**INSPECT RADIO RECEIVER ASSY(FL+/–, FR+/–, RL+/–, RR+/–)**

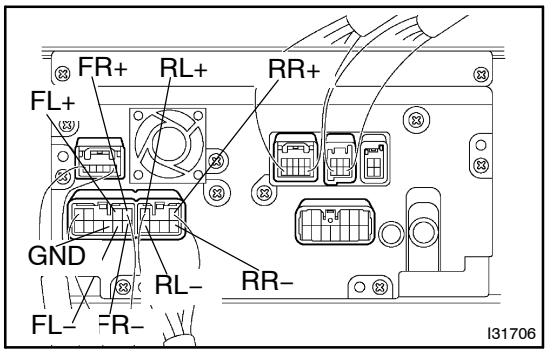

(a) Remove the radio receiver assy with connectors with still connected.

(b) Using an oscilloscope, check signal waveform between terminals FL+/–, FR+/–, RL+/–, RR+/– and GND of radio receiver assy.

Standard:

Terminal	Condition	Specified condition
FL+ ⇔ GND	While voice sound is being produced	A waveform synchronized with sound is output
FL– ⇔ GND	While voice sound is being produced	A waveform synchronized with sound is output
FR+ ⇔ GND	While voice sound is being produced	A waveform synchronized with sound is output
FR– ⇔ GND	While voice sound is being produced	A waveform synchronized with sound is output
RL+ ⇔ GND	While voice sound is being produced	A waveform synchronized with sound is output
RL– ⇔ GND	While voice sound is being produced	A waveform synchronized with sound is output
RR+ ⇔ GND	While voice sound is being produced	A waveform synchronized with sound is output
RR– ⇔ GND	While voice sound is being produced	A waveform synchronized with sound is output

NG → **CHECK AND REPLACE RADIO RECEIVER ASSY**

OK

CHECK AND REPLACE APPLICABLE PART (INCLUDE WIRE HARNESS)